


Instruction Manual  
P1962E/EN  
2012-03

# Cleco®

## 47BC/BT...B...

Cordless EC Tool

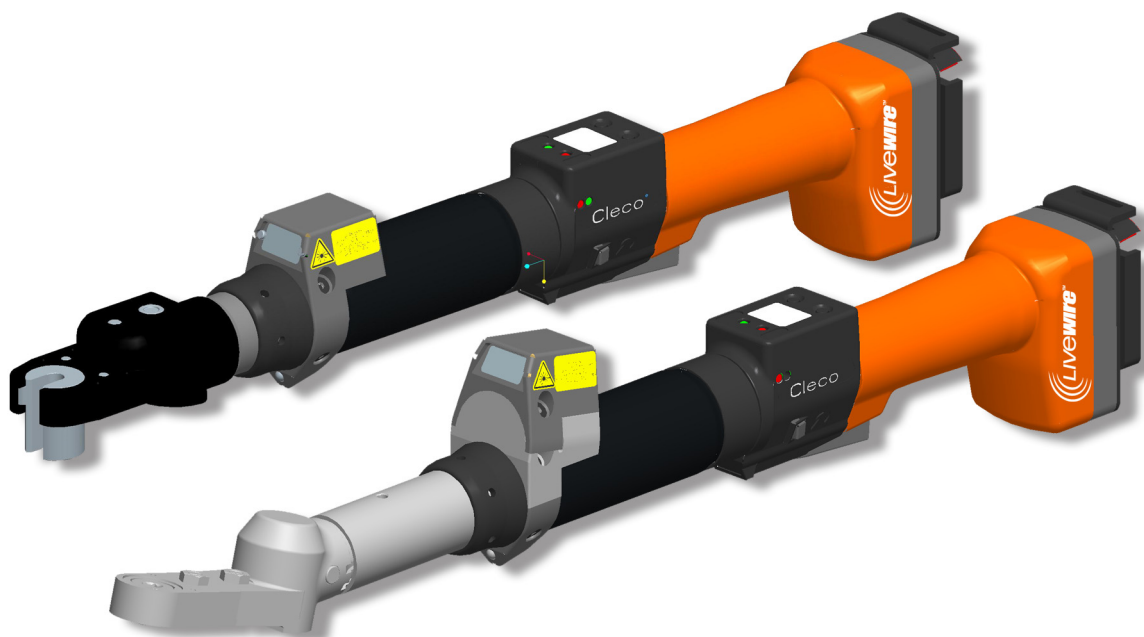

For additional product information visit our website at <http://www.apextoolgroup.com>

# For this Instruction Manual

This Instruction Manual is the translation of the Original Instruction Manual intended for all persons who work with this tool but do not do any programming work.

The Instruction Manual

- provides important notes for safe and effective use.
- describes the function and operation of the cordless EC tool.
- serves as a reference work for technical data, service intervals and spare part orders.
- provides information on options.

## Nomenclature



47 B ... ... B ...							
<b>Series</b>							<b>Attachment<sup>1)</sup></b>
							<b>C1</b> – 15° (Crowfoot)
							<b>C3</b> – 30° (Crowfoot)
							<b>T2</b> – 20 Nm (Tube Nut)
							<b>T3</b> – 30 Nm (Tube Nut)
							<b>T4</b> – 40 Nm (Tube Nut)
<b>Power</b>							
<b>B</b> – Battery / PM48							
<b>Tool Type</b>							<b>Max. Torque</b>
<b>C</b> – Crowfoot							<b>20</b> – 20 Nm
<b>T</b> – Tube Nut							<b>30</b> – 30 Nm
							<b>40</b> – 40 Nm
<b>Feature 1 (Data Transmission)</b>							<b>Power supply</b>
– IrDA							<b>B</b> – 48 V max.
<b>R</b> – RF868 MHz							
<b>X</b> – WLAN: 2.4 GHz							<b>Feature 2 (Scanner)</b>
<b>Y</b> – WLAN: Dual band 2.4 GHz, 5 GHz							<b>S</b> – Barcode Scanner
<b>Z</b> – RF15.4: IEEE802.15.4							– None

- 1) Sockets see 10.5 Socket for head T2X, T3X, T4X, optional, page 58,  
10.9 Socket for C1, C3, optional, page 66

**Identification text:**

47BC/BT	represents all models of the cordless EC tool as described here.
PS	represents all models of the power supply as described here: Accupack or Power Module
RF15.4	represents the Wireless Fidelity IEEE802.15.4
LMC	represents the interchangeable memory module LiveWire Memory Chip
→	refers to required actions.
•	refers to lists.
<i>kursiv</i>	refers menu items, i. e.: <i>Diagnostics</i>
<...>	refers elements, that have to be selected or deselected, such as buttons or control boxes, i.e.: <F5>
<b>Courier</b>	refers names of paths and files are written in Courier font i.e.: <b>setup.exe</b>
\	refers selection of an item from the menu i.e.: <i>file \ print</i>

**Identification graphic:**

	refers a movement in one direction.
	refers function and force.

In pictured illustrations:

Where not necessary, 47BT (Tube Nut) is shown.

**Copyright protection**

Apex Tool Group reserves the right to modify, supplement or improve the document or the product without prior announcement. This document may not be reproduced in any way, shape or form, in full or parts thereof, or copied to another natural or machine readable language or to a data carrier, whether electronic, mechanical, optical or otherwise without the express permission of Apex Tool Group.



# Contents

<b>1</b>	<b>Safety</b>	<b>7</b>
1.1	Warnings and notes .....	7
1.2	Basic requirements for safe working practices .....	8
1.3	Operator training .....	8
1.4	Personal protective equipment .....	8
1.5	Designated use .....	9
1.6	Codes and standards .....	9
1.7	Noise and vibration .....	9
<b>2</b>	<b>Scope of supply, transport and storage</b>	<b>10</b>
2.1	Items supplied .....	10
2.2	Transport .....	10
2.3	Storage .....	10
<b>3</b>	<b>Product description</b>	<b>11</b>
3.1	General description .....	11
3.2	Operation and functional elements .....	12
<b>4</b>	<b>Accessories</b>	<b>16</b>
<b>5</b>	<b>Before initial operation</b>	<b>17</b>
5.1	Setting up tool holder .....	17
5.2	Ambient conditions .....	18
5.3	Charging the battery pack .....	18
5.4	Changing the LMC .....	18
<b>6</b>	<b>First Operation</b>	<b>19</b>
6.1	Carrying out the rundown .....	19
6.2	Operating status .....	19
<b>7</b>	<b>LCD display</b>	<b>21</b>
7.1	Result display .....	21
7.2	Status display .....	21
7.3	Operating menu .....	24
7.4	System error messages .....	35
<b>8</b>	<b>Maintenance</b>	<b>39</b>
8.1	Cleaning instructions .....	39

8.2	Service schedule .....	39
8.3	Lubricants .....	40
<b>9</b>	<b>Troubleshooting</b>	<b>41</b>
<b>10</b>	<b>Spare parts</b>	<b>49</b>
10.1	Gear + Head T2X, T3X, T4X .....	50
10.2	Head T2X.....	52
10.3	Head T3X.....	54
10.4	Head T4X.....	56
10.5	Socket for head T2X, T3X, T4X, optional .....	58
10.6	Gear + Head C1, C3 .....	60
10.7	Head 301071 (C1) .....	62
10.8	Head 301072 (C3) .....	64
10.9	Socket for C1, C3, optional .....	66
10.10	Tool holder.....	67
<b>11</b>	<b>Technical data</b>	<b>69</b>
11.1	Dimensions .....	69
11.2	Dimensions of tool holder 935290 / 935395 (Optional) .....	72
11.3	Dimensions of tool holder 935999 / 935998 (Optional) .....	72
11.4	Performance Data.....	73
11.5	Electrical data .....	74
<b>12</b>	<b>Service</b>	<b>78</b>
12.1	Recalibration.....	79
<b>13</b>	<b>Disposal</b>	<b>79</b>

# 1 Safety

## 1.1 Warnings and notes

Warning notes are identified by a signal word and a pictogram:

- The signal word describes the severity and the probability of the impending danger.
- The pictogram describes the type of danger.

### WARNING!




Indicates a potentially **hazardous** situation which, if not avoided, could result in serious injury.

2009-08

### CAUTION!



Indicates a potentially **hazardous** situation which, if not avoided, may result in minor or moderate injury or property and environmental damage. If this warning is not observed, injuries, property or environmental damage may occur.



Class 2 laser product

Class 2 laser scanners use a laser diode that produces a low-power visible light beam that is comparable to a very bright source of light, such as the sun.

Do not look into the laser beam when the laser is on.

Doing so can cause damage to the eyes.

### NOTE



#### General notes

include application tips and useful information but no hazard warnings.

## 1.2 Basic requirements for safe working practices

You should read all instructions. Nonobservance of the instructions below may result in electrical shock, burns and serious injuries.

### CAUTION! Work area



- Ensure there is enough space in the work area.
- Keep the work area clean.
- Electrical safety
- Protect the 47BC/BT from rain and moisture. Use only in the inner zone (IP40).
- Follow the safety instructions printed on the battery pack and charger.
- Use 47BC/BT only with power supply (PS) by Cleco.
- Do not open the battery pack.

### Safety of persons

- 47BT: The head can close when pushing the start button inadvertently (eg when putting down the tool). Fingers can be bruised or severed. Do not reach into the open head.
- Ensure a secure standing position. Maintain balance.
- Make sure that the PS is securely installed before operating the 47BC/BT.
- Hold the 47BC/BT tightly in the hand – be prepared for high short-term reaction torques.
- Deposit 47BC/BT only in the designated tool holder, see 10.10 Tool holder, page 67 – prevent accidental operation.
- Do not look into the laser beam of tools with built-in barcode scanners.
- Follow generally valid and local safety and accident prevention rules.

### Safe working with and around fastening tools

- Inspect sockets for visible damage and cracks. Replace damaged sockets immediately.
- Disconnect the 47BC/BT from the PS before replacing the sockets.
- Only use sockets/bits from Cleco, see 10.9 Socket for C1, C3, optional, page 66.
- Do not attach sockets on the head aslant.
- Make sure that the sockets are securely inserted.

## 1.3 Operator training

All operators must be trained and experienced before operating the 47BC/BT. The 47BC/BT may be repaired by authorized technicians only.

## 1.4 Personal protective equipment



When working

- Wear the protective goggles to protect against spurting metal splinters.



Danger of injury by being wrapped up in and caught by machinery

- Wear a hairnet.
- Wear close-fitting clothing.
- Do not wear jewelry.



## 1.5 Designated use

The 47BC/BT is designed exclusively for fastening and releasing threaded fasteners.

- The communication with the controller is allowed only over the following interface ports: Do not use it in

Types	Communications
All	IrDA interface port of the tool holder, order no. 935290
47BCR.../47BTR...	868 MHz with base station, order no. 961300 (EU)
47BCX.../47BTX...	WLAN standard IEEE 802.11b WEP, WPA/WPA2
47BCY.../47BTY...	WLAN standard IEEE 802.11a/b/g WEP, WPA(2), LEAP, PEAP
47BCZ.../47BTZ...	WPAN standard IEEE 802.15.4

areas where there is a risk of explosion.

- Do not open it or modify it structurally.
- Only use with accessory parts which are approved by the manufacturer (see 4 Accessories, page 16).
- Do not use as a hammer or for re-bending.

## 1.6 Codes and standards

It is mandatory that national, state and local codes and standards be followed.

### 1.6.1 FCC conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### 1.6.2 Canada conformity

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### 1.6.3 EMC

Industrial environment EMC limit class A.

The tool complies with the following EMC standards:

DIN EN 61000-6-4 Emitted interference

DIN EN 61000-6-2 Interference immunity

## 1.7 Noise and vibration

Noise level < 60 dB(A) free speed (without load) according to DIN EN ISO 4871:1997-03.

Vibration values < 2.5 m/s<sup>2</sup> according to DIN EN ISO 20643:2005-03.

## 2 Scope of supply, transport and storage

### 2.1 Items supplied

Check shipment for transit damage and ensure that all items have been supplied:

- 1 47BC/BT
- 1 This instruction manual
- 1 Declaration of Conformity
- 1 Factory test certificate for transducers
- 1 Machine capability analysis

### 2.2 Transport

Transport and store the 47BC/BT in the original packaging. The packaging is recyclable.

### 2.3 Storage

For short-term storage and for protection against damage:

- Place the 47BC/BT in the tool holder.

For storage longer than 100 hours:

- Disconnect battery pack from the 47BC/BT.

The battery pack is discharged by the electronics integrated in the tool.

Object	Time period	Storage temperature
47BC/BT without PS	No guideline	-25 °C to +40 °C (-13 to 104 °F)


## 3 Product description

### 3.1 General description

- Sturdy, brushless motor with resolver.  
Shutoff is torque/angle-controlled.
- LCD display with information on status, torque and angle.
- Green OK and red NOK LED display provides information on the current fastening result.
- LED lighting makes it possible to find the screw point quickly.
- Clockwise/counterclockwise rotation
- Low vibration level
- Servo and fastening electronics are integrated in the 47BC/BT.
- Fastening parameters are set with the controller or to a computer.
- An interchangeable memory module LiveWire Memory Chip (LMC) is installed to enable easy replacement of the tools, without changing the parameter.
- Data is transmitted between the controller and tool via (type dependent)
  - infrared (IrDA)  
Parameters and rundown results are transmitted to the control or to a computer simply by placing the 47BC/BT in the tool holder.
  - 868 MHz
  - WLAN
  - RF15.4 (IEEE 802.15.4).
- Power supply via
  - Akkupack 26 V / 44 V
  - Power Modul 48 V
- Built-in acoustic signal. The signal is activated after barcodes are scanned. It can also be activated after NOK rundowns for a programmable time.

## 3.2 Operation and functional elements

This chapter describes operational and functional elements and their tasks in the order of their respective item nos.

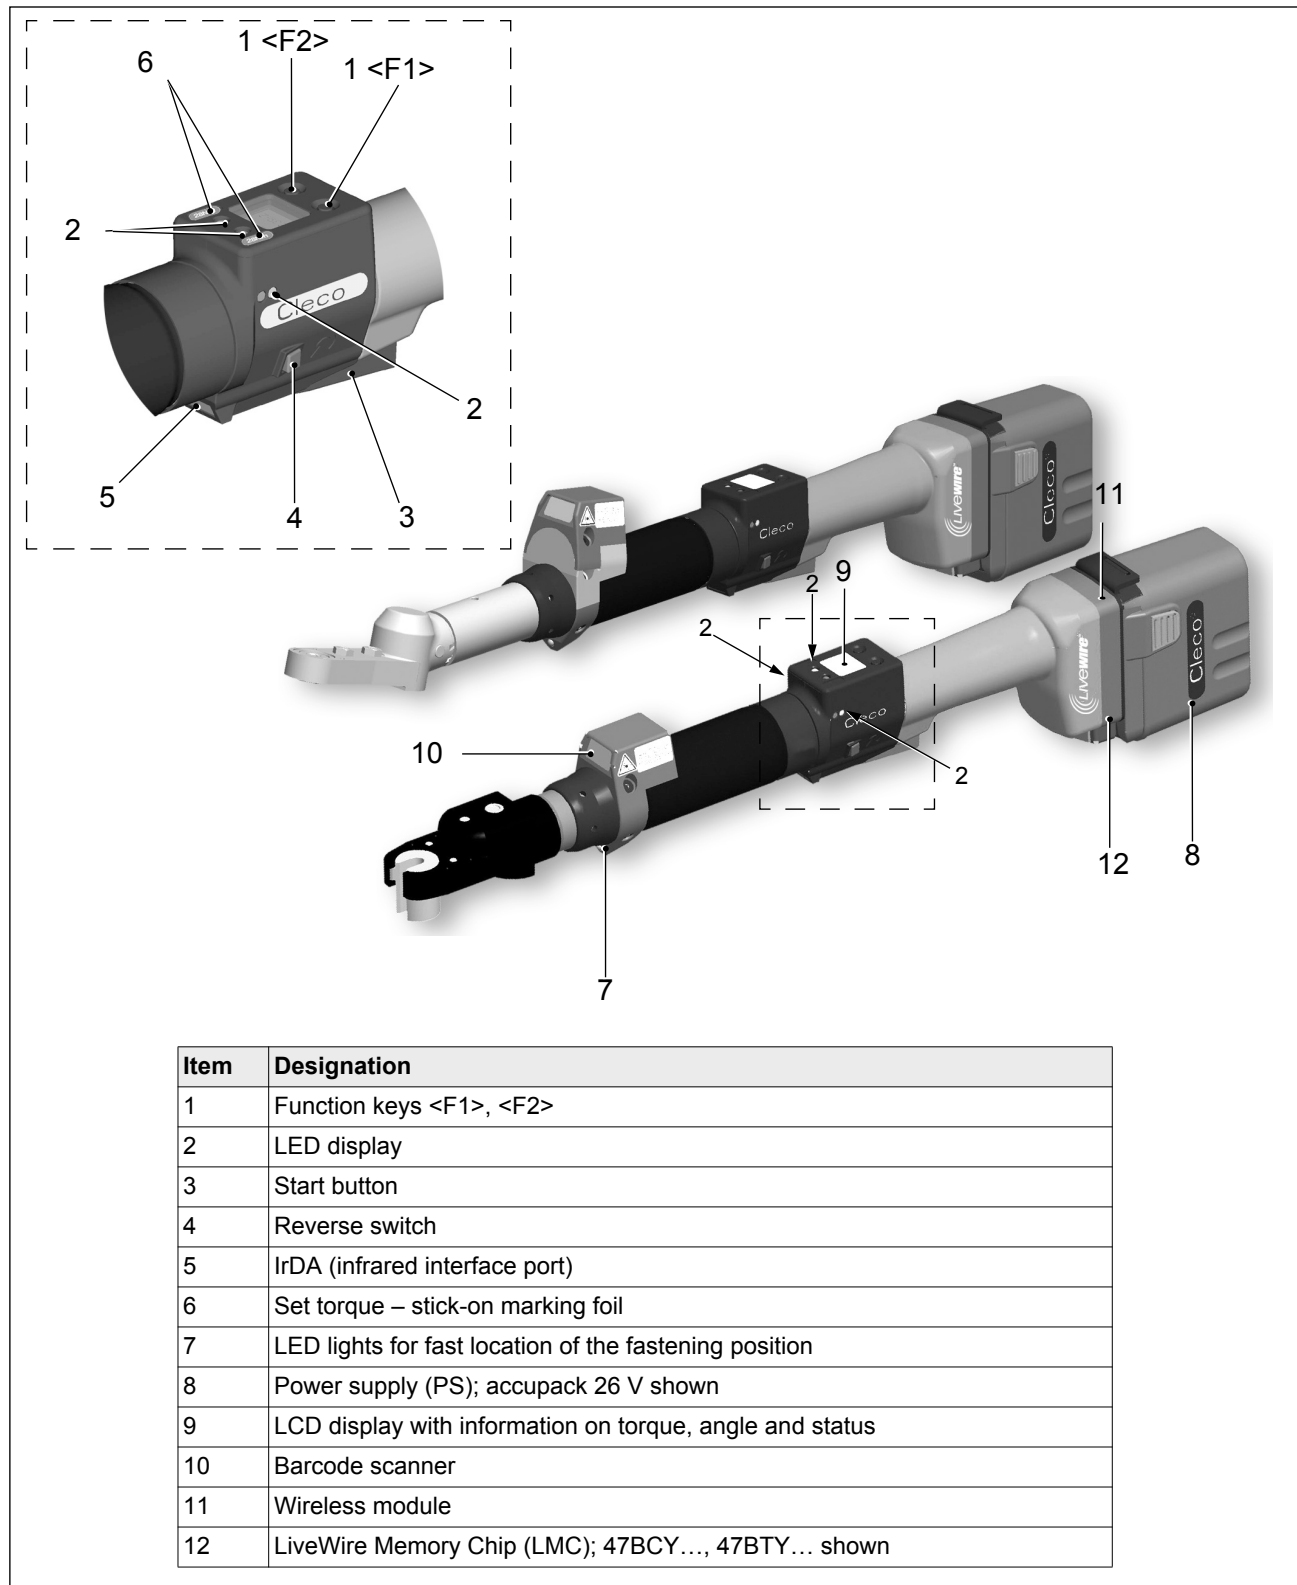

### 3.2.1 Function keys

#### Left function key <F1>

- Confirm error message
- Press once.

Programmable: Depending on how the key is programmed, actions can be carried out by pressing it briefly.

- Exit menu
- Press for two seconds.

#### Right function key <F1>

- Activate menu
- Press until the display shows the *Main menu* (for additional information, refer to 7.3 Operating menu, page 24).
- Select functions, if menu is activated
- Press for two seconds. Alternatively, the start button can be pressed.

### 3.2.2 LED display

The LED display shows the respective operating status and the result of the last fastening sequence (see 6.2 Operating status, page 19):

LEDs	Operating status	Result after screwing cycle
Steady light Green	Active	OK
Steady light Red	Active	NOK
Flashing light Green – low frequency	Energy saver mode	
Off	Sleep	

If Linking is selected on the controller:

Flashing light Green – high frequency	Active / Settings: Linking	Linking OK
Flashing light Red	Active / Settings: Linking	Linking NOK

#### Software update

During *Software Update*, the actual programming process is indicated by rapid flashing alternating at irregular intervals between red and green.

#### NOTE



Do not interrupt programming by removing the PS during this phase.

### 3.2.3 Start button



According to settings the start button has 3 different functions:

- It activates the LED lighting.  
→ Press the start button halfway down and hold it.
- It starts the motor, the LED light goes out.  
→ Press the start button all the way down.

- It activates the barcode scanner—only for types of the 47BC...S/47BT...S series.
- Press the start button all the way down.

### 3.2.4 Reverse switch

The reverse switch changes the rotation direction of the 47BC/BT:

-  Clockwise rotation – for screwing in screws  
Press reverse switch as far as it will go.  
When the start button is pressed *Active* appears on the LCD display.
-  Counterclockwise rotation – for loosening or screwing out screws  
Press reverse switch as far as it will go.  
When the start button is pressed *Left* appears on the LCD display.

### 3.2.5 IrDA interface port

The 47BC/BT communicates with the controller or a computer (TMEB-COM) via the IrDA interface port. For secure data transmission and for programming the 47BC/BT, place the 47BC/BT in the tool holder with IrDA interface port, Order no. 935290/935999. Data transmission is possible in the Active, Energy saver mode and Standby operating modes, but not possible in Sleep (see 6.2 Operating status, page 19).

#### NOTE



If the data transmission has been interrupted, the 47BC/BT reports *Synch error* on the LCD display. Replace the 47BC/BT in the tool holder. The complete data transmission is acknowledged on the display with *Remain 512*.

### 3.2.6 Identification – set torque (Optional equipment)

To identify the set torque on the 47BC/BT, glue the corresponding marking foil to the right and the left of the LCD display. See 4 Accessories, page 16.



### 3.2.7 LED lighting

LED lighting make it possible to quickly find the screw point.

3 different activation methods are possible. Define the method by programming the controller correspondingly:

- Activation by pressing the start button halfway down (3.2.3 Start button, page 13).
- Time-controlled beginning at start
- You also have the option of disabling it.

The lighting distance is up to .

### 3.2.8 Power supply

See Instruction manual battery pack / Instruction manual Power Module PM48.

### 3.2.9 LCD display

See 7 LCD display, page 21

### 3.2.10 Barcode scanner

For tools of the 47BC...S/47BT...S series, the built-in barcode scanner is a class 2 laser scanner with a wavelength of 650 nm.

#### CAUTION!



LASER RADIATION  
DO NOT LOOK INTO THE BEAM  
CLASS 2 LASER  
IN ACCORDANCE WITH  
EN 60825-1:1994  
P. 10000  
1.0000

Eye injury from class 2 laser beam

- Do not look into the laser beam window when the laser is on.
- Repair any damage immediately.  
Damage of the optical components can cause laser radiation.
- Modifications to the barcode scanner and procedures not outlined in these operating instructions are strictly prohibited.
- Take defective devices out of operation immediately.

The barcode scanner reads one-dimensional linear barcodes:

Scanning operation	Acoustic signal
• Successful	50 ms long
• Faulty • Not within 3 seconds • <i>Canceled</i> by pressing the start button	3 times in rapid succession

Depending on how the controller is programmed, there are two different operating modes:

#### Barcode as release for further rundowns

- Press the start button on the tool; this activates the barcode scanner.  
The successful scan is acknowledged by an acoustic signal.
- Press the start button on the tool again; this starts the rundown.

If is necessary to read another barcode, proceed as follows.

#### Barcode not necessary as release for further rundowns

- From the *Scanner* tool menu, select *Read barcode*.
- Press the start button on the tool; this activates the barcode scanner.  
The successful scan is acknowledged by an acoustic signal.
- Press the start button on the tool again; this starts the rundown.

Alternative: Assign the *Read barcode* function to the left function key <F1> on the tool.

- Press the left function key <F1> on the tool once.
- Press the start button on the tool again; this activates the barcode scanner.

Programming the barcode scanner is described in the programming manual of the controller.

### 3.2.11 Radio interface port

Tools are equipped with an wireless interface port in addition to the IrDA interface port.

Type	Communication	necessary counterpart
47BC...R/ 47BT...R	RF868 MHz	Base station order no. 961300
47BC...X/ 47BT...X	WLAN Standard IEEE 802.11b	Access Point according to Standard IEEE 802.11b
47BCY.../ 47BTX...	WLAN Standard IEEE 802.11a/b/g	Access Point according to Standard IEEE 802.11a/b/g
47BCZ.../ 47BTZ...	WPAN Standard IEEE 802.15.4	Base station order no. 961390/961410

The tool uses the radio interface port for continuous communication with the controller. This interface port is used to transmit both the parameters and the rundown results. Data transmission is possible in the *Active*, *Energy saver mode* and *Standby* operating modes, but not possible in *Sleep* (see 6.2 Operating status, page 19). Programming and setting up the radio interface port are described in the programming manual of the controller.

#### NOTE



After the tool is switched on, it can take up to 35 seconds until the communication via WLAN is active.

### 3.2.12 LiveWire Memory Chip (LMC) – only for types of the 47BCY.../47BTY... series





To enable easy replacement of the tools during production, the interchangeable memory module LMC is installed. When the tool is switched on, the network settings are read from the LMC and used to establish the WLAN connection. During a tool change, the LMC from the tool being replaced must be transferred to the new tool to be used.

The following data are stored on the LMC:

- MAC address
- Network name (SSID)
- Encryption
- Network key
- Use of the DHCP server
- IP address
- Subnet mask
- Gateway
- Country-specific settings

The MAC address is defined by Apex Tool Group and cannot be changed. The other data can be changed via infrared connection of the tool to the controller.

## 4 Accessories

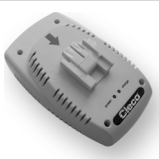	Battery pack, Li-ion, 26 V Order no. 935377		Battery pack, Li-ion, 44 V Order no. 936400
	Battery charger, Li-ion 26 V (110 – 230 VAC) Order no. 935391 – 1-fold Order no. 935302 – 4-fold		Battery charger, Li-ion 44 V (85 – 270 VAC) Order no. 936491PT – 1-fold



	Power Module PM48 Order no. 961350		LMC Order no. 961327 – Europe Order no. 961461PT – USA/Canada Order no. 961462PT – Japan
	Adapter cable Order no. 961341-030 – 3 m Order no. 961341-060 – 6 m Order no. 961341-080 – 8 m Order no. 961341-100 – 10 m		
	Extension cable Order no. 961342-030 – 3 m Order no. 961342-060 – 6 m Order no. 961342-080 – 8 m Order no. 961342-100 – 10 m		
	With IrDA interface, RS232 connection cable Order no. 935290 – 47BT... Order no. 935999 – 47BC...  Without IrDA interface, RS232 connection cable Order no. 935395 – 47BT... Order no. 935998 – 47BC...		
	RS232 Extension cable (IrDA) Order no. 935154 – 3 m (9.84") Order no. 935155 – 6 m (19.7") Order no. 935157 – 10 m (32.8")		
	Protective sleeve Order no. 941410 – Scanner		
	Identification – set torque Order no. 935330 (1,5 –28 Nm) Order no. 935759 (30 –49 Nm)		

## 5 Before initial operation

The 47BC/BT has been configured by Apex Tool Group. A setting for your specific screw joint needs must only be made with the controller or a computer by a qualified person. For more information, refer to the controller programming manual.

### 5.1 Setting up tool holder

→ Mount the tool holder on a stable base.

For tool holder with IrDA interface port:

- Select the location in such a way that no outside light shines onto the tool holder.  
This can inhibit data transmission.
- Lay the connection cable in such a way that there is no danger that persons can trip.

## 5.2 Ambient conditions

Ambient temperature	0 °C (32 °F) to maximum +40° C (+104° F)
Humidity	0 to 80 %, not with dew
Working height	up to 1000 m above sea level

## 5.3 Charging the battery pack

Battery pack is only partly charged when delivered.


→ Charge fully before first use. See Instruction manual battery pack.

## 5.4 Changing the LMC

**NOTE** Observe Handling Instructions. Electrostatically sensitive component.




The electronic components of the cordless EC tool can be destroyed or damaged by electrostatic discharge (ESD) leading to an immediate or later failure. To prevent damage when exchanging the LMC, make sure that a potential equalization occurs between operator and tool.

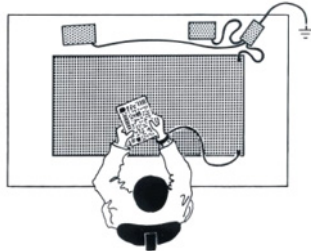

Grafik: CANESPA

→ Assembly is best done in an ESD-protected environment. Recommendation for an ESD workplace: Electroconductive work surfaces, antistatic bands, appropriate furniture, clothing, shoes, flooring as well as grounding of all components..

**NOTE** LMC may only be used with the battery pack inserted.

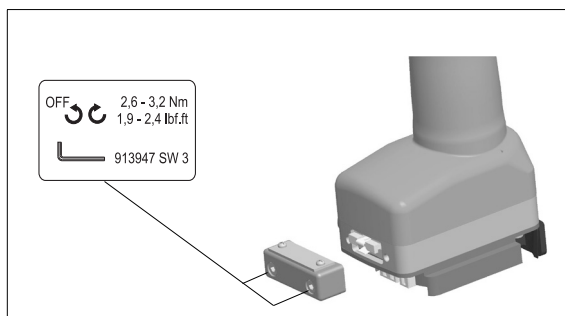

### Removing LMC

- Remove the battery pack.
- Unscrew the screws (M4, DIN 912).
- Carefully pull LMC out of the handle and replace it.

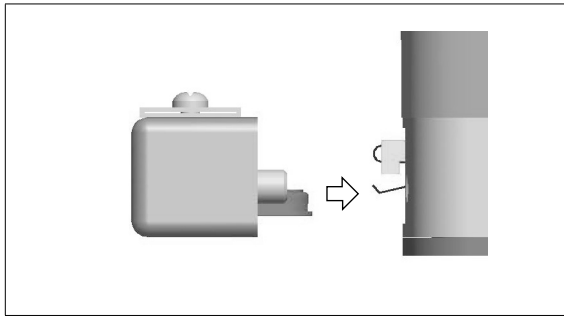


Fig. 5-1: Changing the LMC

**Inserting LMC**

- Carefully insert LMC according to the illustration.
- Tighten the screws (M4, DIN 912).
- Insert the battery pack.

## 6 First Operation

### 6.1 Carrying out the rundown

Make sure that the battery pack is securely installed before operating the 47BC/BT. The 47BC/BT is now ready for use.

- Press and release the start button: the LCD display reads *Ready*.
- Press and release the start button a second time: the tubenut head return to the home position (open position). If counterclockwise rotation was activated via reverse switch, the tube nut head returns to home position each time the start button is pressed.
- If counterclockwise rotation was activated via reverse switch, the tubenut head return to the home position after every single press.

**WARNING!**

The head can close when pushing the start button inadvertently (eg when putting down the tool). Fingers can be bruised or severed. Do not reach into the open head.

Types with wireless transmission continuously communicate with the controller. The tool automatically receives the parameters and, when the rundown is complete, automatically sends the rundown results to the control system. Programming and setting up the wireless interface port are described in the programming manual of the controller.

Types without wireless transmission must be placed in the tool holder when the rundown is complete. The rundown results are transmitted and shown under the *Run screen* menu item.

### 6.2 Operating status

The operating modes change in the following order.

The following functions are available depending on the display:

Operating status	LED display	LCD display	Function
Active	Steady light: Red – Rundown NOK Green – Rundown OK	On	Screws Data transmission

Automatic switch to the following after 1 minute idle time:

Energy saver mode	Flashing light Green	Off	Data transmission
-------------------	----------------------	-----	-------------------


Automatic switch to the following after further 10 minutes:

Operating status	LED display	LCD display	Function
Sleep	Off	Off	Data transmission not possible
Manual switch from <i>Sleep</i> to <i>Active</i> : Press down start button and hold down for approx. 1 second. To switch off the 47BC/BT manually, pull out the battery.			

## 7 LCD display

The LCD display on the tool is divided into the result display, status display, operating menu and system error messages.

### 7.1 Result display



The LCD display consists of a three lines, each with 6 characters, to display the status, torque and angle. The result display is updated after the rundown ends.

#### First line – result:

<b>OK</b>	Result is OK
<b>NOK</b>	Result is not OK
<b>OFF</b>	Torque encoder offset error
<b>CAL</b>	Torque encoder calibration error
<b>ENC</b>	Angle encoder error
<b>IP</b>	Current overload in output section
<b>IIT</b>	Requested motor output is too high
<b>TMAX</b>	Maximum fastening time exceeded
<b>RC</b>	Rundown terminated by disabled start signal
<b>Tq&lt;</b>	Torque too low
<b>Tq&gt;</b>	Torque too high
<b>A&lt;</b>	Angle Low
<b>A&gt;</b>	Angle High
<b>Error</b>	Error occurred

The status is displayed in alternation with the Application being used.


#### Second line – Shut-off torque in Nm:

**T** Torque Target

#### Third line – Shut-off angle in degrees:

**A** Shut-off angle



The  symbol at the top right shows an interrupted data connection to the control.

### 7.2 Status display

The status display is divided into the "Standard" and "Linking" modes. "Standard" is selected if "Linking" is not enabled at the control system

→ See **Advanced Application Builder\Linking**). The application is selected at the <Run Screen> or via the App. selection inputs.

<b>Ready</b>	No other status messages take priority. The tool is ready.
<b>Remain 512</b>	Number of remaining rundowns that can still be carried out until the rundown data memory is full and the rundown data have to be transmitted to the control.
<b>Open</b>	Tool waits for action after every fastening (only for types of the 47BC/BT) → Press the start button. Tubenut head return to home position.
<b>Emerge Strate</b>	<i>Emergency strategy</i> active. Indicates that the emergency strategy is currently enabled and thus that no connection to the control must exist. A maximum of 512 rundowns can be carried out.
<b>Job comple Sync</b>	All fastening sequences have been completed. → Synchronize the tool with the control once again.
<b>No Job Sync</b>	No fastening sequences have been initialized. → Synchronize the tool with the control once again.
<b>Parame not set</b>	No fastening sequence parameters have been set. → Check the Application and Tightening group selected on the control to determine whether the tool settings and process programming have been carried out.
<b>App locked Sync</b>	Application locked. → Synchronize the tool with the control once again.
<b>Reject Releas Sync</b>	Reject Release active. The Reject Release was programmed in the control. → See <b>Advanced Application Builder\Reject Release</b> . → Depending on the programming, unlock the tool via the external input <i>NOK release</i> or Release on Backoff. For unlocking via the external input <i>NOK release</i> , set the external input and synchronize it with the control.

**Sync  
Error**

Error in last data synchronization with the control.  
→ Synchronize the tool with the control once again.

**Tool  
not  
set**

Tool has not yet been synchronized with a control.  
→ Synchronize the tool with the control for the first time.

**Input  
Enable  
Missin**

The *Tool Enable* input is missing.  
→ Set the *Tool Enable* input.  
→ Synchronize the tool with the control once again.  
This message can appear only if **External Tool Enable** has been activated in **Advanced Application Builder\System settings**.

**Need  
Part ID**

No barcode was detected within the timeout or an invalid barcode was read. The display switches to *Expect barcode*.  
→ Scan the barcode in again.

**Additional messages in "Linking" mode****N.Pos1  
of 3  
Rpl 0**

First line: The next position to be fastened.  
Second line: Number of positions.  
Third line: Number of repetitions at this position in case of an NOK rundown.

**Linkin  
No  
Result**

Linking has been canceled without a batch result.  
Not all of the positions in the tightening group have been programmed.  
→ Check the Application and Tightening group selected on the control to determine whether the tool settings and process programming have been carried out.

**Linkin  
OK**

Linking result OK.

**Linkin  
NOK**

Linking result NOK.

**Linkin  
locked  
Synch**

Linking disabled.  
→ Synchronize the tool with the control once again.


## 7.3 Operating menu

### 7.3.1 General

The operating menu on the tool is divided into a main menu and submenus. You can navigate through the menus using the two function keys below the LCD display. In the following description, <F1> is used for the left function key and <F2> is used for the right function key. The menu is activated by pressing the right function key, <F2>. The menu can be disabled by configuring appropriate parameter in the controller.

Basic functions:


- <F2>: Activate main menu.
- <F1>: Go to previous menu item.
- <F2>: Go to next menu item.
- Press <F1> longer than 2 seconds to go to the next higher menu level. If the main menu is activated, the system goes into production mode.
- Press the start button or <F2> longer than 2 seconds to activate the highlighted item or execute the highlighted action. Actions that start the tool can be carried out only by pressing the start button.
- If the menu is enabled, no rundowns are possible.
- Each submenu has an entry for *Back*.



Enables the main menu.



### 7.3.2 Structure

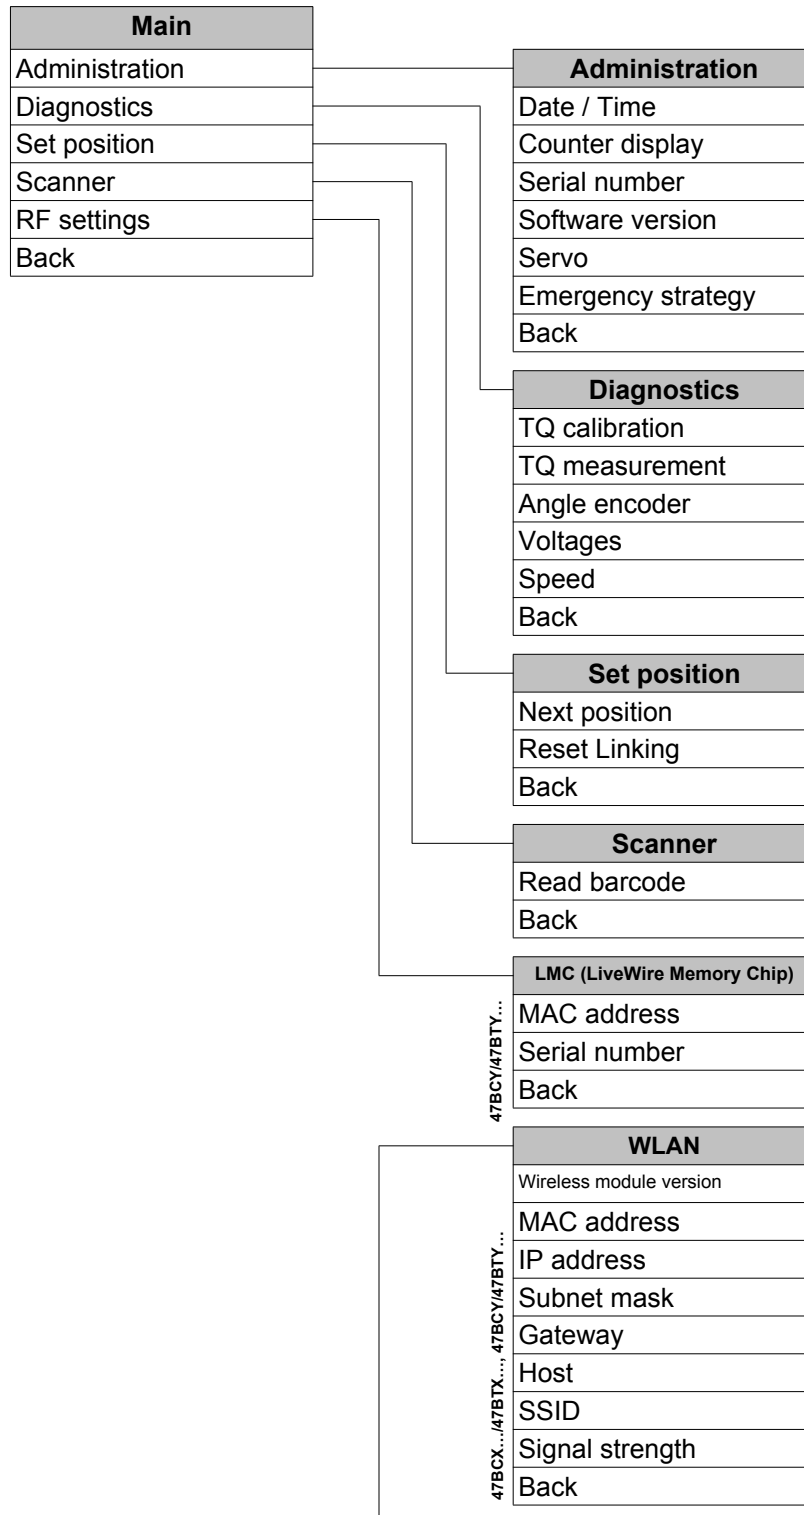

47BCR.../47BTR...	868MHz
	Wireless module version
	Channel
	Network ID
	Tool ID
	Power
	Back
47BCZ.../47BTZ...	RF15.4 / IEEE802.15.4
	Channel
	PAN ID
	Tool ID
	Power
	Encryption
	Wireless module Serial no.
	Wireless module version
	Signal RSSI
	Back

### 7.3.3 Main menu

>Main  
Admini  
strati

*Administration* – General items such as Date/Time, Counter display, etc.

>Main  
Diag-  
nostic

*Diagnostics* – Diagnostic functions for the tool.

>Main  
Posi-  
tion

*Position* – Selects the position to be used next.

>Main  
Scan-  
ner

*Scanner* – Deletes a previously read barcode and activates a new read cycle.

>Main  
RF-SET  
WLAN

*RF settings* – Displays the settings used for wireless transmission.

### 7.3.4 Administration submenu

Time  
07:47  
30.09

#### Date/Time

Displays the tool system time.

The system time can be displayed in US or European format.

→ Refer to "Setting the system time on the control" under  
**Administration\Date\Time**.

Counte  
99  
XXXXXX

#### Counter display

The tool counter display is incremented after each rundown throughout the service life of the tool.

→ Refer to control under **Diagnostics\Tool\Tool Memory**.

S/N  
000000  
245

#### Serial number

Displays the tool serial number.

→ See serial number on the control under  
**Tool or Diagnostics\Tool\Tool Memory**.

Vers.  
V1.00.  
00

#### Control software version

Displays the installed software version.

Servo  
V:T10C  
N00015

#### Servo software version

Displays the installed software version.

#### NOTE



The emergency strategy can be enabled only if this is enabled on the control.

→ See **Advanced Application Builder\System settings** *Emergency strategy* enabled.

Emerge  
Strate  
locked

Emergency strategy disabled.

→ See **Advanced Application Builder\System settings\Enable emer-**  
**gency strategy**.

Emerge  
Strate  
Off

Emergency strategy off.

If the emergency strategy has been enabled on the control, see

**See Advanced Application Builder\System settings\Enable**  
**emergency strategy**

The emergency strategy can be enabled and disabled via the tool start button or by pressing  
<F2> for 2 seconds. The Emergency strategy is disabled automatically when the tool links to  
the control.

**Emerge  
Strate  
On**

Emergency strategy on.

If the emergency strategy is enabled and *Linking* is disabled, the fastening parameters of the last selected Application are used. For *Linking* operating mode, all steps are used with the corresponding parameters of the last selected Tightening Group.

The memory of the tool stores data from up to 512 rundowns. If more rundowns than this are executed while the Emergency strategy is active, the oldest results are always discarded once 512 rundowns have been recorded.

**Emerge  
Active**

*Emergency strategy* active. Is displayed during fastening.

### 7.3.5 Diagnostics submenu

**Cal OK  
K 1.11  
O 0.00****TQ calibration**

This test function cyclically recalibrates the system with the values used immediately before the start of a rundown. For this, the tool must not be tensioned!

First line: Calibration test and status.

Second line: TQ calibration voltage.

Third line: Offset voltage. If a value lies outside the tolerance range, the corresponding error is displayed.

Value	Rated value	Tolerance
TQ calibration voltage:	1.10 V	± 45 mV
Calibration offset	0 V	± 58 mV

**Torque  
T 5.57  
T 8.23****TQ measurement**

In this test function, after the start button is pressed, the same calibration is carried out as immediately before the start of a rundown. For this, the tool must not be tensioned!

Then, the tool starts with speed "0". The torque is continuously measured and displayed until the start button is released.

Second line: Current torque.

Third line: Peak value, highest value since the start button was pressed.

**Angle  
A 360  
OK****Angle encoder**

The start button starts the tool at 30% of the maximum speed. After one revolution of the output shaft (nominal angle 360°), measured with the resolver, the tool is stopped. During a fixed dwell time of 200 ms, any further angle pulses occurring are traced. The total result is shown as Actual Angle. If the test run is not terminated by a monitoring criterion and the batch result is greater than or equal to 360 degrees, it is evaluated and displayed as OK. Monitoring criteria are the torque and a monitoring time.

If the torque exceeds 15 % of the calibration value (even during the dwell time), or if the monitoring time of 4 seconds expires, the test run is terminated with a *TQ>* or *TMAX* result. However, you specifically need to check whether the output shaft has actually turned by the value indicated (e. g. by placing a mark on the spindle). If the angle reached by the output shaft does not agree with the value displayed, either the angle factor has been entered incorrectly or the resolver is defective.

Voltage  
V26.40  
U19.00

**Voltages**

Second line: Current battery voltage. To ensure high utilization potential, this voltage is monitored continuously during fastening operation. If the voltage drops below limit, a warning output on the tool.

Third line: Programmed value.

This can be changed using the control (under **T001**).

Speed  
Rpm466  
T 0.02

**Speed**

The start button starts the tool at the maximum speed.

Second line: Current output shaft speed.

Third line: Current torque.

Rotational speed measurement is based on the angle information of the resolver. If you release the start button, the tool stops. As a safety function the torque is monitored by the tool transducer. If it exceeds 15 % of its calibrated value, the speed measurement is terminated.

### 7.3.6 Set position submenu – only with Linking enabled

>Posit  
Change  
Positi

Selects the position to be used next.

Select  
Positi  
2/6

You can skip the position.

You can select the position to be used next using the function keys:

- <F1>: Activate the previous position.
- <F2>: Activate the next position.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

>Posit  
Reset  
Positi

Reset linking to position 1. The machine operator can cancel Linking.

### 7.3.7 Scanner submenu – only for types of the – only for types of the 47BC...S/ 47BT ...S series

>Scann  
Activa  
Scanne

*Scanner* – Deletes a previously read barcode and activates a new read cycle.

- Press the Start button or <F2> for longer than 2 seconds.

### 7.3.8 WLAN wireless transmission submenu – only for types of the 47BCX.../47BTX..., 47BCY.../47BTY.../ series

The WLAN RF settings submenu shows the settings being used.

If no actions are carried out, the menu is automatically exited after 60 seconds.

Programming the RF settings for WLAN data transmission is described in the programming manual of the control.

**Versio**  
**#27173**  
**Dec 1**

Displays the installed software version of the wireless module.

**MAC**  
**00302e**  
**e162f8**

MAC address display

**IP 010**  
**.122.0**  
**77.110**

IP address display

**Sub255**  
**.255.2**  
**40.0**

Subnet display

**Gat010**  
**122.0**  
**61.001**

Gateway display

**SSID**  
**CPT**

Display SSID. Only a maximum of the first 12 characters are displayed.

**N: 34**  
**S: -60**

When the start button is pressed, the current wireless signals are displayed.

47BCX.../47BCY..., 47BTX.../47BTY...:

N = Signal strength (%)

S = Signal strength (dBm)

### 7.3.9 868 MHz wireless transmission submenu – only for types of the 47BCR.../47BTR... series

The 868 MHz RF settings submenu shows the settings being used. If no actions are carried out, the menu is automatically exited after 60 seconds.

Programming the RF settings is described in the control programming manual.

**Versio**  
**B868**  
**MC-tin**

Displays the installed software version of the wireless module.

**Chan-**  
**nel**  
**1/3**

Displays the radio channel being used and allows you to configure settings. With 868 MHz, you can select channel 1 – 3.

- <F1>: Activate a lower channel.
- <F2>: Activate a higher channel.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

#### NOTE



The channel must match the set channel of the base station.

**Networ**  
**ID**  
**1/16**

Defines the network identification. You can operate no more than 4 tools per network ID.

- <F1>: Activate a lower network ID.
- <F2>: Activate a higher network ID.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

#### NOTE



The network ID must match the set network ID of the base station.

**Tool**  
**ID**  
**1/4**

Displays the tool ID and allows you to configure settings. You can select a channel from 1 – 4.

- <F1>: Activate a lower network ID.
- <F2>: Activate a higher network ID.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

#### NOTE



Each tool can be used only once for each base station.

**Power  
25 mW**

Displays the transmission power and allows you to configure settings.

- <F1>: Activate a lower transmission power.
- <F2>: Activate a higher transmission power.
- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

For 868 MHz, the maximum transmission power depends on the selected channel. If channel 1 is selected, you can choose between 1, 5, 10, and 25 mW for the transmission power. If channel 2 or 3 is selected, you can choose either 1 or 5 mW for the transmission power.

- Press the start button or <F2> longer than 2 seconds to accept the select and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

### 7.3.10 Wireless transmission RF15.4 submenu only available on models from series 47BCZ.../47BTZ...

The RF15.4 wireless transmission submenu shows the settings being used. If no actions are carried out, the menu is automatically exited after 60 seconds.

Programming the wireless settings is described in the controller programming manual.

**RF15.4  
Chan-  
nel**

Displays the radio channel being used and allows you to configure settings.  
Channel 11 – 26 as per IEEE802.15.4 are available for selection (2.4 GHz range).

**Chan-  
nel  
21**

Displays the radio channel being used and allows you to configure settings.

- Start button>: show channel (default: 21).
- <F1>: Activate a lower channel.
- <F2>: Activate a higher channel.
- Press the start button or <F2> longer than 2 seconds to accept the selection and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

**NOTE**

The channel must match the set channel of the base station.

**RF15.4  
PAN**

Defines the network identification. You can operate no more than 4 tools per PAN ID.

- Start button>: show PAN ID (default: C007).



**PAN**

1234

The PAN ID consists of 4 hexadecimal numbers.  
A maximum of 65 535 different PAN IDs are therefore available.  
Cursor flashes under the number to be modified:

- <F1>: lower number
  - <F2>: higher number.
  - Press the start button:  
the selected number is adopted and the cursor moves to the next number.
  - Press <F1> longer than 2 seconds  
to delete the selection and exit the menu.
  - Press <F2> longer than 2 seconds  
to confirm the selection and exit the editing field.
- Once all 4 numbers are confirmed, the editing field closes.

**NOTE**

The PAN ID must match the preset PAN ID of the base station.

**RF15.4****Tool ID**

Displays the tool ID and allows you to configure settings.  
You can select a channel from 1 – 4.

- Start button>: show tool ID (default: 1).
- <F1>: Activate a lower network ID.
- <F2>: Activate a higher network ID.
- Press the start button or <F2> longer than 2 seconds  
to accept the selection and display the next menu item.
- Press <F1> longer than 2 seconds  
to delete the selection and exit the menu.

**NOTE**






Each tool can be used only once for each base station.

**RF15.4****Power**

Displays the transmission power and allows you to configure settings.  
5 transmission power settings are available.

**Power**

- Displays the transmission power and allows you to configure settings.
- <Start button>: show power settings on display (default: maximum).
  - <F1>: Activate a lower transmission power.
  - <F2>: Activate a higher transmission power.
  - Press the start button or <F2> longer than 2 seconds  
to accept the selection and display the next menu item.
  - Press <F1> longer than 2 seconds  
to delete the selection and exit the menu.

Display	Transmission power dBm	Transmission power mW
	0	1
	-2	0.63
	-4	0.40
	-6	0.25
	-10	0.10

**RF15.4**  
**AES**

Displays the data transmission encryption.  
 AES = Advanced Encryption Standard, code length = 128 bit.

**AES**  
**On**

*On* and *Off* are available for selection.

- Start button>: show encryption (default: off).
- <F1>: Activate *On*.
- Press the start button or <F2> longer than 2 seconds to accept the selection and display the next menu item.
- Press <F1> longer than 2 seconds to delete the selection and exit the menu.

**NOTE**

*On* / *Off* must match the preset PAN ID of the base station.

**S:0013**  
**A20xxx**  
**xxxxxx**

Displays the wireless module serial number.

**Vers.**  
**10A5**  
**1707**

Displays the firmware and hardware version of the RF15.4 module.  
 This serial number is also the MAC address of the wireless module.

**RF15.4  
Signal**

Displays the current RSSI value.

RSSI = Received Signal Strength Indication, indication of the reception strength of wireless communication systems.

The lower the RSSI value, the poorer the signal strength.

Value range: 0 (very good) to -100 (no reception).

If the tool is positioned in the direct vicinity of the base station and the transmission power is preset to maximum, the RSSI value should be between -30 and -55. Data transmission become unreliable if the RSSI value falls below -85.

### 7.3.11 LMC submenu

**MAC  
00302e  
e162f8**

→ MAC address display.

**S: 5800  
00008D  
54C823**

→ Displays the LMC serial number.

## 7.4 System error messages

### NOTE



If an error is displayed, fastening is disabled until the error is acknowledged with the left-hand button on the tool. In the event of serious hardware errors, the tool is not enabled again even after the error is acknowledged, and must be returned to the manufacturer for repair.

**Servo  
Error  
Init**

Initialization error in tool servo.

- Remove the battery and then re-insert it. If this does not help:
- Return tool to *Sales & Service Centers* for repair.

**Servo  
Error  
PWM**

Speed specification from the measuring board to the servo is faulty.

- Remove the battery and then re-insert it. If this does not help:
- Return tool to *Sales & Service Centers* for repair.

**Servo  
Error  
IIT**

Too much power is being demanded from the tool.

- Switch the tool off for a time so that it can cool down.
- Increase the cycle time, reduce the fastening time or the torque.

**Servo  
Error  
IOFF**

The servo's current sensor is detecting a current offset error.

- Return tool to *Sales & Service Centers* for repair.

<b>Servo Error Other</b>	Collective servo error caused by hardware. → Return tool to <i>Sales &amp; Service Centers</i> for repair.
<b>Servo Error IP</b>	The current set point has been exceeded. There may be a short circuit. → Return tool to <i>Sales &amp; Service Centers</i> for repair.
<b>Servo Error Temp &gt;</b>	The servo has overheated. → Switch the tool off for a time so that it can cool down. → Increase the cycle time, reduce the fastening time or the torque.
<b>Servo Error TempM&gt;</b>	The tool motor has overheated. → Switch the tool off for a time so that the motor can cool down. → Increase the cycle time, reduce the fastening time or the torque.
<b>Servo Error Voltag</b>	Operating voltage is outside the admissible range. → Change the battery. If this does not help: → Return tool to <i>Sales &amp; Service Centers</i> for repair.
<b>Servo Error Curr&gt;</b>	Current at servo output stage is too high. There may be a short circuit. → Return tool to <i>Sales &amp; Service Centers</i> for repair.
<b>Servo Error Angle</b>	Tool angle encoder is sending incorrect signals to the servo amplifier. → Return tool to <i>Sales &amp; Service Centers</i> for repair.
<b>Low voltag warnin</b>	Warns that battery is running low. → Recharge battery or replace it with one that is already charged.
<b>Servo Error Ande80</b>	Servo firmware is not compatible with measuring board software. → Update servo firmware.
<b>Tool Error Counte</b>	The rundown counter could not be read or written to. → Return tool to <i>Sales &amp; Service Centers</i> for repair.

**Tool  
Error  
Ident**

Tool memory could not be read.

→ Return tool to *Sales & Service Centers* for repair.

**Tool  
Error  
Start**

Two-stage start button defective.

→ Return tool to *Sales & Service Centers* for repair.

**Transd  
Ref.V.  
Error**

Transducer reference voltage error.

→ Return tool to *Sales & Service Centers* for repair.

**Trans  
CAL  
Error**

Transducer calibration voltage error.

Tool was not discharged at time of calibration.

→ Allow tool to discharge and try again. If this does not help:

→ Return tool to *Sales & Service Centers* for repair.

**Trans  
Off  
Error**

Transducer offset voltage error.

Tool was not discharged at time of calibration.

→ Allow tool to discharge and try again. If this does not help:

→ Return tool to *Sales & Service Centers* for repair.

**Unknow  
Error**

General collective error.

Return tool to *Sales & Service Centers* for repair.

**Batter  
empty  
-> off**

The battery is empty.

→ Replace the battery

**No  
result**

The rundown evaluation torque was not reached.

→ Repeat the current rundown.



## 8 Maintenance

### 8.1 Cleaning instructions

For tools with a built-in barcode scanner, the window must be free of dirt.

- Clean it regularly—or immediately, if it becomes dirty—using a damp cloth and a conventional window cleaner. Do not use acetone for cleaning. A dirty window may make it impossible to read barcodes.

### 8.2 Service schedule

Only personnel authorized by Cooper Power Tools are permitted to perform maintenance. Regular maintenance reduces operating faults, repair costs and downtime. In addition to the following service plan, implement a safety-related maintenance program that takes the local regulations for repair and maintenance for all operating phases of the tool into account.

#### CAUTION!



Danger of injury due to unintentional activation  
– before service - disconnect the 47BT/BC from power supply.




After ... fastening cycles <sup>1)</sup>	Actions
Frequent monitoring	47BT: → At daily use grease gears in head every other day using the grease fitting, see 10.2 Head T2X, page 52. 10.3 Head T3X, page 54 10.4 Head T4X, page 56 → Disassemble head weekly. Use grease-dissolving agent to clean the parts. Check the components for wear and replace if necessary and then regrease.
100.000	→ Check to ensure the accu adapter, scanner and radio adapter are seated securely. → Check the tool and accu for damage. → Check to ensure scanner window is transparent. → Check to ensure accu contacts are clean. → Check to ensure battery charger is clean. 47BC: → Disassemble head. Use grease-dissolving agent to clean the parts. Check the components for wear and replace if necessary and then regrease, see 10 Spare parts, page 49.
500,000	→ Disassemble gear. Use grease-dissolving agent to clean the parts. Check the components for wear and replace if necessary and then regrease, see 10.6 Gear + Head C1, C3, page 60. → Check accu guide, locking mechanism and contacts for wear and replace if necessary. → Replace accu if necessary (after 800 load cycles)
1 million	→ Recommendation at least once a year: Recalibrate tool, see 12.1 Recalibration, page 78.
2.5 million	→ General overhaul. Send it to <i>Sales &amp; Service Centers</i> .

1) For the number of fastening cycles, refer to the counter display in 7.3.4 Administration submenu, page 27

### 8.3 Lubricants

For smooth function and a long service life, use of the correct grease types according to the table is essential.

**Grease lubricants according to DIN51502 /ISO3498**

Order no. 	Packing unit [ kg ]	DIN 51502		 Synthetic Lubricants	Saunders Enterprises, Inc.
933027	1	KP1K	Microlube GL 261	–	–
540395	0,06	–	–	–	Magnalube-G
541444	0,08	–	–	Rheolube 363AX-1	–
541445	0,45	–	–	Rheolube 363AX-1	–



## 9 Troubleshooting

Problem	Possible cause	Action
<b>General – Tool</b>		
Tool does not start if reverse switch is active.	Backoff speed parameter is set to 0 rpm.	→ Adjust the backoff speed value in the <i>Standard Application Builder</i> screen of the controller.
Tool light not active.	Deactivated by parameter setting.	→ Adjust the parameter for <i>Tool light</i> in the <i>Advanced Application Builder/System Settings</i> screen of the controller.
Operating menu of tool not, or only partly, enabled.	Disabled by parameter setting.	→ Activate the <i>Enable Tool menu</i> parameter in the <i>Advanced Application Builder/System Settings</i> screen of the controller.
Free speed parameter value is not reached.	Battery voltage is too low.	→ Use a fully charged battery.
Could not reach the expected number of rundowns with one battery charge.	Battery is not fully charged.	→ Use only fully charged batteries.
	Low voltage warning is not set to minimum value.	→ In the <i>Tool Setup</i> screen of the controller, set the value for <i>Low Level</i> to 17.5 Volts.
	During tightening sequence, high torque is required, for example with coated screws.	→ If high torque is required for a longer period of time, e.g. for several turns, then the number of rundowns with one battery charge is significantly reduced.
	Battery has already cycled too often.	→ After 800 charge cycles the capacity is reduced to about 60%.

Problem	Possible cause	Action
<b>Infrared data communication between controller and tool</b>		
No infrared data communication between controller and tool.	Wrong port is selected for connection with the controller.	→ Check the port settings for infrared (IRDA) communication in the <i>Communication/Tool</i> screen of the controller. <b>Note:</b> If the settings are changed, it is necessary to press <i>Accept &lt;F1&gt;</i> in order to apply the settings.
		→ Check that the tool holder is connected to selected port.
	Selected port is used for serial data transmission.	→ In the <i>Communication/Data Transmission</i> screen of the controller, check whether serial data transmission is enabled (the protocol is set to anything except NONE), and whether the same port is being used. If so, select a different port or disable serial data transmission. Check all available tools as necessary. The same port cannot be used for serial data transmission and infrared data communication with the tool.

Problem	Possible cause	Action
<b>WLAN data communication between controller and tool</b>		
No WLAN communication between controller and tool.	IP address of tool is not entered correctly on the controller.	→ Check in the <i>Communication/Tool</i> screen of the controller that the IP address of the tool is entered in the <i>RF Tool IP</i> field. The IP address of the tool is displayed on the tool in the <i>WLAN RF settings</i> submenu. <b>Note:</b> If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.
	Tool is not configured with correct WLAN parameter values.	→ Configure the WLAN settings of the tool in the <i>Communication/Tool</i> screen of the controller via infrared communication.
	WLAN network settings of the controller and the access point differ.	→ In the <i>Communication/Tool</i> screen of the controller, check that the settings of the access point match the wireless network settings (Network name, Security, Network key).
	MAC address filter of the access point is active.	→ Add the MAC address of the tool to the address list of the access point. The MAC address of the tool is displayed on the corresponding label above the battery, and in the <i>WLAN RF settings</i> submenu.
	A firewall blocks port 4001.	→ Reconfigure the firewall so that the specific IP/MAC address of the tool can use port 4001.
	The RF channel at the access point is out of the tool-supported range.	→ Change the channel setting of the access point to a channel between 1 and 11.
	Tool is already assigned to a different controller.	→ Check whether any other controller has already established a connection to this tool. That means another controller use same IP address.
WLAN communication partly interrupted.	Distance between access point and tool is too great.	→ Check the signal strength in the <i>WLAN RF settings</i> submenu of the tool. For stable communication, the first value (N) should be greater than 15. If the value is less than 15, move the access point closer to the tool.
	Tool is also assigned to a different controller.	→ Check whether this tool (IP address) is assigned to any other controller. If so, delete the assignment on the other controller. A tool can only be assigned to one controller.
	Too much traffic on the wireless network.	→ Reduce traffic on the wireless network. Deactivate torque plot data transmission.

Problem	Possible cause	Action
<b>868 MHz data communication between controller and tool</b>		
No serial communication is possible between the controller and the base station. (Error displayed after <i>Accept</i> <F1> is pressed in <i>Communication/Tool</i> .)	Wrong serial cable is used.	→ Use a null modem cable (crossed).
	Wrong port is selected for connection with the controller.	→ In the <i>Communication/Tool</i> screen of the controller, check the port settings for <i>RF Serial</i> . <b>Note:</b> If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.
		→ Check that the serial cable is connected to the selected port.
	Selected port is used for serial data transmission.	→ In the <i>Communication/Data Transmission</i> screen of the controller, check whether serial data transmission is enabled (the protocol is set to anything except NONE), and whether the same port is being used. → If so, select a different port or disable serial data transmission. → Check all available tools as necessary. The same port cannot be used for serial data transmission and data communication with base station tool.
	Power outlet not active.	→ Check the voltage at the outlet socket where the base station is plugged in for power supply.

Problem	Possible cause	Action
<b>868 MHz data communication between controller and tool</b>		
No Ethernet communication is possible between the controller and the base station. (Error displayed after <i>Accept</i> <F1>) is pressed in <i>Communication/Tool</i> .)	Wrong Ethernet cable is used.	→ A crossover cable is required if the base station is directly connected to the controller. If the base station is connected to a switch, a standard patch cable is required.
	IP address of the base station is not entered correctly on the controller.	→ In the <i>Communication/Tool</i> screen of the controller, check that the IP address of the base station is entered in the <i>RF Base station</i> field. If the IP address of the base station is unknown use the <i>Network Enabler Administrator</i> program, which is included with each base station. <b>Note:</b> If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.
	IP address and subnet mask are not in the same range.	Without network administration, it is necessary for the IP address and subnet mask of the controller to be in the same range as those of the base station. → Enter the same subnet mask for both IP addresses and use the same first three numbers for the IP addresses on both the controller and base station. E.g.: IP address controller: 192.168.1.xxx IP address base station: 192.168.1.xxx Subnet mask: 255.255.255.000
	A firewall blocks port 4001.	→ Reconfigure the firewall so that the specific IP/MAC address of the tool can use port 4001.
	Base station is already connected to a different controller.	→ Check whether any other controller has already used the same IP address for RF communication ( <i>RF Base station</i> ).
	Power outlet not active.	→ Check the voltage at the outlet socket where the base station is plugged in for power supply.
No 868 MHz data communication is possible between controller and tool.	Settings are not configured correctly.	→ In the <i>Communication/Tool</i> screen of the controller, check that <i>RF settings of the base station</i> correspond to the settings of the tool, which are displayed in the <i>868MHz RF settings</i> submenu of the tool. The settings for <i>Channel</i> , <i>Network ID</i> and <i>Tool ID</i> must match.
	Distance between base station and tool is too great.	If channel 1 is selected, the distance can be up to 98.4 ft (30 m). If channel 2 or 3 is selected, the distance can be up to 32.8 ft (10 m). → Increase output power on base station and on the tool, or move the base station closer to the tool.

Problem	Possible cause	Action
<b>868 MHz data communication between controller and tool</b>		
RF communication is partly interrupted.	Distance between base station and tool is too great.	If channel 1 is selected, the distance can be up to 30 m. If channel 2 or 3 is selected, the distance can be up to 10 m. → Move the tool close to the base station to check whether communication is successful. If so, increase output power on base station and on the tool, or move the base station closer to the tool.
	Output power is too low.	→ Increase the output power of the base station and of the tool. If channel 1 is selected, you can choose up to 25 mW for the output power. If channel 2 or 3 is selected, you can choose 1 mW for the output power of the base station and 5 mW for the output power of the tool.
	Too much traffic on the same channel.	→ Reduce traffic on the wireless network. Deactivate torque plot data transmission.
	Too many tools on the same channel.	→ Use different channels for different base stations.
	Other 868 MHz devices on the same frequency.	→ Use a different channel.
Distance for RF communication is too short	Antenna of the base station is not tightened securely.	→ Manually tighten the base station antenna.
	Output power is too low.	→ Increase the output power of both the base station and the tool. If channel 1 is selected, you can choose up to 25 mW for the output power. If channel 2 or 3 is selected, you can choose 1 mW for the output power of base station and 5 mW for the output power of the tool.
	Location of the base station bad.	→ Move the base station to a location where there is an unobstructed line of view between the base station and the tool.

Problem	Possible cause	Action
<b>RF15.4 data communication between controller and tool</b>		
No serial communication is possible between the controller and the base station. (Error displayed after <i>Accept</i> <F1> is pressed in <i>Communication/Tool</i> .)	Wrong serial cable is used.	→ Use a null modem cable (crossed).
	Wrong port is selected for connection with the controller.	→ In the <i>Communication/Tool</i> screen of the controller, check the port settings for <i>RF Serial</i> . <b>Note:</b> If the settings are changed, it is necessary to press <i>Accept</i> <F1> in order to apply the settings.
		→ Check that the serial cable is connected to the selected port.
	Selected port is used for serial data transmission.	→ In the <i>Communication/Data Transmission</i> screen of the controller, check whether serial data transmission is enabled (the protocol is set to anything except NONE), and whether the same port is being used. → If so, select a different port or disable serial data transmission. → Check all available tools as necessary. The same port cannot be used for serial data transmission and data communication with base station tool.
	Power outlet not active.	→ Check the voltage at the outlet socket where the base station is plugged in for power supply.
No RF15.4 data communication is possible between controller and tool.	Settings are not configured correctly.	→ In the <i>Communication/Tool</i> screen of the controller, check that <i>RF settings of the base station</i> correspond to the settings of the tool, which are displayed in the <i>868MHz RF settings</i> submenu of the tool. The settings for <i>Channel</i> , <i>Network ID</i> and <i>Tool ID</i> must match.
	Distance between base station and tool is too great.	If channel 1 is selected, the distance can be up to 98.4 ft (30 m). If channel 2 or 3 is selected, the distance can be up to 32.8 ft (10 m). → Increase output power on base station and on the tool, or move the base station closer to the tool.

Problem	Possible cause	Action
<b>RF15.4 data communication between controller and tool</b>		
RF communication is partly interrupted.	Distance between base station and tool is too great.	If channel 1 is selected, the distance can be up to 30 m. If channel 2 or 3 is selected, the distance can be up to 10 m. → Move the tool close to the base station to check whether communication is successful. If so, increase output power on base station and on the tool, or move the base station closer to the tool.
	Output power is too low.	→ Increase the output power of the base station and of the tool. If channel 1 is selected, you can choose up to 25 mW for the output power. If channel 2 or 3 is selected, you can choose 1 mW for the output power of the base station and 5 mW for the output power of the tool.
	Too much traffic on the same channel.	→ Reduce traffic on the wireless network. Deactivate torque plot data transmission.
	Too many tools on the same channel.	→ Use different channels for different base stations.
	Other 2,4 GHz devices on the same frequency.	→ Use a different channel.
Distance for RF communication is too short	Output power is too low.	→ Increase the output power of both the base station and the tool.
	Location of the base station bad.	→ Move the base station to a location where there is an unobstructed line of view between the base station and the tool.

Problem	Possible cause	Action
<b>Barcode scanner on tool</b>		
Barcode scanner does not activate when the start switch is pressed.	Parameter for Part-ID is not set to Enable Interlocked.	→ In the <i>Communication/Part-ID</i> screen of the controller, check that the Enable parameter is set to Enable Interlocked.
	Barcode has already been read.	→ Activate a further read cycle in the scanner submenu.
		→ Press the left function key on the tool in order to activate another read cycle. <b>Note:</b> Only available if the parameter for <F1> button on Tool is set to Read barcode in the <i>Advanced Application Builder / System Settings</i> screen of the controller.
Barcode is not read.	Barcode scanner window is not clean.	→ Clean the window by using a damp cloth and a conventional window cleaner.
	Barcode type is disabled by parameter setting.	→ In the <i>Communication/Part-ID</i> screen, check that parameter Barcode Type is set to the appropriate barcode type.





## 10 Spare parts

### Note




Use only original CLECO spare parts. Failure to comply can result in reduced power and increased service requirements. If spare parts not manufactured by us are installed, the tool manufacturer is entitled to deny any warranty claims.

## 10.1 Gear + Head T2X, T3X, T4X

\*

Typ	40
47BT...20T2	T2X
47BT...30T3	T3X
47BT...40T4	T4X

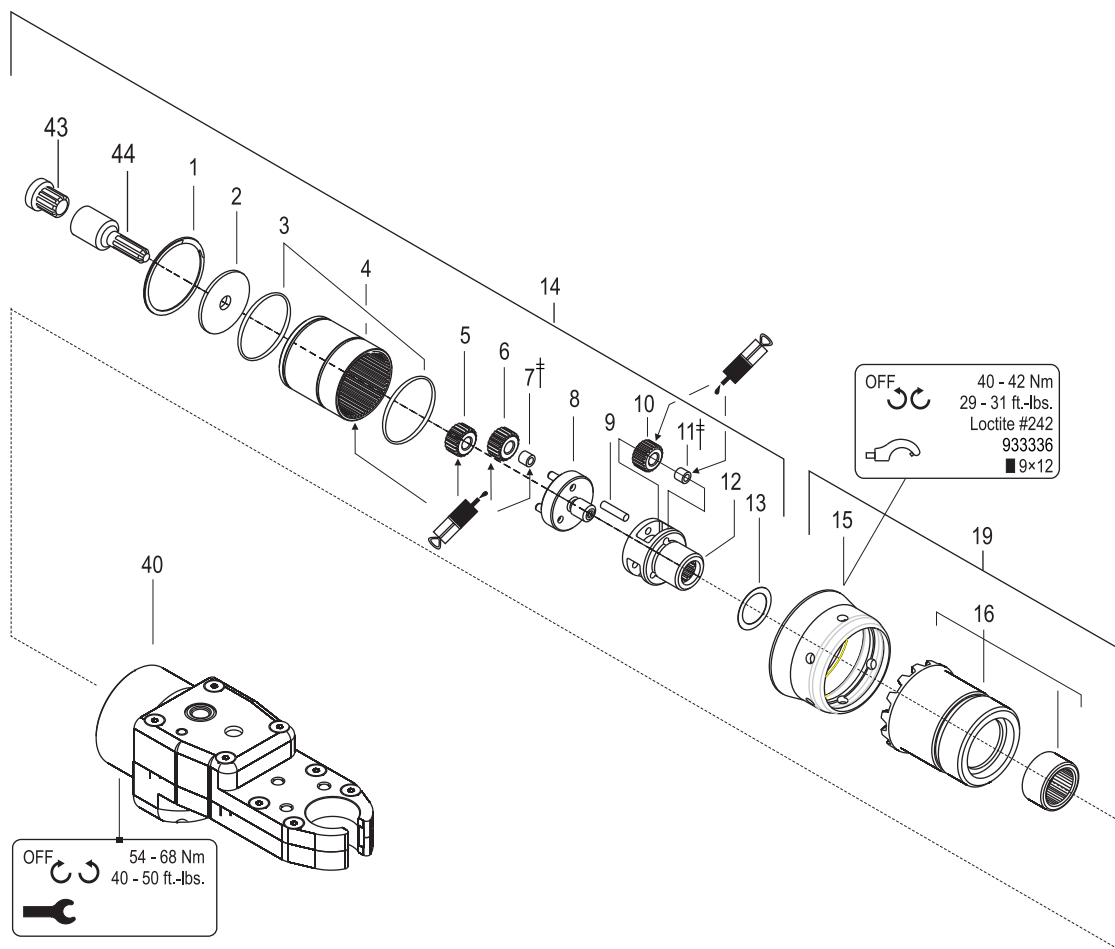

933027  
8.3 Lubricants, page 40

† Changes made since last issuance 2009-05

Index	1)	2)	•	Description	3)
1	800116	1	2	circlip	25,98X0,94 IR
2	541887	1		washer	
3	542724	2	6	o-ring	28,24X 0,78
4	542722	1		gear ring	
5	541899	1	2	pinion gear	
6	541894	3	6	idler gear	
7	923095	3	6	needle bearing	3, X 5, X 7,
8	542230	1		planet carrier	
9	541888	3	6	needle roller	
10	541894	3	6	idler gear	
11	923095	3	6	needle bearing	3, X 5, X 7,
12	542079	1		planet carrier	
13	502983	1		thrust washer	15,88X 28,58X 1,56
14	301765	1		gear	
15	935257	1		union nut	
16	207493	1		adapter	
19	301887	1		adapter asm.	
40	*	1		spade tip	
43	541044	1		pinion gear	
44	541898	1	1	adapter shaft	

1) Order no.


2) Quantity

3) Dimensions

● Recommended spare part for every 5 tools

\* see table, Page 50

## 10.2 Head T2X

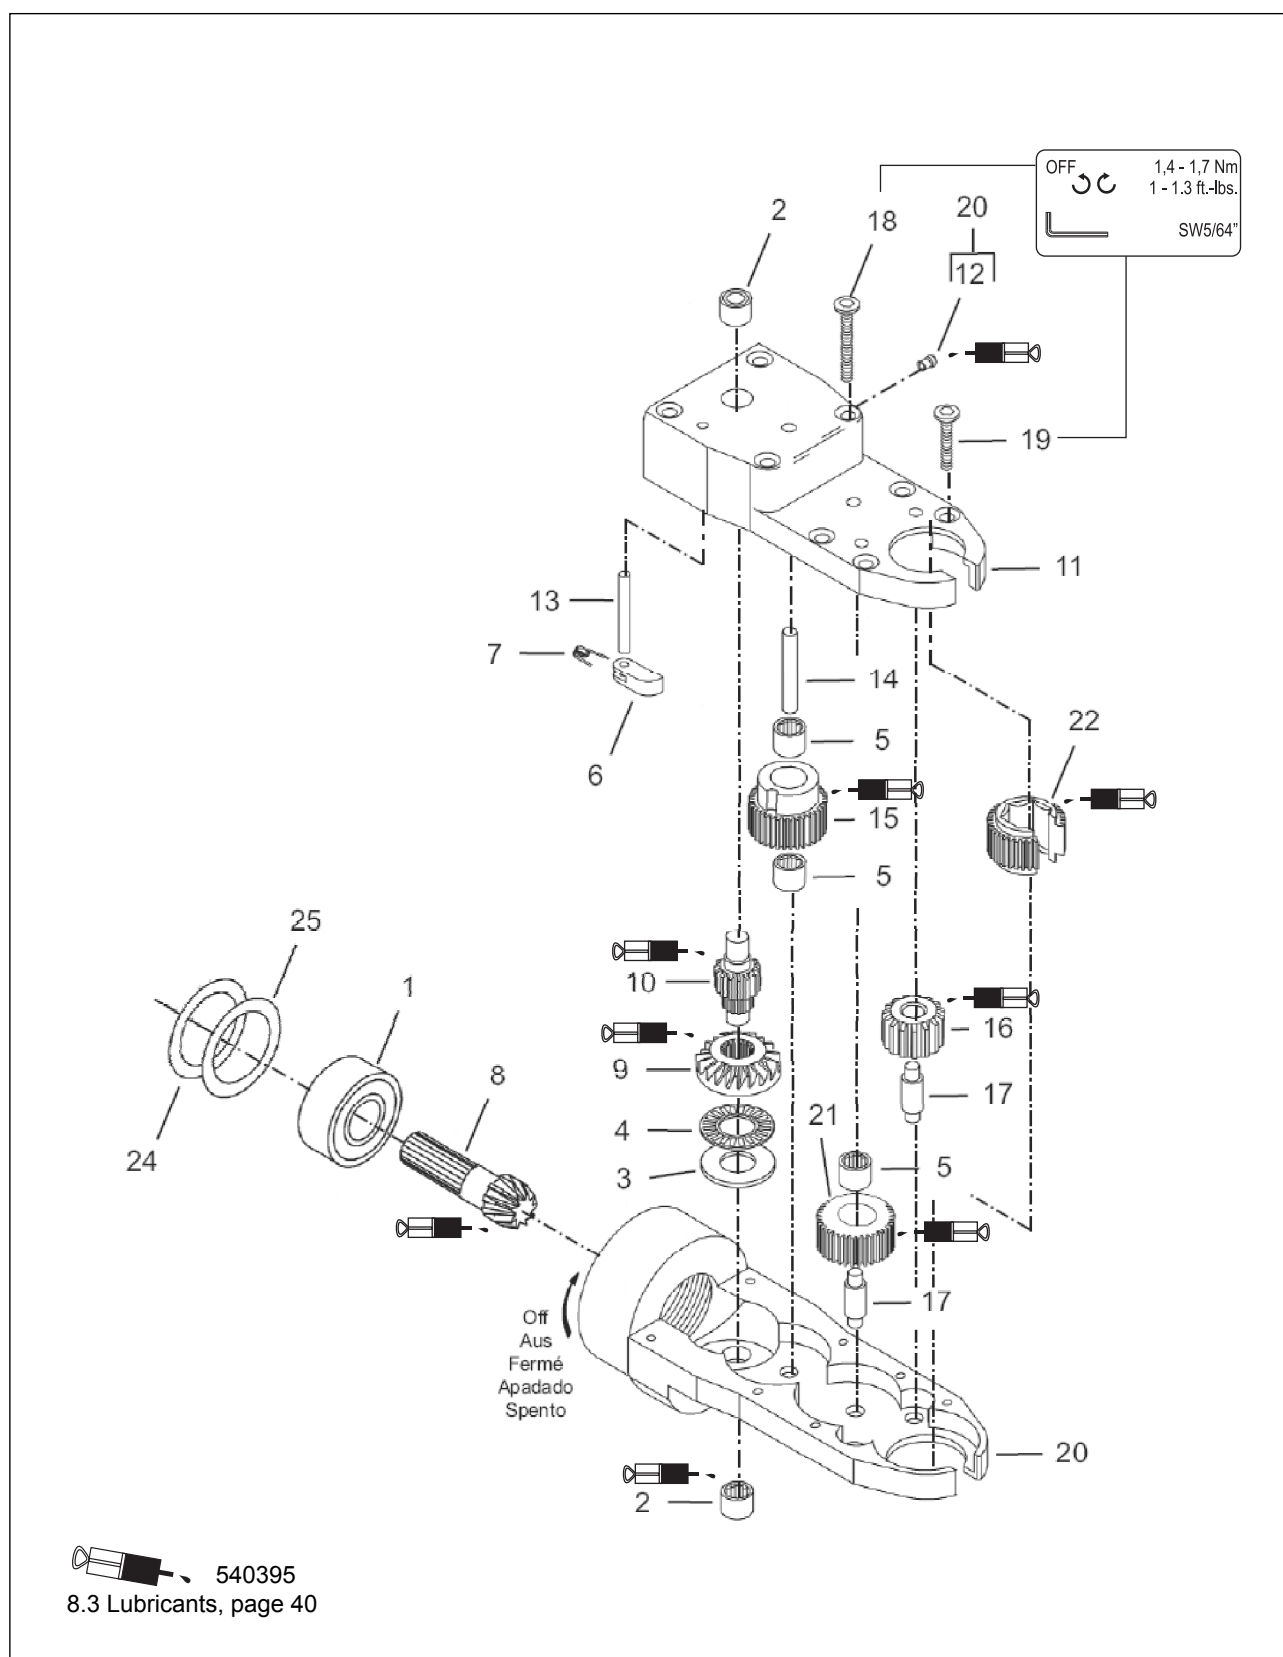

Index	1)	2)	•	Description	3)
1	500	1	2	ball bearing	
2	500538	2	4	needle bearing	
3	303161	1		thrust race	9,58X 20,37X 0,79
4	249145	1	2	thrust bearing	
5	1011671	1	6	Needle Bearing	
6	542958	1		Ratchet	
7	542922	1	3	Spring	
8	537316	1	1	pinion gear	
9	537385	1	1	gear	
10	537386	1	1	bevel gear spindle	
11	542931	1		Cover	
12	1463	1	2	Grease Fitting	
13	543205	1	2	Dowel Pin (4 mm Dia. x 32mm)	4 x 32
14	543209	1	2	Dowel Pin (1/4" Dia. x 15/16")	6,4 x 23,8
15	542959	1	1	Ratchet Gear	
16	537303	2	2	Idler Gear	
17	542924	3	3	Pin	
18	543202	4	4	Flat Head Screw	#6--32 x 25,4
19	543203	4	4	Flat Head Screw	#6--32 x 12,7
20	542895	1		Housing	
21	542962	1	1	Idler Gear	
22	*	1	1	output gear	
24	541426	4**	8	Shim	0,05
25	541427	2**	4	Shim	0,25

1) Order no.

2) Quantity


3) Dimensions

● Recommended spare part for every 5 tools

\* The ordered socket is assembled factory-set. See 10.5 Socket for head T2X, T3X, T4X, optional, page 58

\*\* Not included in T2X, quantity varies due to production

### 10.3 Head T3X

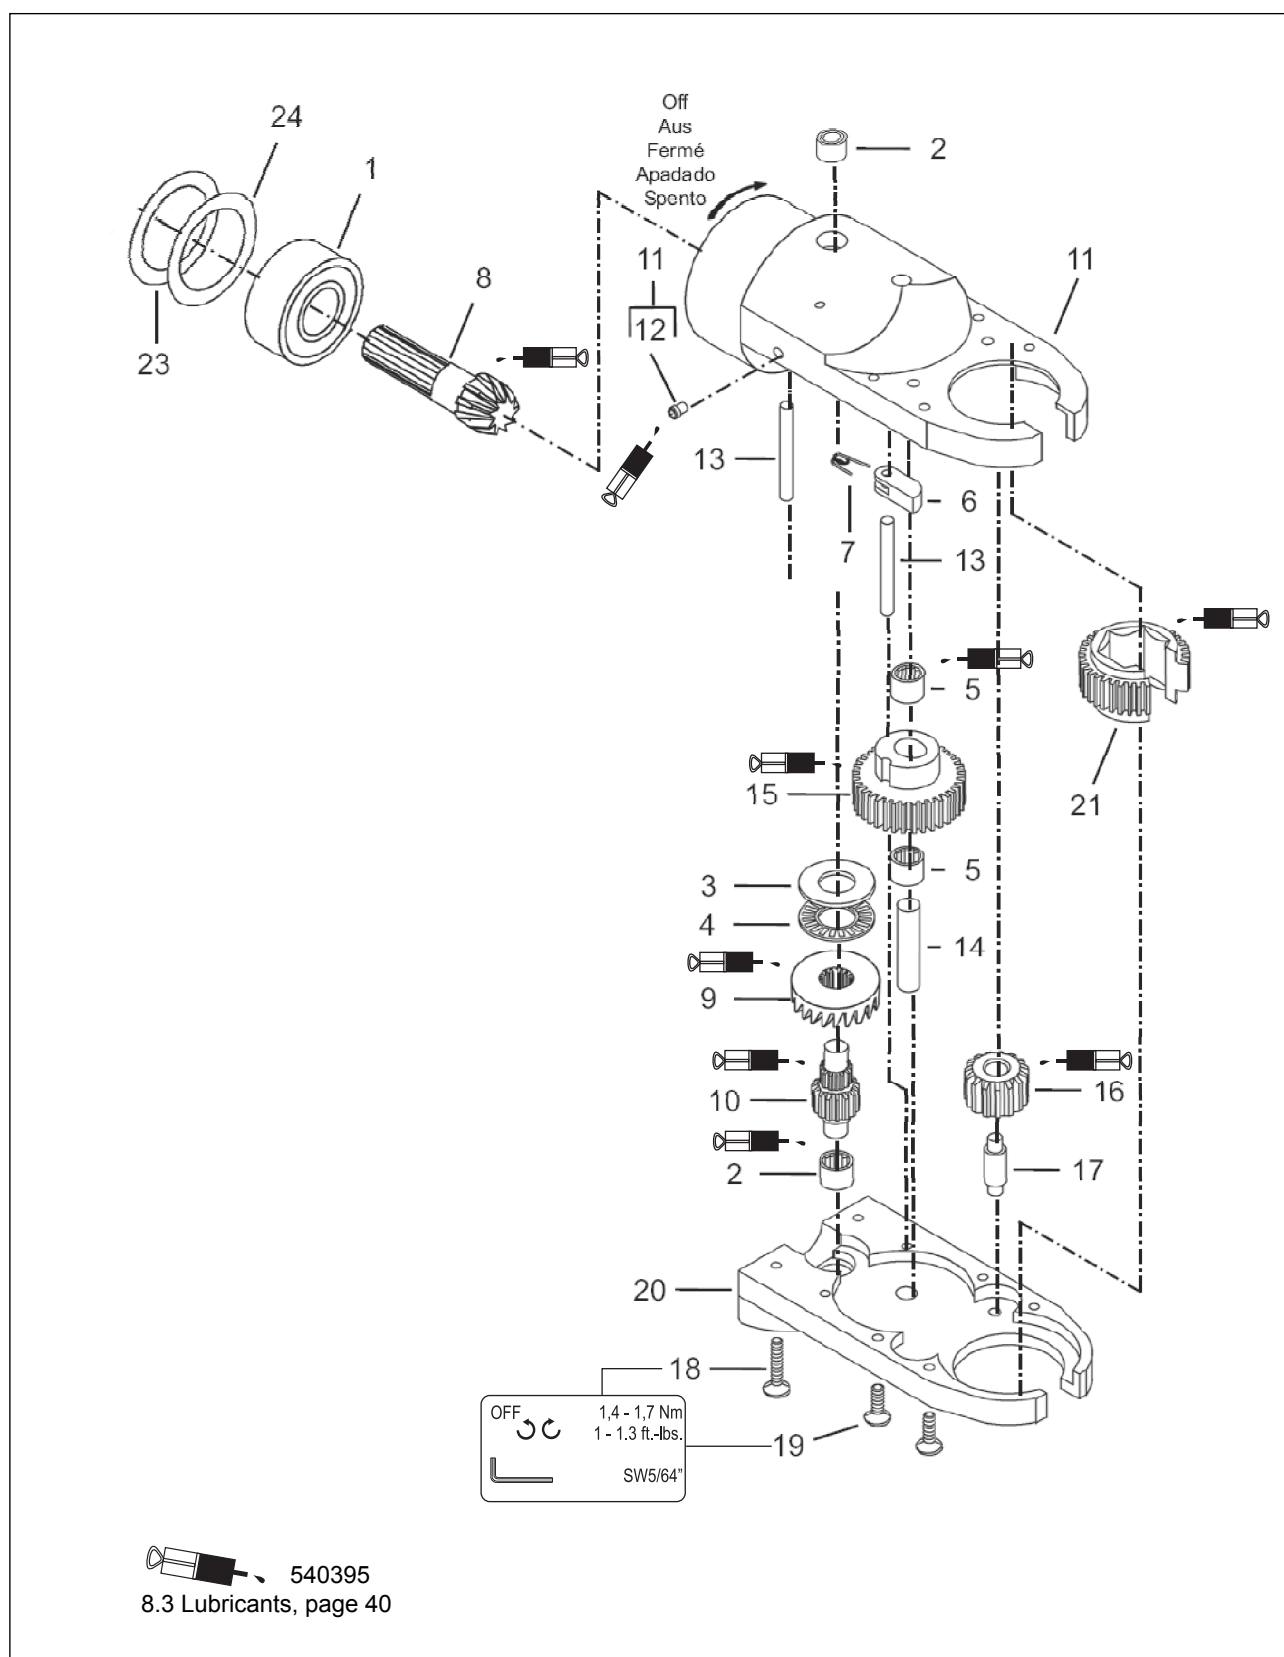

Index	1)	2)	•	Description	3)
1	500	1	2	ball bearing	
2	500538	2	4	needle bearing	
3	303161	1		thrust race	9,58X 20,37X 0,79
4	249145	1	2	thrust bearing	
5	1011671	1	4	Needle Bearing	
6	542921	1		Ratchet	
7	542922	1	3	Spring	
8	537316	1	1	pinion gear	
9	537385	1	1	gear	
10	537386	1	1	bevel gear spindle	
11	542917	1		Housing	
12	1463	1	2	Grease Fitting	
13	543207	2	4	Dowel Pin	
14	543208	1	2	Dowel Pin	
15	542960	1	1	Ratchet Gear	
16	537303	2	2	Idler Gear	
17	542924	2	2	Pin	
18	543202	4	4	Flat Head Screw	#6-32 x 25,4
19	543204	4	4	Flat Head Screw	#6-32 x 15,9
20	542918	1		Housing	
21	*	1	1	output gear	
24	541426	4**	8	Shim	0,05
25	541427	2**	4	Shim	0,25

1) Order no.

2) Quantity

3) Dimensions

● Recommended spare part for every 5 tools

\* The ordered socket is assembled factory-set. See 10.5 Socket for head T2X, T3X, T4X, optional, page 58

\*\* Not included in T3X, quantity varies due to production





Index	1)	2)	•	Description	3)
1	500	1	2	ball bearing	
2	500538	2	4	needle bush	
3	303161	1		thrust washer	9,58X 20,37X 0,79
4	249145	1	2	axial needle bearing	
5	1010920	1	4	needle bearing	
6	542929	1		ratchet	
7	542922	1	3	compression spring	
8	1011671	2	4	needle sleeve	6,35X 11,13X 7,92
9	537316	1	1	pinion gear	
10	537385	1	1	gear	
11	537386	1	1	bevel gear spindle	
12	542926	1		housing	
13	1463	1	2	grease fitting	
14	543206	1	2	dowel pin	
15	542961	1	1	ratchet gear	
16	542928	2	2	idler gear	
17	542924	2	2	pin	
18	543202	2	4	metering screw	
19	543204	4	4	countersunk screw	
20	542925	1		cover	
21	543205	1	2	pin	
22	*	1	1	output gear	
24	541426	4**	8	Shim	0,05
25	541427	2**	4	Shim	0,25

1) Order no.

2) Quantity






3) Dimensions






! Recommended spare part for every 5 tools

\* The ordered socket is assembled factory-set. See 10.5 Socket for head T2X, T3X, T4X, optional, page 58

\*\* Not included in T4X, quantity varies due to production

## 10.5 Socket for head T2X, T3X, T4X, optional

Index	Hexagon socket size					
		Flush	Extended 1/4" (6,35 mm)	Extended 1/2" (12,7 mm)	Extended 3/4" (19 mm)	Extended 1" (25,4 mm)
Head T2X						
22	1/4"	KS2EA0...	KS2EA2...	KS2EA4...	KS2EA6...	KS2EA8...
	5/16"	KS2EB0...	KS2EB2...	KS2EB4...	KS2EB6...	KS2EB8...
	3/8"	KS2EC0...	KS2EC2...	KS2EC4...	KS2EC6...	KS2EC8...
	7/16"	KS2ED0...	KS2ED2...	KS2ED4...	KS2ED6...	KS2ED8...
	1/2"	KS2EE0...	KS2EE2...	KS2EE4...	KS2EE6...	KS2EE8...
	7 mm	KS2MA0...	KS2MA2...	KS2MA4...	KS2MA6...	KS2MA8...
	8 mm	KS2MB0...	KS2MB2...	KS2MB4...	KS2MB6...	KS2MB8...
	9 mm	KS2MC0...	KS2MC2...	KS2MC4...	KS2MC6...	KS2MC8...
	10 mm	KS2MD0...	KS2MD2...	KS2MD4...	KS2MD6...	KS2MD8...
	11 mm	KS2ME0...	KS2ME2...	KS2ME4...	KS2ME6...	KS2ME8...
	12 mm	KS2MF0...	KS2MF2...	KS2MF4...	KS2MF6...	KS2MF8...
	13 mm	KS2MG0...	KS2MG2...	KS2MG4...	KS2MG6...	KS2MG8...
Head T3X						
21	3/8"	KS3EC0...	KS3EC2...	KS3EC4...	KS3EC6...	KS3EC8...
	7/16"	KS3ED0...	KS3ED2...	KS3ED4...	KS3ED6...	KS3ED8...
	1/2"	KS3EE0...	KS3EE2...	KS3EE4...	KS3EE6...	KS3EE8...
	9/16"	KS3EF0...	KS3EF2...	KS3EF4...	KS3EF6...	KS3EF8...
	5/8"	KS3EG0...	KS3EG2...	KS3EG4...	KS3EG6...	KS3EG8...
	11/16"	KS3EH0...	KS3EH2...	KS3EH4...	KS3EH6...	KS3EH8...
	3/4"	KS3EI0...	KS3EI2...	KS3EI4...	KS3EI6...	KS3EI8...
	10 mm	KS3MD0...	KS3MD2...	KS3MD4...	KS3MD6...	KS3MD8...
	11 mm	KS3ME0...	KS3ME2...	KS3ME4...	KS3ME6...	KS3ME8...
	12 mm	KS3MF0...	KS3MF2...	KS3MF4...	KS3MF6...	KS3MF8...
	13 mm	KS3MG0...	KS3MG2...	KS3MG4...	KS3MG6...	KS3MG8...
	14 mm	KS3MH0...	KS3MH2...	KS3MH4...	KS3MH6...	KS3MH8...
	15 mm	KS3MI0...	KS3MI2...	KS3MI4...	KS3MI6...	KS3MI8...
	16 mm	KS3MJ0...	KS3MJ2...	KS3MJ4...	KS3MJ6...	KS3MJ8...
	17 mm	KS3MK0...	KS3MK2...	KS3MK4...	KS3MK6...	KS3MK8...
	18 mm	KS3ML0...	KS3ML2...	KS3ML4...	KS3ML6...	KS3ML8...
	19 mm	KS3MM0...	KS3MM2...	KS3MM4...	KS3MM6...	KS3MM8...

Index	Hexagon socket size					
		Flush	Extended 1/4" (6,35 mm)	Extended 1/2" (12,7 mm)	Extended 3/4" (19 mm)	Extended 1" (25,4 mm)
Head T4X						
22	1/2"	KS4EE0...	KS4EE2...	KS4EE4...	KS4EE6...	KS4EE8...
	9/16"	KS4EF0...	KS4EF2...	KS4EF4...	KS4EF6...	KS4EF8...
	5/8"	KS4EG0...	KS4EG2...	KS4EG4...	KS4EG6...	KS4EG8...
	11/16"	KS4EH0...	KS4EH2...	KS4EH4...	KS4EH6...	KS4EH8...
	3/4"	KS4EI0...	KS4EI2...	KS4EI4...	KS4EI6...	KS4EI8...
	13/16"	KS4EJ0...	KS4EJ2...	KS4EJ4...	KS4EJ6...	KS4EJ8...
	7/8"	KS4EK0...	KS4EK2...	KS4EK4...	KS4EK6...	KS4EK8...
	15/16"	KS4EL0...	KS4EL2...	KS4EL4...	KS4EL6...	KS4EL8...
	1"	KS4EM0...	KS4EM2...	KS4EM4...	KS4EM6...	KS4EM8...
	13mm	KS4MG0...	KS4MG2...	KS4MG4...	KS4MG6...	KS4MG8...
	14mm	KS4MH0...	KS4MH2...	KS4MH4...	KS4MH6...	KS4MH8...
	15mm	KS4MI0...	KS4MI2...	KS4MI4...	KS4MI6...	KS4MI8...
	16mm	KS4MJ0...	KS4MJ2...	KS4MJ4...	KS4MJ6...	KS4MJ8...
	17mm	KS4MK0...	KS4MK2...	KS4MK4...	KS4MK6...	KS4MK8...
	18mm	KS4ML0...	KS4ML2...	KS4ML4...	KS4ML6...	KS4ML8...
	19mm	KS4MM0...	KS4MM2...	KS4MM4...	KS4MM6...	KS4MM8...
	20 mm	KS4MN0...	KS4MN2...	KS4MN4...	KS4MN6...	KS4MN8...
	21 mm	KS4MO0...	KS4MO2...	KS4MO4...	KS4MO6...	KS4MO8...
	22 mm	KS4MP0...	KS4MP2...	KS4MP4...	KS4MP6...	KS4MP8...
	23 mm	KS4MQ0...	KS4MQ2...	KS4MQ4...	KS4MQ6...	KS4MQ8...
	24 mm	KS4MR0...	KS4MR2...	KS4MR4...	KS4MR6...	KS4MR8...
	25 mm	KS4MS0...	KS4MS2...	KS4MS4...	KS4MS6...	KS4MS8...
	26 mm	KS4MT0...	KS4MT2...	KS4MT4...	KS4MT6...	KS4MT8...
	27 mm	KS4MU0...	KS4MU2...	KS4MU4...	KS4MU6...	KS4MU8...

To order please add the code for "type attachment" at the last digit:


Example: KS2EA41


for head T2X, Hexagon socket size 1/4", Extension length 1/2", Output type: **Thru Hex**

<div>KSx</div> <div>xx</div> <div>x</div> <div>1</div>					
Head size				Output type	
				0 – Partial Thru Hex	
				1 – Thru Hex	
				2 – Double Thru Hex	
				3 – Partial Thru Double Hex	
Hexagon socket size				Extended	

## 10.6 Gear + Head C1, C3

\*

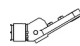Typ	40	
		
47BC...30C1	301071	15°
47BC...30C3	301072	30°

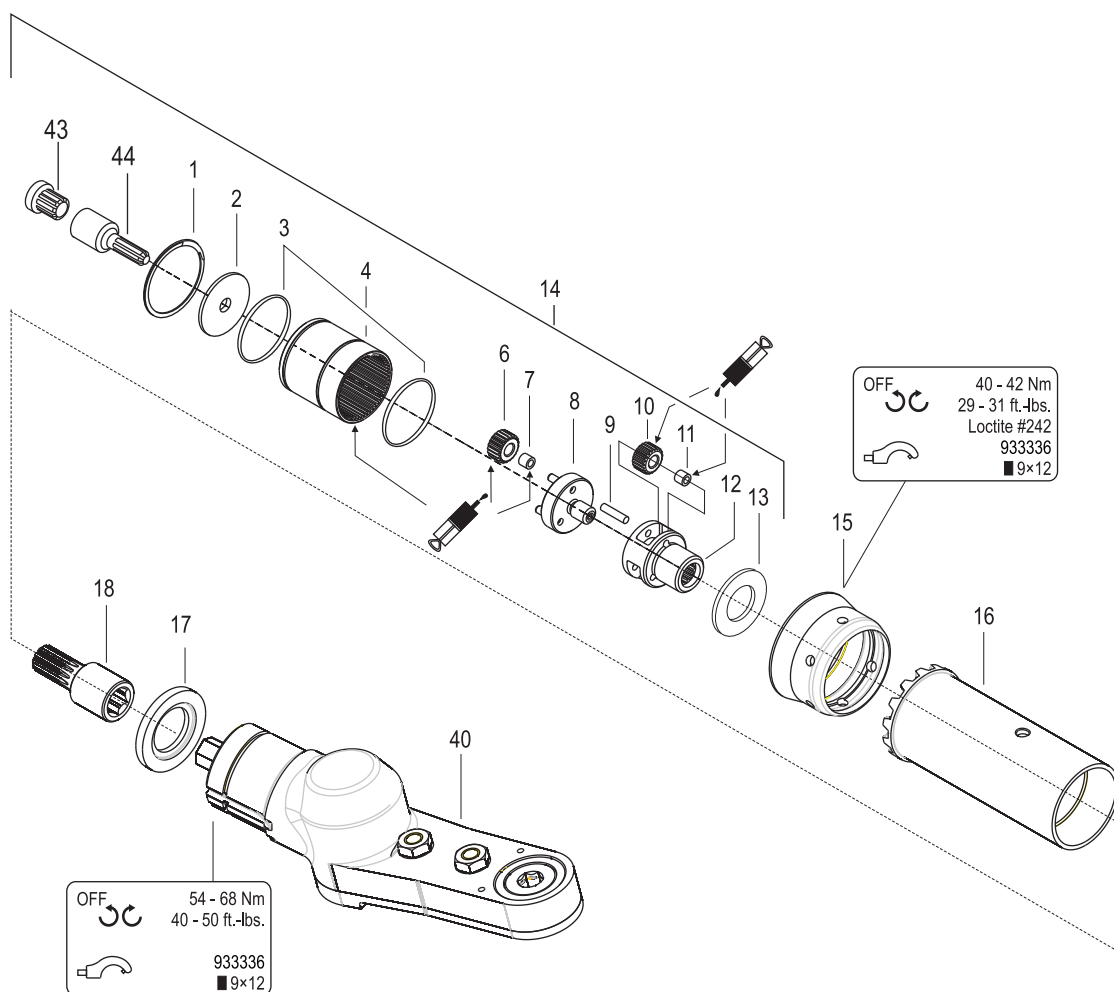

 933027  
8.3 Lubricants, page 40

Index	1)	2)	•	Description	3)
1	800116	1	2	circlip	25,98X0,94 IR
2	541887	1		washer	
3	542724	2	6	o-ring	28,24X 0,78
4	542722	1		gear ring	
6	541893	3	6	idler gear	
7	541487	3	6	needle bearing	3, X 5, X 7,
8	542232	1		planet carrier	
9	541888	3	6	needle roller	
10	541897	3	6	idler gear	
11	541487	3	6	needle bearing	3, X 5, X 7,
12	542099	1		planet carrier	
14	301871	1		gear	
15	935257	1		union nut	
16	207494	1		adapter	
17	207495	1		adapter	
18	543435	1		coupler	
40	*	1		spade tip	
43	541044	1		pinion gear	
44	541898	1	1	adapter shaft	

1) Order no.


2) Quantity

3) Dimensions


● Recommended spare part for every 5 tools

\* See table \*, page 60

## 10.7 Head 301071 (C1)

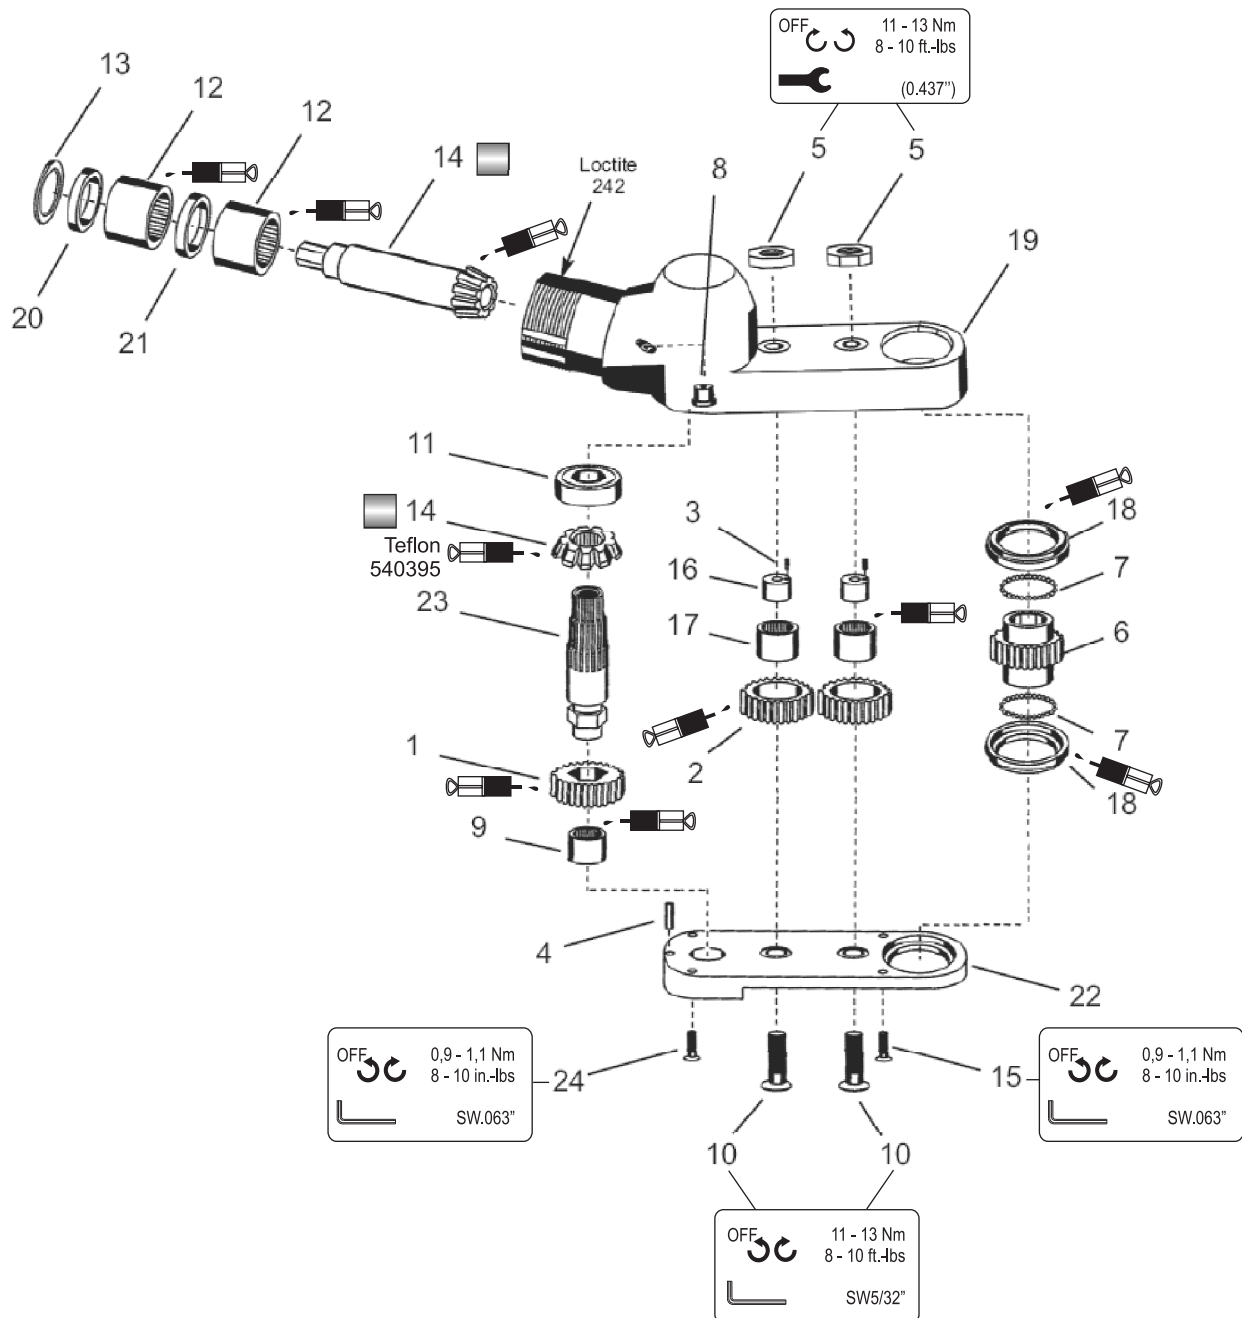

 Note: ALWAYS replace Bevel Gear and Bevel Pinion in pairs since both should wear equally.

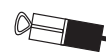 541444, 541445  
8.3 Lubricants, page 40

Index	1)	2)	•	Description	3)
1	202127	1	2	gear wheel	
2	202128	1	2	gear wheel	
3	812164	2	4	dowel pin	
4	833075	2	4	pin	
5	833785	2	4	nut	
6	*	1	4	socket	
7	842980	56		Steel ball	2,381 (3/32")
8	843589	1	2	lubrication nipple	
9	843827	1	2	needle bearing	
10	847027	2	4		
11	847095	1	2	ball bearing	
12	847746	2	4	needle bearing	
13	847747	1		ring	
14	861690	1	2	15° gear set	
15	863462	2	4	metering screw	
16	864201	1	2	bearing post	
17	864202	2	4	needle bearing	
18	864264	2	4	ball race	
19	864745	2	4	15° angle head	
20	864751	1	2	pinion spacer	
21	869206	1	2	needle bearing spacer	
22	869207	1	2	base plate	
23	869211	1	2	15° gear shaft	
24	869222	2	1	countersunk screw	

1) Order no.


2) Quantity

3) Dimensions


● Recommended spare part for every 5 tools

\* The ordered socket is assembled factory-set. See 10.9 Socket for C1, C3, optional, page 66

## 10.8 Head 301072 (C3)

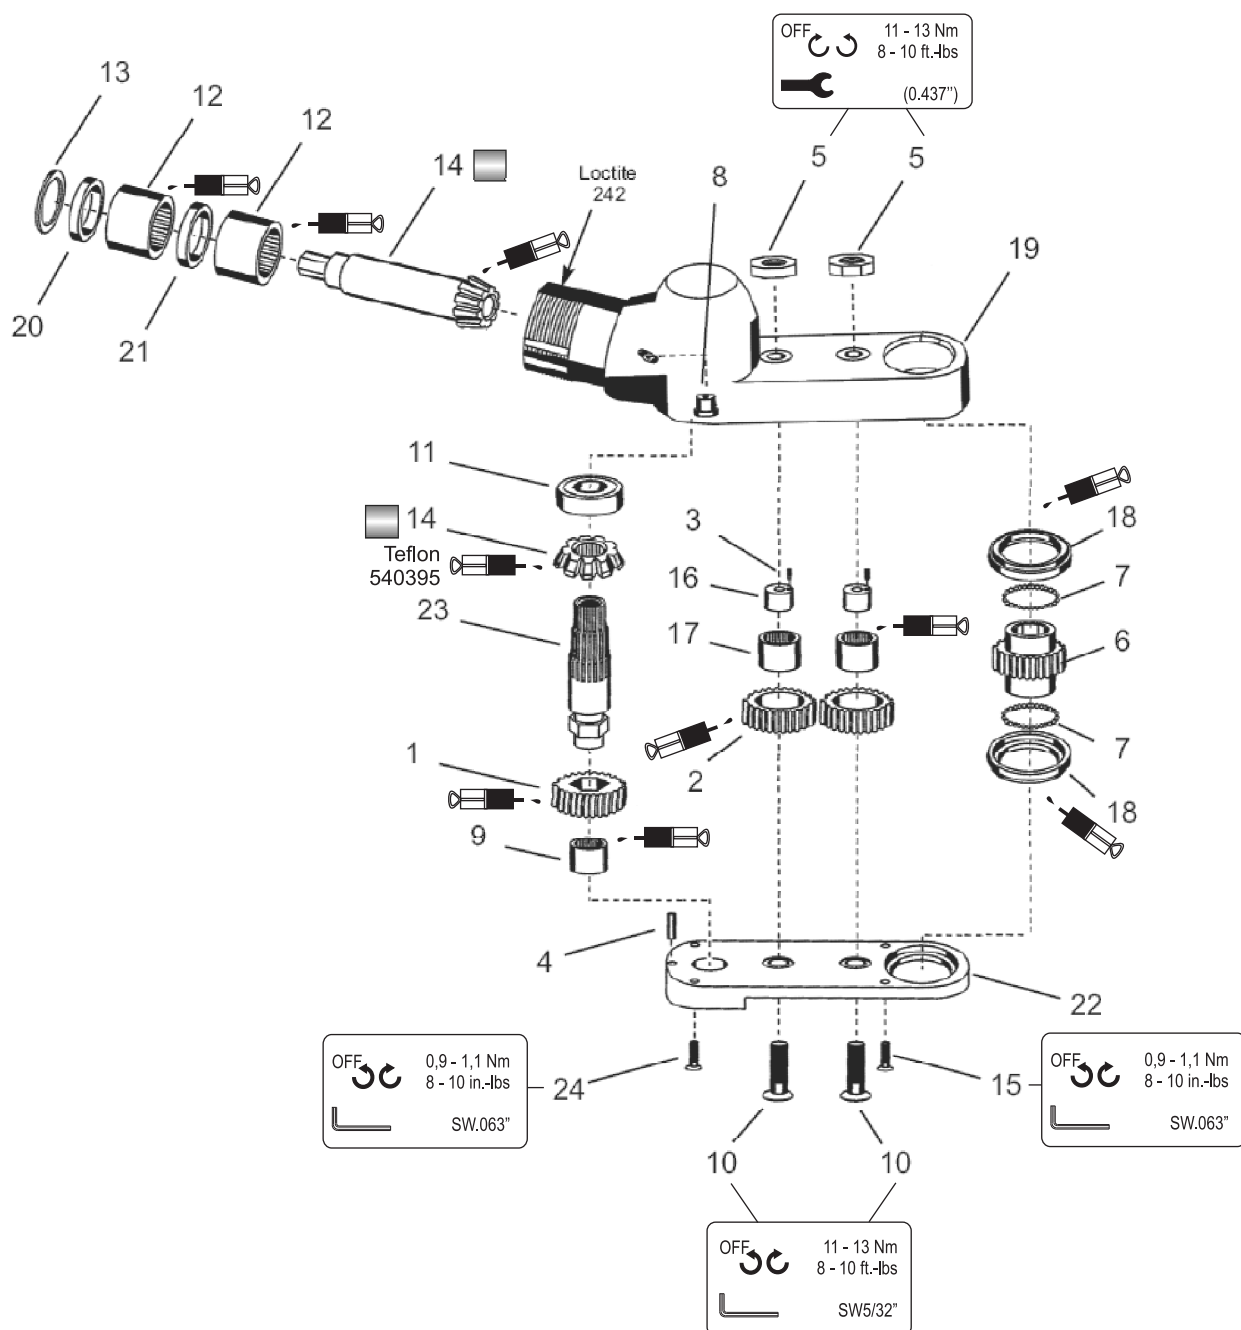

 Note: ALWAYS replace Bevel Gear and Bevel Pinion in pairs since both should wear equally.

 541444, 541445  
8.3 Lubricants, page 40



Index	1)	2)	•	Description	3)
1	202127	1	2	gear wheel	
2	202128	1	2	gear wheel	
3	812164	2	4	dowel pin	
4	833075	2	4	pin	
5	833785	2	4	nut	
6	*	2	4	socket	
7	842980	56		Steel ball	2,381 (3/32")
8	843589	1	2	lubrication nipple	
9	843827	1	2	needle bearing	
10	847027	2	4		
11	847095	1	2	ball bearing	
12	847746	2	4	needle bearing	
13	847747	1		ring	
14	861691	1	2	30° gear set	
15	863462	2	4	metering screw	
16	864201	1	2	bearing post	
17	864202	2	4	needle bearing	
18	864264	2	4	ball race	
19	864198	2		30° angle head	
20	864751	1	2	pinion spacer	
21	869206	1	2	needle bearing spacer	
22	869207	1	2	base plate	
23	869208	1	2	30° gear shaft	
24	869222	2	1	countersunk screw	

1) Order no.




2) Quantity

3) Dimensions


• Recommended spare part for every 5 tools

\* The ordered socket is assembled factory-set. See 10.9 Socket for C1, C3, optional, page 66

## 10.9 Socket for C1, C3, optional

Index	Hexagon Socket Size			
		Flush	Extended 1/2" (12,7 mm)	Extended 3/4" (19 mm)
6	1/4"	CSEA01	CSEA41	CSEA61
	3/8"	CSEC01	CSEC41	CSEC61
	7/16"	CSED01	CSED41	CSED61
	1/2"	CSEE01	CSEE41	CSEE61
	9/16"	CSEF01	CSEF41	CSEF61
	7 mm	CSMA01	CSMA41	CSMA61
	5/16" (8 mm)	CSMB01	CSMB41	CSMB61
	9 mm	CSMC01	CSMC41	CSMC61
	10 mm	CSMD01	CSMD41	CSMD61
	11 mm	CSME01	CSME41	CSME61
	12 mm	CSMF01	CSMF41	CSMF61
	13 mm	CSMG01	CSMG41	CSMG61
	14 mm	CSMH01	CSMH41	CSMH61
	15 mm	CSMI01	CSMI41	CSMI61

## 10.10 Tool holder

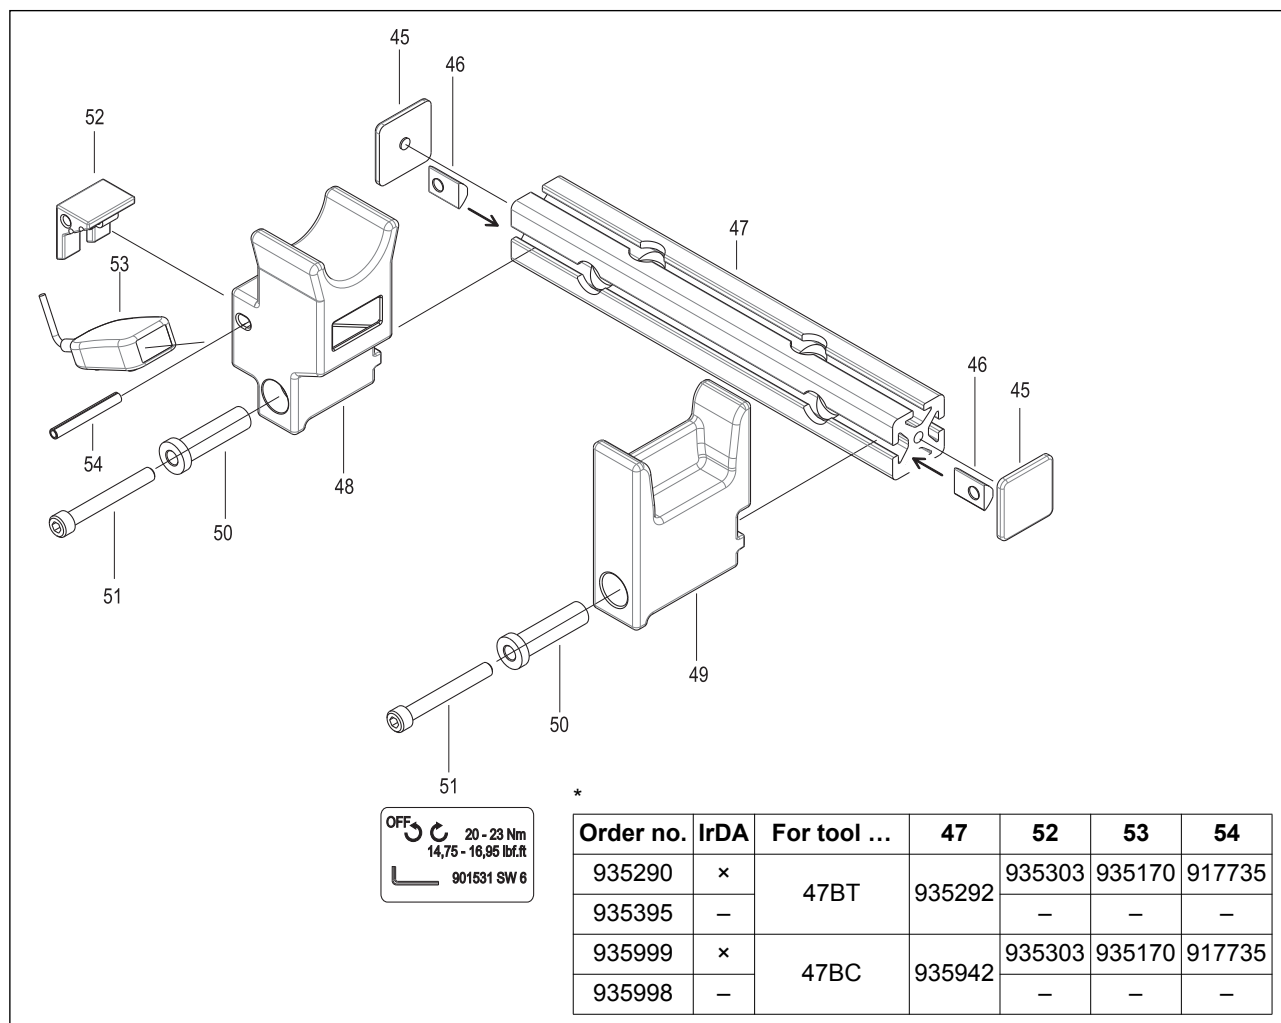

Index	1)	2)	• Description	3)
45	S900983	2	cap	40,X40,
46	S900418	2	slot nut	M 8
47	*	1	brace	
48	935293	1	support	
49	935294	1	support	
50	935291	2	plug	
51	902490	2	cap screw	M 8X 65
52	*	1	locking cover	
53	*	1	IrDA-Serial Adapter	
54	*	1	dowel pin	6,X 50,

1) Order no.

2) Quantity

3) Dimensions

• Recommended spare part for every 5 tools

\* see table, Page 67



# 11 Technical data

## 11.1 Dimensions


### 47BT...20T2

#### without scanner

Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BTB20T2	584	554,8	562,9	–	–	–
47BTRB20T2	598	568,8	576,9	14,2	–	–
47BTXB20T2						
47BTYB20T2						
47BTZB20T2						

#### ... with scanner

Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BTRSB20T2	598	568,8	576,9	14,2	43	18
47BTXSB20T2						
47BTYSB20T2						
47BTZSB20T2						

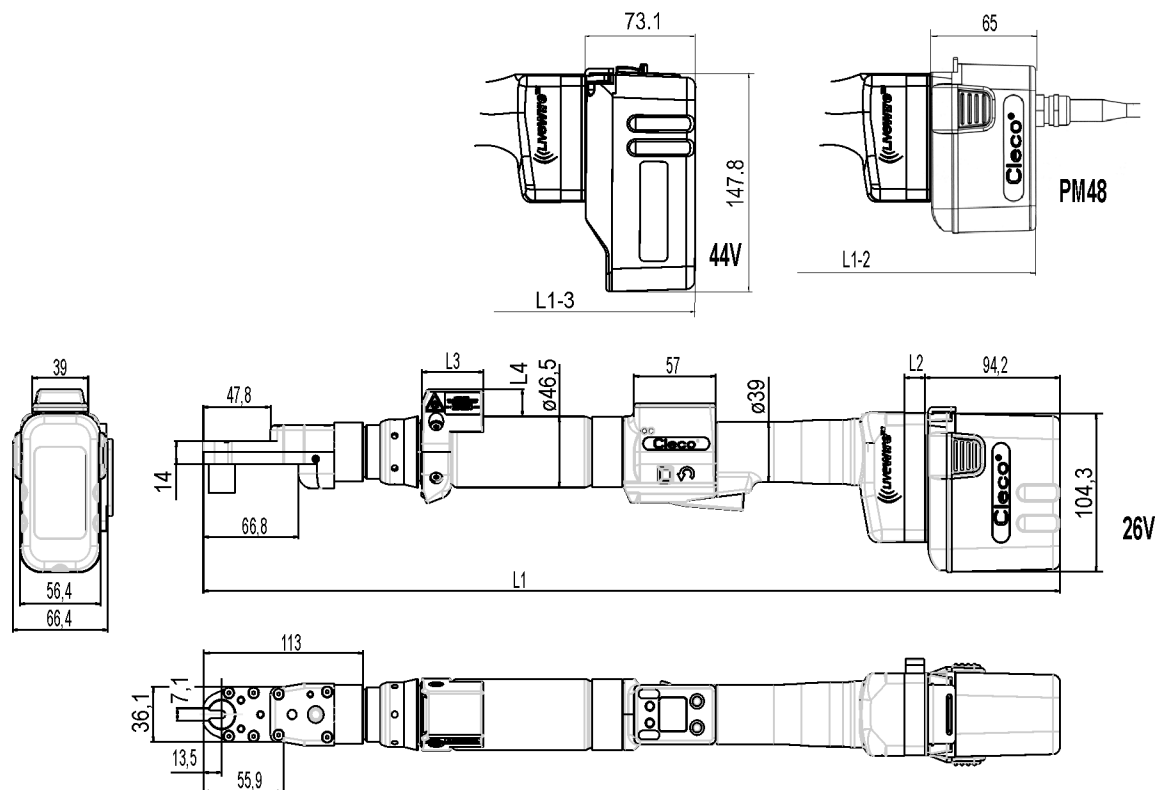


... with scanner

Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BTRSB30T3	588	558,8	566,9	14,2	43	18
47BTXSB30T3						
47BTYSB30T3						
47BTZSB30T3						



Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BTRSB40T4	612	582,8	590,9	14,2	43	18
47BTXSB40T4						
47BTYSB40T4						
47BTZSB40T4						

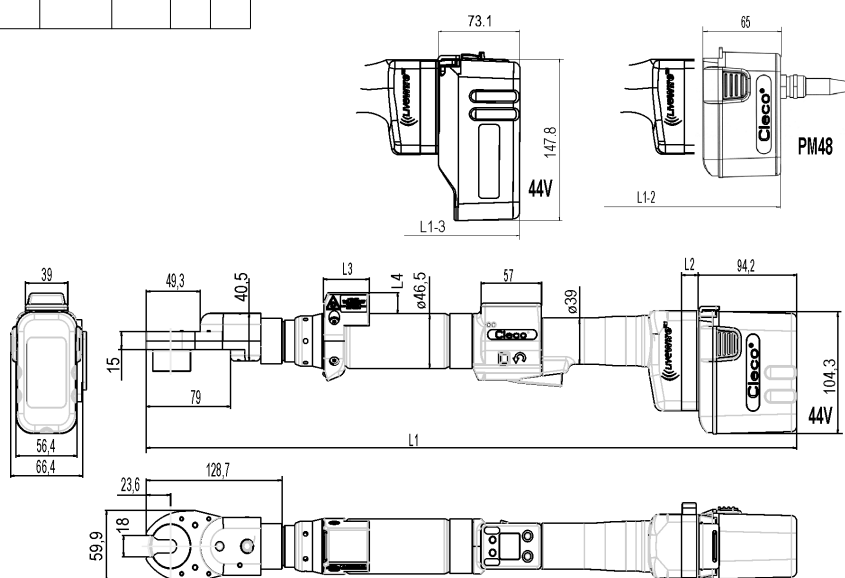


**47BC...30C1 without scanner**

Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BCB30C1	653	623,8	631,9	—	—	—
47BCRB30C1	667	637,8	645,9	14,2	—	—
47BCXB30C1						
47BCYB30C1						
47BCZB30C1						

**... with scanner**

Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BCRSB30C1	667	637,8	645,9	14,2	43	65
47BCXSB30C1						
47BCYSB30C1						
47BCZSB30C1						

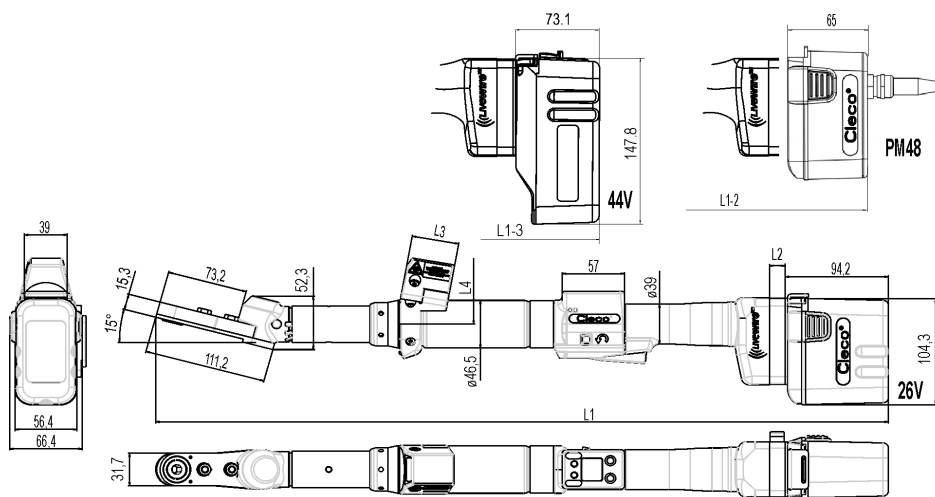


**47BC...30C3 ohne Scanner**


Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BCB30C3	646	616,8	624,9	—	—	—
47BCRB30C3	660	630,8	638,9	14,2	—	—
47BCXB30C3						
47BCYB30C3						
47BCZB30C3						

**... mit Scanner**


Typ	L1-1	L1-2	L1-3	L2	L3	L4
47BCRSB30C3	660	630,8	638,9	14,2	43	65
47BCXSB30C3						
47BCYSB30C3						
47BCZSB30C3						

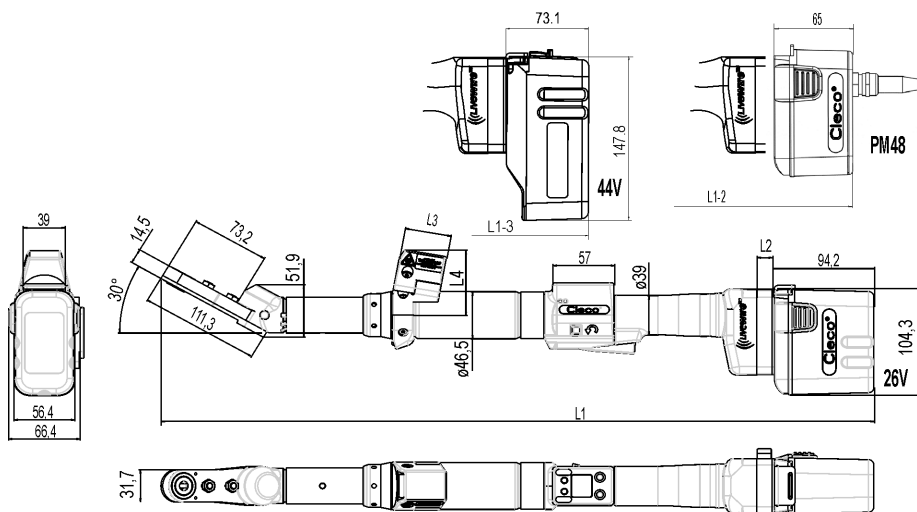

## 11.2 Dimensions of tool holder 935290 / 935395 (Optional)

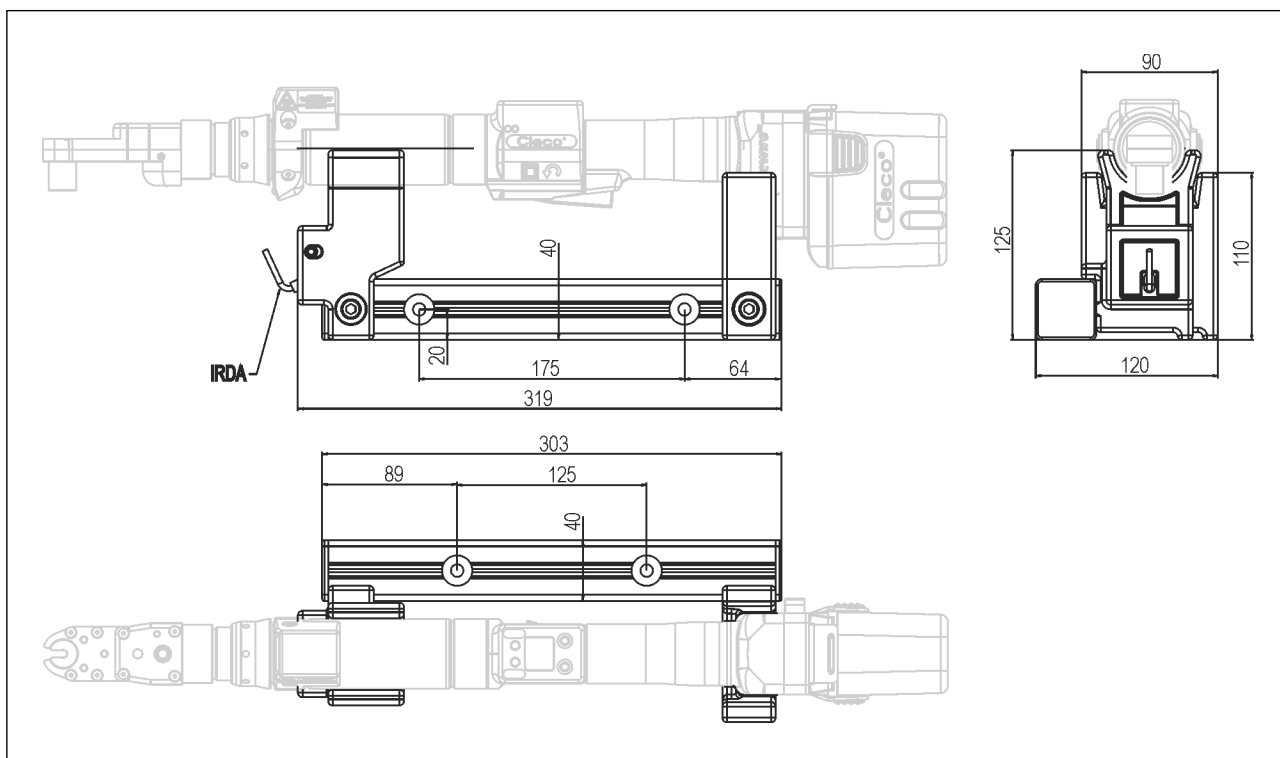

## 11.3 Dimensions of tool holder 935999 / 935998 (Optional)

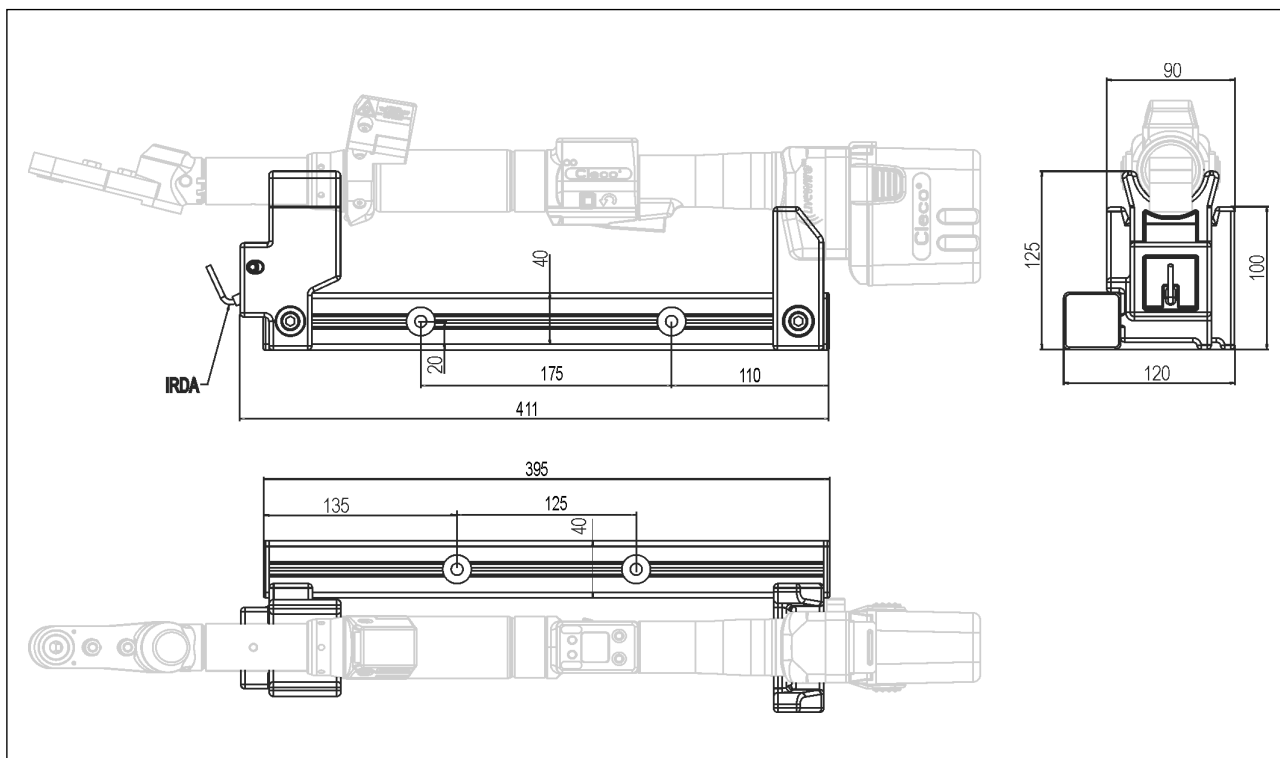



## 11.4 Performance Data

Type	Parameter Tool Memory							Screw size 8.8	Weight without Accu <sup>1)</sup>
	Recommended torque range		Free speed		Calibration data		Static Cur- rent Factor		
			ft.-lbs (Nm)	Accu- pack 26 V	PM48, Accu- pack 44 V	Torque (nominal)		Angle pulses (Resolver)	
	max.	min.	RPM	RPM	ft.-lbs (Nm)	°/degrees	Nm/A	mm	lbs (kg)
47BTB20T2	14.8 (20)	7.4 (10)	260	455	24.38 (33,05)	2,0501	0,3660	M6	5.3 (2,4)
47BTRB20T2									
47BTXB20T2									5.5 (2,5)
47BTYB20T2									
47BTZB20T2									
47BTRSB20T2									
47BTXSB20T2									5.7 (2,6)
47BTYSB20T2									
47BTZSB20T2									
47BTB30T3	22.1 (30)	11.1 (15)	188	329	33.75 (45,76)	2,8386	0,5060	M8	5.3 (2,4)
47BTRB30T3									
47BTXB30T3									5.5 (2,5)
47BTYB30T3									
47BTZB30T3									
47BTRSB30T3									
47BTXSB30T3									5.6 (2,6)
47BTYSB30T3									
47BTZSB30T3									
47BTB40T4	29.5 (40)	14.8 (20)	141	247	45.01 (61,02)	3,7848	0,6750	M8	6.1 (2,8)
47BTRB40T4									
47BTXB40T4									6.3 (2,9)
47BTYB40T4									
47BTZB40T4									
47BTRSB40T4									
47BTXSB40T4									6.5 (2,9)
47BTYSB40T4									
47BTZSB40T4									
47BCB30C1	22.1 (30)	7.7 (10,5)	186	326	26.54 (35,98)	2,8636	0,5110	M8	5.8 (2,7)
47BCRB30C1									
47BCXB30C1									6.1 (2,8)
47BCYB30C1									
47BCZB30C1									
47BCRSB30C1									
47BCXSB30C1									6.2 (2,8)
47BCYSB30C1									
47BCZSB30C1									

Type	Parameter Tool Memory							Screw size 8.8	Weight without Accu <sup>1)</sup>
	Recommended torque range		Free speed		Calibration data		Static Cur- rent Factor		
	ft.-lbs (Nm)		Accu- pack 26 V	PM48, Accu- pack 44 V	Torque (nominal)	Angle pulses (Resolver)			
	max.	min.	RPM	RPM	ft.-lbs (Nm)	1/degrees		Nm/A	mm
47BCB30C3	22.1 (30)	7.7 (10,5)	186	326	26.54 (35,98)	2,8636	0,5110	M8	5.8 (2,7)
47BCRB30C3									6.1 (2,8)
47BCXB30C3									
47BCYB30C3									
47BCZB30C3									
47BCRSB30C3									6.2 (2,8)
47BCXSB30C3									
47BCYSB30C3									
47BCZSB30C3									

1) Weight Accupack 26 V (935377) 1.08 lbs (490 g), Accupack 44 V (936400PT) 1.81 lbs (820 g)

## 11.5 Electrical data

### Tool

Protection class III as per DIN EN 61 140 (VDE 0140-1)

Degree of protection IP40 as per DIN EN 60529 (IEC 60529)

### Tool holder

Protection class III as per DIN EN 61 140 (VDE 0140-1)

Degree of protection IP40 as per DIN EN 60529 (IEC 60529)

### 11.5.1 Output stage servo electronics

Features	Data
Nominal motor phase current	8 A peak value, sine
Rated output	150 VA
Maximum power	500 VA

### 11.5.2 Control electronics

Features	Data
Rated voltage	26 V
Nominal current in <i>Active</i> operating mode	105 mA
Nominal current in <i>Standby</i> operating mode	95 mA
Nominal current in <i>Power-saving</i> operating mode	55 mA
Nominal current in <i>Sleep</i> operating mode	< 1 mA

### 11.5.3 IrDA interface port

Features	Data
Supply voltage	5.0 V (4.8 to 5.5 V)
Power consumption	0.30 VA
Maximum current	11 mA
Transmission rate	57.6 Kbps
Parity Bit	None
Data Bit	8 bit
Stop Bit	1 bit
Error check	CRC

### 11.5.4 Scanner

Features	Data																		
Scan rate	104 scans/sec. $\pm 12$ (bidirectional)																		
Scan angle	47° $\pm 3$ standard / 35° $\pm 3$ reduced																		
Crash resistance	2000 G																		
Ambient light	107,640 lux																		
Decode zone (typical)	<table> <tr> <td>4 mil</td><td>2.54 – 13.97 cm</td></tr> <tr> <td>5 mil</td><td>3.18 – 20.32 cm</td></tr> <tr> <td>7.5 mil</td><td>3.81 – 33.66 cm</td></tr> <tr> <td>10 mil</td><td>3.81 – 44.45 cm</td></tr> <tr> <td>100%</td><td>3.81 – 59.69 cm</td></tr> <tr> <td>15 mil</td><td>3.81 – 74.93 cm</td></tr> <tr> <td>20 mil</td><td>4.45 – 90.17 cm</td></tr> <tr> <td>40 mil</td><td><sup>1)</sup> – 101.60 cm</td></tr> <tr> <td>55 mil</td><td><sup>1)</sup> – 139.70 cm</td></tr> </table>	4 mil	2.54 – 13.97 cm	5 mil	3.18 – 20.32 cm	7.5 mil	3.81 – 33.66 cm	10 mil	3.81 – 44.45 cm	100%	3.81 – 59.69 cm	15 mil	3.81 – 74.93 cm	20 mil	4.45 – 90.17 cm	40 mil	<sup>1)</sup> – 101.60 cm	55 mil	<sup>1)</sup> – 139.70 cm
4 mil	2.54 – 13.97 cm																		
5 mil	3.18 – 20.32 cm																		
7.5 mil	3.81 – 33.66 cm																		
10 mil	3.81 – 44.45 cm																		
100%	3.81 – 59.69 cm																		
15 mil	3.81 – 74.93 cm																		
20 mil	4.45 – 90.17 cm																		
40 mil	<sup>1)</sup> – 101.60 cm																		
55 mil	<sup>1)</sup> – 139.70 cm																		
Laser safety	Laser class 2, IEC 60825																		
EMI/RFI	FCC Part 15 Class B EN 55024/CISPR 22 AS 3548 VCCI																		
Barcode-Types	UPC-A, UPC-E, UPC-E1, Trioptic Code39, Interleaved 2of5, Discrete 2of5, Chinese 2of5, Codabar, MSI barcode types, EAN8, EAN13, EAN128, ISBT128, Code11, Code39, Code93, Code128, RSS14, RSS Limited, RSS Expanded barcode types.																		
Standards	21CFR1040.10 and 1040.11 except for deviations in accordance with Laser Notice 50 of July 26, 2001. EN60825-1:1994+ A1:2002 +A2:2001 IEC60825-1:1993+A1:1997+A2:2001																		

1) Depending on the width of the barcode

**11.5.5 RF15.4 data transmission**

Features	Data
Frequency	2,4 GHz ISM
Channels	16
Modulation	0-QPSK (DSSS)
Output power	1 mW (0 dBm)
Sensitivity (BER < 10 <sup>-3</sup> )	-92 dBm
Wireless transmission rate	57.6 kbps
Range	up to 10 m (98.4")
Standards	ETSI EN 300 328 V1.7.1 EN 301489-1 V1.6.1 EN 301489-3 V1.4.1 EN 50392:2004 FCC Part 15.247 / RSS-210

**11.5.6 868 MHz data transmission**

Features	Data
Frequency	868 – 870 MHz
Channels	Band 1i (869.4 MHz – 869.65 MHz): 1 Band 1k (869.7 MHz – 870.0 MHz): 2
Modulation	GFSK
Output power	Band 1i (869.4 MHz – 869.65 MHz): 1, 5, 10, 25 mW Band 1k (869.7 MHz – 870.0 MHz): 1, 5 mW
Sensitivity (BER < 10 <sup>-3</sup> )	-100 dBm
Wireless transmission rate	38.4 kbps
Range	Band 1i (869.4 MHz – 869.65 MHz): up to 30 m (98.4") Band 1k (869.7 MHz – 870.0 MHz): up to 10 m (32.8")
Standards	ETSI EN 300 220-3 V1.1.1 ETSI EN 300 220-1 V1.3.1 EN 301489-1 V1.6.1 EN 301489-3 V1.4.1 EN 50371:2002

### 11.5.7 WLAN data transmission

The WLAN data transmission functions may vary depending on the tool configuration.

#### Serie 47BTX.../47BCX...

Features	Data
Standard	IEEE 802.11b
Safety	WEP <ul style="list-style-type: none"> <li>• 64/128 bit encryption</li> </ul> WPA/WPA2/802.11 <ul style="list-style-type: none"> <li>• 128 bit TKIP/CCMP encryption</li> <li>• 802.1x EAP authentication (LEAP, PEAP, TTLS, GTC, MD5, OTP, PAP, CHAP, MSCHAP, MSCHAPv2, TTLS MSCHAPv2)</li> <li>• Pre-shared key mode (PSK)</li> </ul>
Range	Typically up to 50 m (164' 0.5")
Channels	1 – 11 (2.412 – 2.462 GHz)
Transmission rate:	16 dBm typical
Sensitivity	-92 dBm (typ. @ 1 Mbps) -82 dBm (typ. @ 11 Mbps)
Modulation	CCK/DQPSK/DBPSK
Standards	EN 300 328 V1.4.1 EN 300 328-2 EN 301 489-17 V1.2.1 EN 50371:2002 EN 60950 FCC part 15

## Series 47BAY...

Features	Data
Standard	IEEE 802.11a/b/g
Safety	WEP <ul style="list-style-type: none"> <li>• 64/128 bit encryption</li> </ul> WPA/TKIP <ul style="list-style-type: none"> <li>• WPA2-AES(CCMP)</li> <li>• LEAP, PEAP</li> </ul>
Range	Typically up to 50 m (164' 0.5")
Channels	<ul style="list-style-type: none"> <li>• 2,4 GHz: 1 – 13</li> <li>• 5 GHz: 36, 40, 44, 48 (52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140)<sup>1)</sup></li> </ul>
Transmission rate:	20 dBm typ. @ 2,4 GHz 15 dBm typ. @ 5,0 GHz
Sensitivity	-94 dBm (typ. @ 1 Mbps, 2,4 GHz) -80 dBm (typ. @ 5 GHz)
Modulation	DSSS / OFDM
Standards	EN 300 328-1 V1.7.1 EN 301489-1, -17 EN 301893 V1.5.1 EN 60950 FCC part 15 IC (Industry Canada)

1) In progress

## 11.5.8 Torque transducer

Torque is measured by a reaction transducer with expandable measurement strips. The reaction transducer is positioned between the motor and the gears in the handle housing.

Features	Data
Nominal calibration	see 11.4 Performance Data, page 73
Sensitivity	2mV/V
Bridge ohms	1000 Ohm
Precision class	0.5% of final value
Linearity error	+0.25% of final value
Measurement range	-125% to +125% of final value

## 12 Service

## NOTE



If repair is required send the complete 47BC/BT to *Sales & Service Centers*. A repair is only permitted by Apex Tool Group authorized personnel. If the tool is opened, the warranty is voided.

## 12.1 Recalibration

The type-specific calibration data is saved on the integrated screw electronic system in the delivery state of the Cleco tool. If service is required to change the torque transducer, the screw electronic system or if a recalibration is required, please send the Cleco tool to *Sales & Service Centers*. This will ensure that after the service work, any required calibration data update is carried out properly.

## 13 Disposal

### CAUTION!



Injuries and environmental damage from improper disposal.

Components and auxiliary materials of the tool pose risks to the health and the environment.

- Catch auxiliary materials (oils, greases) when drained and dispose of them properly.
- Separate the components of the packing and dispose of them by segregating them clearly.
- Follow the locally applicable regulations.



Observe generally valid disposal guidelines such as, in Germany, the Electrical and Electronic Equipment Act (ElektroG) and Battery Law (BattG):

- Return the tool and defective/used power supply to your company collection facility or to *Sales & Service Centers*.

## Sales & Service Centers

**Note:** All locations may not service all products. Please contact the nearest Sales & Service Center for the appropriate facility to handle your service requirements.

Dallas, TX

**Apex Tool Group  
Sales & Service Center**  
1470 Post & Paddock  
Grand Prairie, TX 75050  
USA  
Phone: +1-972-641-9563  
Fax: +1-972-641-9674

Detroit, MI

**Apex Tool Group  
Sales & Service Center**  
2630 Superior Court  
Auburn Hills, MI 48326  
USA  
Phone: +1-248-391-3700  
Fax: +1-248-391-7824

Houston, TX

**Apex Tool Group  
Sales & Service Center**  
6550 West Sam Houston  
Parkway North, Suite 200  
Houston, TX 77041  
USA  
Phone: +1-713-849-2364  
Fax: +1-713-849-2047

Lexington, SC

**Apex Tool Group**  
670 Industrial Drive  
Lexington, SC 29072  
USA  
Phone: +1-800-845-5629  
Phone: +1-803-359-1200  
Fax: +1-803-358-7681

Los Angeles, CA

**Apex Tool Group  
Sales & Service Center**  
15503 Blackburn Avenue  
Norwalk, CA 90650  
USA  
Phone: +1-562-926-0810  
Fax: +1-562-802-1718

Seattle, WA

**Apex Tool Group  
Sales & Service Center**  
2865 152nd Avenue N.E.  
Redmond, WA 98052  
USA  
Phone: +1-425-497-0476  
Fax: +1-425-497-0496

York, PA

**Apex Tool Group  
Sales & Service Center**  
3990 East Market Street  
York, PA 17402  
USA  
Phone: +1-717-755-2933  
Fax: +1-717-757-5063

Canada

**Apex Tool Group  
Sales & Service Center**  
5925 McLaughlin Road  
Mississauga, Ont. L5R 1B8  
Canada  
Phone: +1-905-501-4785  
Fax: +1-905-501-4786

Germany

**Apex Tool Group  
GmbH & Co. OHG**  
Industriestraße 1  
73463 Westhausen  
Germany  
Phone: +49-73 63-81-0  
Fax: +49-73 63/ 81-222

England

**Apex Tool Group, LLC**  
Pit Hill  
Piccadilly  
Tamworth  
Staffordshire  
B78 2ER  
U.K.  
Phone: +44-191 4197700  
Fax: +44-182 7874128

France

**Apex Tool Group SAS**  
Zone Industrielle  
BP 28  
25 Avenue Maurice Chevalier  
77831 Ozoir-la-Ferrière Cedex  
France  
Phone: +33-1-64432200  
Fax: +33-1-64401717

China

**Apex Power Tools Trading (Shanghai) Co., Ltd**  
A company of  
Apex Tool Group, LLC  
A8, No.38, Dongsheng  
Road, Shanghai,  
China 201201  
Phone: +86-21-60880320  
Fax: +86-21-60880298

Mexico

**Cooper Tools  
de México S.A. de C.V.**  
a company of  
Apex Tool Group, LLC  
Vialidad El Pueblito #103  
Parque Industrial Querétaro  
Querétaro, QRO 76220  
Phone: +52 (442) 211-3800  
Fax: +52 (442) 103-0443

Brazil

**Cooper Tools Industrial Ltda.**  
a company of  
Apex Tool Group, LLC  
Av. Liberdade, 4055  
Zona Industrial - Iporanga  
18087-170 Sorocaba, SP Brazil  
Phone: +55-15-3238-3929  
Fax: +55-15-3228-3260

**Apex Tool Group GmbH & Co. OHG**  
Industriestraße 1  
73463 Westhausen  
Germany  
Phone: +49-7363-81-0  
Fax: +49-7363-81-222  
[www.apexpowertools.eu](http://www.apexpowertools.eu)

**Cleco®**