

Instruction Manual
P1993BA/EN
2014-06

Cleco®

35PHH

Pulse nutsetter without shutoff



For additional product information visit our website at <http://www.apexpowertools.eu>

Notes on this Instruction Manual

The original language of this instruction manual is German.

This instruction manual

- provides important instructions for safe and effective operation.
- It describes the function and operation of the pulse nutsetter (hereafter referred to simply as 35PHH).
- It serves as a reference work for technical data, service intervals and spare part orders.
- It points out options.

Secondary information

P2204BA Instruction Manual Oil filling unit

In the text

35PHH	stands for all styles of the pulse nutsetter described here.
→	identifies instructions to be followed.
•	identifies lists.
<...>	identifies an index, see 8 Spare parts, page 27.

In graphics



identifies movement in a direction.

identifies function and force.

In graphic illustrations:

If not absolutely essential, 35PHH (air from bottom) is illustrated.

Model Key

	35	P	H	H	x	65	x	
Max. capacity	35 – 35 Nm							Output drive
								3 – External square 3/8" Q – Quick change chuck 1/4"
Design	P – Pistol grip							Speed
								65 – 6500 rpm
Pulse mechanism	H – Hydraulics							2. Air Inlet
								A – Air from top – None
Design	H – 3 Chamber motor							

Disclaimer:

Apex Tool Group reserves the right to modify, supplement or improve the document or the product without prior announcement. This document may not be reproduced in any way, shape or form, in full or parts thereof, or copied to another natural or machine readable language or to a data carrier, whether electronic, mechanical, optical or otherwise without the express permission of Apex Tool Group.

Contents

1	Safety	7
1.1	Warnings and notes.....	7
1.2	Basic requirements for safe working practices.....	7
1.3	Operator training	8
1.4	Personal protective equipment.....	8
1.5	Designated use	8
1.6	Noise and vibrations.....	8
2	Items supplied	9
3	Product description	9
3.1	Operation and functional elements.....	9
3.2	Options	10
4	Before initial operation	10
4.1	Air supply	10
4.2	Change air inlet: top / bottom (only on 35PHHA)	11
4.3	Connect the tool	11
4.4	Setting up the tool	12
4.5	Troubleshooting.....	13
5	Maintenance	15
5.1	Service schedule	15
5.2	Fill reserve oil	16
5.3	Complete oil filling	18
6	Disassembly instructions	21
6.1	Remove motor unit.....	21
6.2	Remove throttle valve.....	22
6.3	Remove pulse unit.....	22
7	Assembly instructions	23
7.1	Install motor unit.....	23
7.2	Install pulse unit.....	25
8	Spare parts	27
8.1	Pistol grip 35PHH... ..	28
8.2	Pistol grip 35PHHA... ..	30
8.3	Motor unit	32
8.4	Pulse unit.....	34
8.5	Equipment order list	36
9	Technical data	37
9.1	Dimensions 35PHH... in mm.....	37
9.2	Dimensions 35PHHA... in mm	38

9.3	Performance Data	39
9.4	Ambient conditions	39
10	Service	39
11	Disposal	39

1 Safety

1.1 Warnings and notes

Warning notes are identified by a signal word and a pictogram:

- The signal word describes the severity and the probability of the impending danger.
- The pictogram describes the type of danger.

WARNING!



Potentially hazardous situation for health and safety.

If this warning is not observed, death or serious injury may occur.

CAUTION!



Potentially hazardous situation to health and safety, or risk of material and environmental damage. If this warning is not observed, injuries or damage to materials or the environment could occur.

NOTE



General notes

include application tips and particularly useful information but no hazard warnings.

1.2 Basic requirements for safe working practices

All instructions must be read carefully. Failure to observe the instructions listed below can result in serious injuries.

CAUTION!



- Work with a maximum working pressure of 101.5 psi (700 kPa) (measured at the air inlet tube of the tool).
- Before initial operation, check that the suspension bail is properly fastened to the balancer.
- 35PHHA: Before using the air inlet from above, make sure that the pipe plug is correctly fitted in the lower air inlet.
- If you hear unusual noises or vibrations, switch off the tool immediately.
Cut off the air supply immediately.
- Before carrying out repairs, adjusting the torque or replacing screw bits, disconnect the tool from the compressed air line.
- The compressed air line must be depressurized before disconnecting it.
- Never use the air hose to hold, raise or lower the tool.
- Air hoses, the suspension bail and fittings must be regularly checked for damage and wear. Renew as necessary.
- Always carry out assembly according to Chapter 8 Spare parts, page 27.
- Use only accessory parts authorized by Apex Tool Group (see product catalog).
- Only use screw bits for machine-controlled fastening tools.
- Make sure that the screw bits are securely inserted.
- Inspect screw bits for visible damage and cracks.
Renew damaged bits immediately.
- The operation, maintenance and repair conditions set forth in the instruction manual must be observed.
- Follow generally valid and local safety and accident prevention rules.

1.3 Operator training

Users must be given instruction in the correct usage of the tool. The operator must make the Operating Manual accessible to users and make sure that the users have read and understood it. The tool may only be connected, used, serviced and repaired by qualified persons. Repairs to the tool may only be performed by authorized personnel.

1.4 Personal protective equipment



- Wear protective goggles to protect against sprays of metal splinters and fluids.
- Wear gloves to protect against skin irritation in case of direct contact with oil.

Danger of injury by being wound up in and caught by machinery

- Wear a hairnet.
- Wear close-fitting clothing.
- Do not wear jewelry.



Sound level in the area of the user > 80 dB(A), danger of hearing damage

- Wear hearing protection.

1.5 Designated use

The 35PHH is designed exclusively for fastening and releasing threaded fasteners.

- Do not use it as a hammer.
- Do not open it or modify it structurally.
- Do not use it in areas where there is a risk of explosion.

1.6 Noise and vibrations

Sound pressure level L_p in accordance with DIN EN ISO 15744

Idle for $n \leq 6500$ rpm

< 79 dB(A)

Vibration values in accordance with DIN EN ISO 28927-2

35PHH:

Idle ahv for $n \leq 6500$ rpm

< 1.8 m/s²

Pulses ahv

< 3.0 m/s²

35PHHA:

Idle ahv for $n \leq 6500$ rpm

< 1.8 m/s²


Pulses ahv

< 3.5 m/s²

Pulses ahv 35PHHA + absorber (on request)

< 2.5 m/s²

With vibration levels ahv > 2.5 m/s², the exposure time is to be reduced. See example

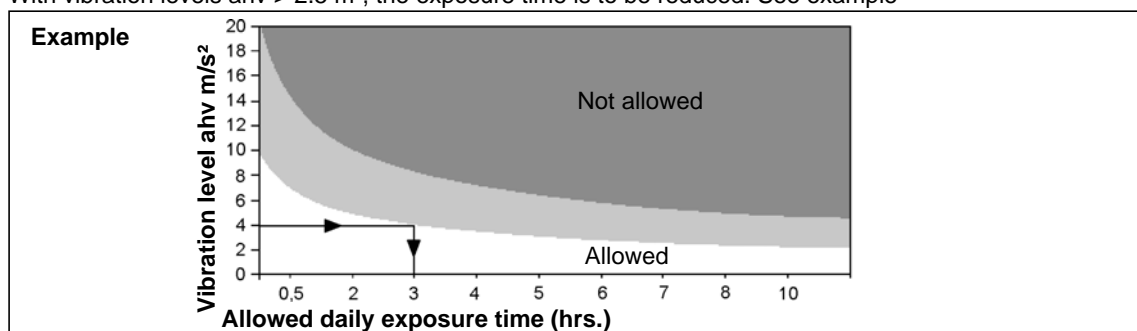


2 Items supplied

Check shipment for transit damage and ensure that all items have been supplied:

- 1 35PHH
- 1 This instruction manual
- 1 Declaration of Conformity
- 1 Hex wrench (WAF 2)



3 Product description

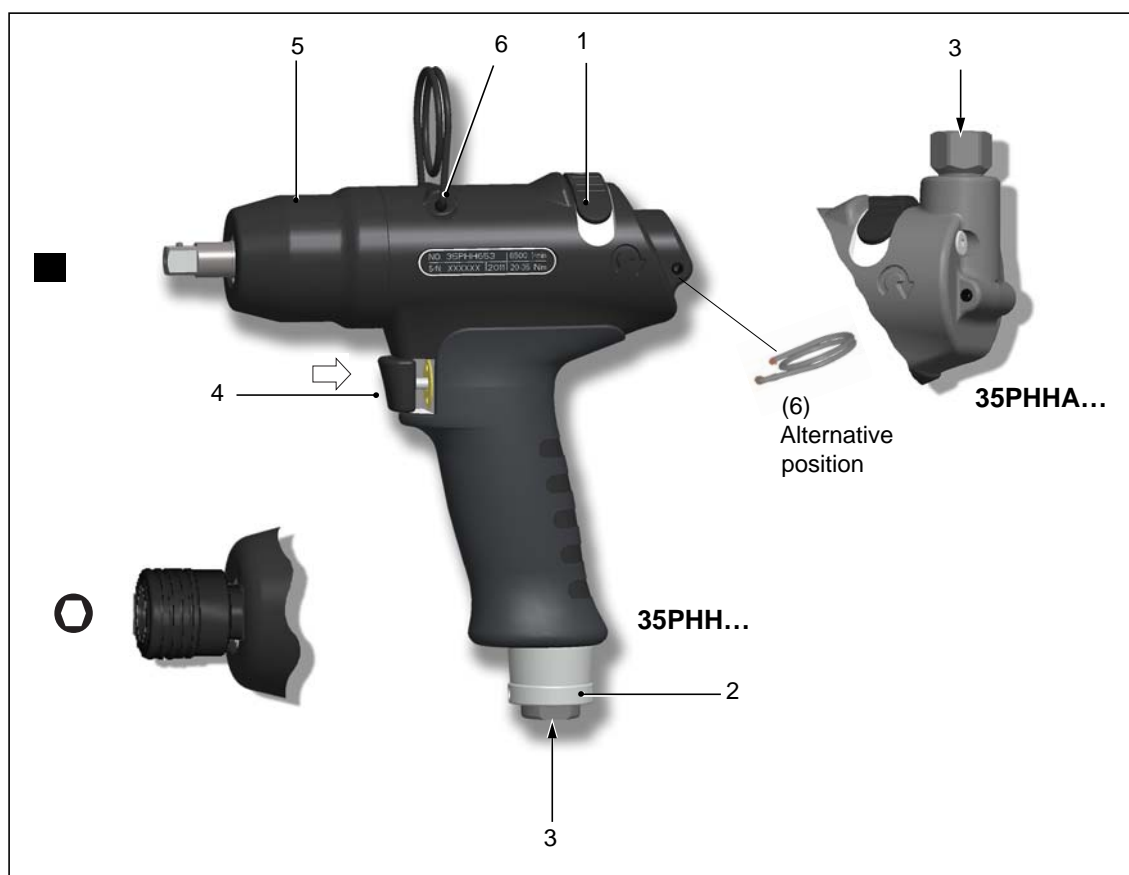3.1 Operation and functional elements



Item.	Designation
1	Reverse switch
2	Exhaust air throttle: torque adjustment, see Abb. 4-1 , page 12
3	Air inlet
4	Start button
5	Reserve oil, see 5.2 Fill reserve oil, page 16
6	Suspension bail

3.2 Options

	Protective sleeve Order No. 937448PT – 35PHH... Order No. 937443PT – 35PHHA...
	Vibration absorber Order No. 935965 – 35PHHA...

4 Before initial operation

4.1 Air supply

Parameter	Data
Air hose	Inner diameter 3/8" (ø 9.5 mm), maximum length 5 m
Air inlet	1/4" NPT, inner diameter ≥7.5 mm

- Make sure that the pressure before the pressure regulator is at least 0.5 bar higher than the required inlet air pressure at the tool.
- Keep the inside of the air hose free of residue; clean it if necessary.

Air quality

In accordance with ISO 8573-1, quality class 2.4.3, compressed air must be dry and clean.

Parameter	Data
Working pressure range	400 ... 700 kPa
Max. dew point	+ 10° C

Air preparation units

Our recommendation: air preparation units (filters, regulators, lubricators) should be installed

Device	Explanation
Filter	Retention of particles > 15 micrometers. Removes more than 90% of condensation.
Regulator	To attain constant work results, the working pressure must be kept constant for every individual tool.

Device	Explanation
Lubricator	<p>Compressed air requires a small amount of oil and is orientated to the air consumption of the tool.</p> <p>→ Calculate the time (T) between two drops of oil and make the following settings at the lubricator:</p> $T = \frac{60}{F \times L}$ <p>F = Factor for pulse nutsetter = 2 L = Air consumption of tool at idle m³/min (see performance data for pulse shut-off nutsetter)</p>

Oils according to DIN 51524 / ISO 3498

Order no.	Packaging unit Liter	Name	ARAL	BP	elf	ESSO	INA	Mobil	Klüber	SHELL
933090	2	HL32	Aralub EE 100	Energol HL 32	Polyelis 32 Olina 32	Nuto H 32	Hydraol 32A	D.T.E.Oil Light Vactra Oil Light	Crukolan 32	Molina 32 Molina 22

4.2 Change air inlet: top / bottom (only on 35PHHA)

When delivered, the air inlet is at the BOTTOM and sealed with a screw plug. To change the air supply from top to bottom:

- Remove the air strainer from the air inlet at the TOP (do not discard), see 8.2 Pistol grip 35PHHA..., page 30, Detail X.
- Remove screw plug from BOTTOM. When doing this, counterhold with wrench (WAF 17).
- Seal the air inlet at TOP with screw plug in accordance with specifications.

4.3 Connect the tool

CAUTION!




The air hose can come off by itself and whip around uncontrollably.

- Shut off the compressed air before making the connection.

- Connect the tool to the compressed air line.
Maximum screwing-in torque = 40 Nm. Reaction torque at flat end. Counterhold with wrench (WAF 17).
- Activate compressed air: 620 kPa.

4.3.1 Testing

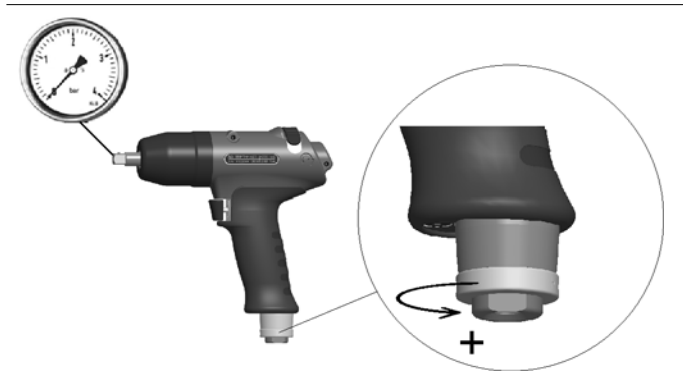


- Fully open exhaust air throttle anti-clockwise.
- Check speed at output drive: >6500 rpm

4.4 Setting up the tool

The tool must be configured for the desired rundown.

4.4.1 Setting the torque

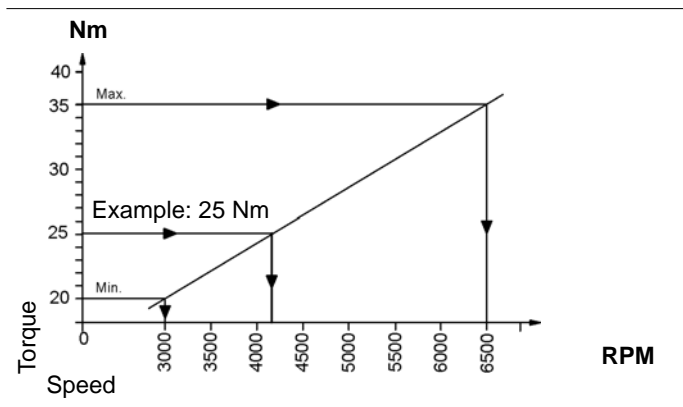

Settings example:

Tightening: 25 Nm


Screw M8: 8.8

- Set speed to approximately 4200 rpm.

Abb. 4-1

- To achieve better repeat precision for fastenings, throttle the speed back at the tool until the required torque is achieved at the end of rotation of the fastening. On hard to medium-hard screwed joints, this is achieved in 1 to 2 seconds. Longer fastening then does not result in higher torque.

4.4.2 Changing Torque

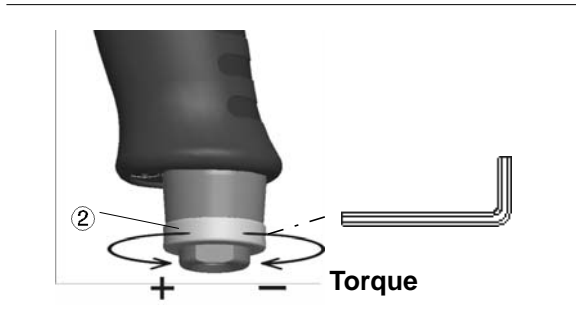

- Unscrew the threaded pin using the hex wrench (WAF 2).
- To reduce torque, turn the exhaust air throttle ② clockwise.
- To increase torque, turn the exhaust air throttle ② counter-clockwise.

Abb. 4-2

NOTE



The torque setting may be corrected when the compressed air is activated.

4.4.3 Checking torque

We recommend carrying out a *static* torque check by retightening the screwed joint.

- If the torque difference is too large, it may be necessary to change the torque setting. See 4.4.2 Changing Torque.
- If the setting has been changed, check the torque again.

When carrying out a *dynamic* measurement using a transducer adapter, also carry out a static test on the screwed joint, for example with a torque wrench (electronic).

4.5 Troubleshooting

Error	Possible causes	Measures and remedies
Tool too strong	Torque set too high	→ Reduce the torque setting, see 4.4.2 Changing Torque, page 13
Tool too weak	Working pressure too low	→ Check the cross section of the hose and coupling: Inner diameter 3/8" (ø 9.5 mm), maximum length 5 m → Increase the working pressure.
	Reverse button is not at the detent	→ Turn the reverse button to the detent
	Excessive transmission damping due to extension and worn socket.	→ Increase the speed, see 4.4.1 Setting the torque, page 12. → Use a shorter or more rigid extension. → Replace the socket
	Insufficient oil in the pulse unit (no pulse build-up)	→ See 5.2 Fill reserve oil, page 16
	Screen in the air inlet tube / muffler is dirty	→ Clean or replace parts

Error	Possible causes	Measures and remedies
Accuracy insufficient	Adapter parts	→ Replace adapter parts → Use extension and socket with guide diameter
	Pressure fluctuations in the air network	→ Use a pressure regulator
	Premature release of the start button	→ Keep start button pressed until nut-setter has stopped rotating
Fastening time too long: > 4 seconds	Joint too soft; crush nuts, self-tapping screws	→ Increase the speed → Use a pulse nutsetter with a higher capacity.

5 Maintenance

CAUTION!



Danger of injury due to unintentional activation
– before service, disconnect the tool from the compressed air supply.

5.1 Service schedule

Regular service reduces operating faults, repair costs and downtime.

Maintenance interval	Rundowns	Measures
W1	100.000	<ul style="list-style-type: none"> → Check the suspension bail for functional safety. → Check the air hose for wear. → Check the square on the output drive for wear. → Check the air inlet for tight fit. → Check the housing of the pulse unit for tight fit. → Check the maximum idling speed. → Check the reserve oil.
W2	500.000	<ul style="list-style-type: none"> → Oil change, see 5.3 Complete oil filling, page 18. → Motor service kit, see 3) Part of motor service kit K1 order no. 936168, page 29. → Hydraulic service kit, see 3) Part of hydraulic service kit K2, order no. 936211, page 35. → Replace muffler, filter.
W3	1.000.000	Check individual parts and replace if necessary <ul style="list-style-type: none"> → Suspension bail → Throttle valve → Exhaust air throttle → Motor → Pulse unit

This maintenance schedule uses values that are valid for most applications. For a specific maintenance interval, see 5.1.1 Calculating a customer-specific maintenance plan, page 16.

Implement a safety-related maintenance program that takes the local regulations for repair and maintenance for all operating phases of the tool into account.

5.1.1 Calculating a customer-specific maintenance plan

A service interval **W(1,2,3)** depends on the following factors:

Factor	Value assumed in 6.1, "Maintenance plan"	Description
V	V1 = 100,000 V2 = 500,000 V3 = 1,000,000	Number of rundowns after which a maintenance measure is prescribed by Apex Tool Group.
T1	1.8 seconds	Specific rundown time, measured in life and endurance tests.
T2	2 seconds	Actual rundown time, depending on the hardness of the joint.
S	1; 2; 3	Number of shifts per day.
VS	750	Number of rundowns per shift.

T2, S and **VS** are variable factors and can differ depending on the specific application.

Example for service interval W2:



After 500,000 rundowns (V),
a specific rundown time of 1.8 seconds (T1)
with an actual fastening time of 3 seconds (soft joint) and
3 completed shifts per day and 750 rundowns per shift:

$$W(1, 2, 3) = \frac{V \times T_1}{T_2 \times S \times VS} \quad W2 = \frac{500000 \times 1,8}{2 \times 3 \times 750} = 200 \text{ Tage}$$


You have to carry out the maintenance measures marked W2 after an operating time of 200 days.

5.2 Fill reserve oil

If **X = 0** (see picture 2), the reserve oil is exhausted and must be refilled to guarantee a controlled process.


1

→ Remove pulse unit.

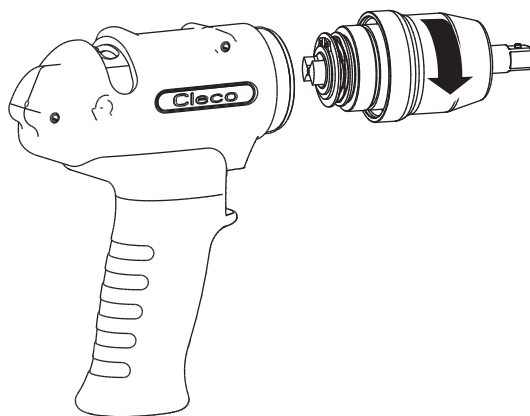


2

→ Remove set bolt and ball.

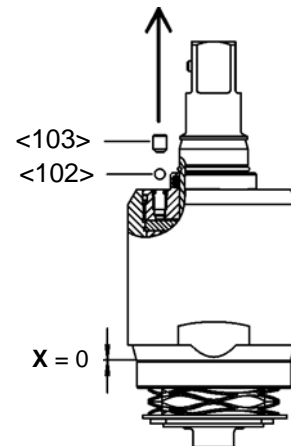


3

→ Align both ends as shown in the picture (internal equalization hole is opened).

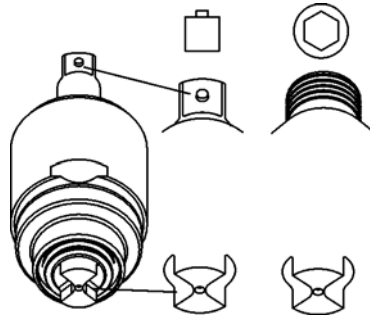**4**

→ To avoid air pockets, fill the filling hole full of oil.

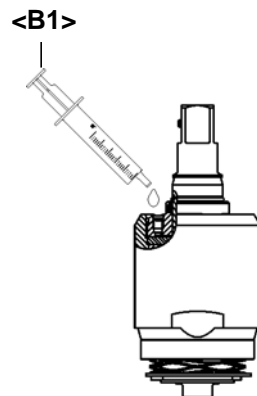
**5**

→ Position the injector so that it has a sealing effect and add reserve oil until distance **X** for spacer **<B2>** is achieved.

→ Maintain distance **X** and secure with **<B2>**.

→ Refit set bolt and ball.

→ Remove **<B2>**.

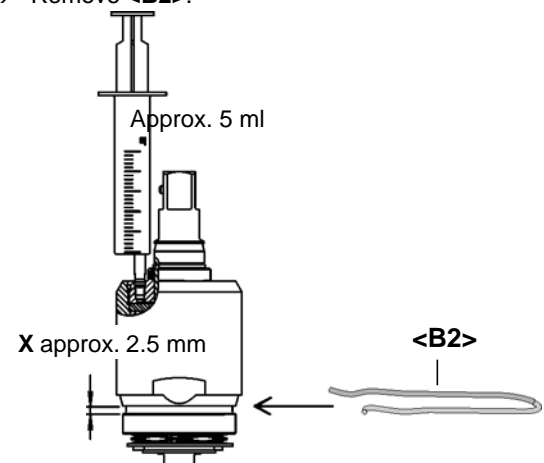


5.3 Complete oil filling

If no more pulses are generated, or if the pulse unit has been removed and refitted, the pulse unit must be completely refilled with oil:

Oil order No. 925715, ESSO-UNIVIS HVI26, approx. 2 liters, temperature $20 \pm 5^\circ\text{C}$


1

→ Remove set bolt and ball

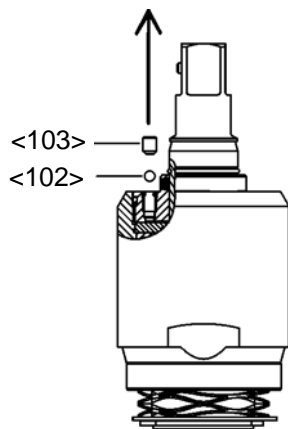


2

→ Align both ends of the pulse unit as shown in the picture (internal equalization hole is opened)

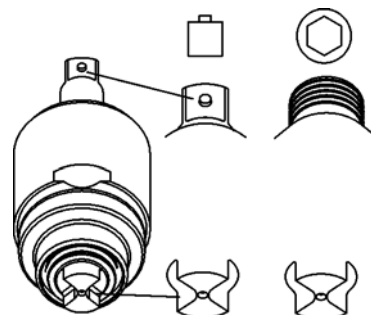

3

→ Use adapter ① to connect pulse unit to the quick disconnect coupling.
→ Close shutoff valve ②.

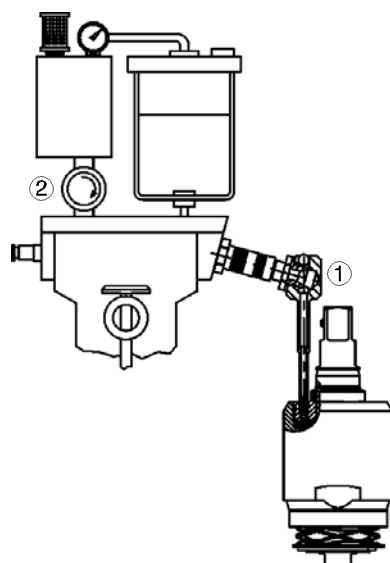


4

→ Set the working pressure to approx. 500 kPa.
→ Slowly open the shut-off valve all the way until the gauge shows a negative pressure of $<10\text{ mbar}$ (-1 bar).
→ Wait approx. 2 minutes until the number of vacuum bubbles has reduced significantly.
→ Slowly close the shut-off valve. The gauge shows atmospheric pressure again. Missing oil will be pressed back into the pulse unit.
→ If necessary, repeat the last 3 rundown steps until bubbles are reduced practically to zero.




5

- Uncouple the pulse unit and unscrew the adapter.
- To avoid air pockets, fill the filling hole full of oil.

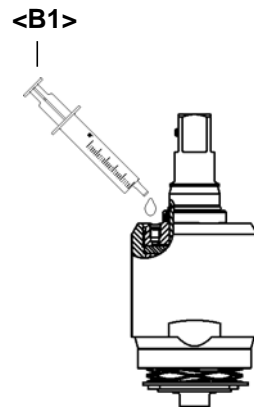**6**

- Position the injector so that it has a sealing effect and add reserve oil until distance **X** for spacer **<B2>** is achieved.
- Maintain distance **X** and secure with **<B2>**.
- Refit set bolt and ball.
- Remove **<B2>**.

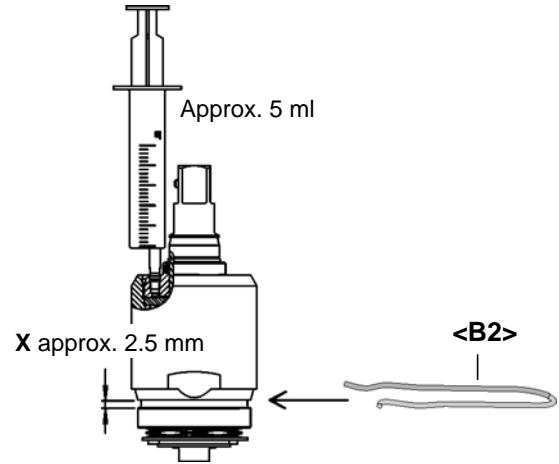**NOTE**


Small air bubbles that become visible due to the high pressure during filling do not mean that the pulse unit is leaking. This will not negatively affect the filling result.

Empty side


6 Disassembly instructions

<...> Please refer to 8 Spare parts, page 27 and 8.5 Equipment order list, page 36


6.1 Remove motor unit

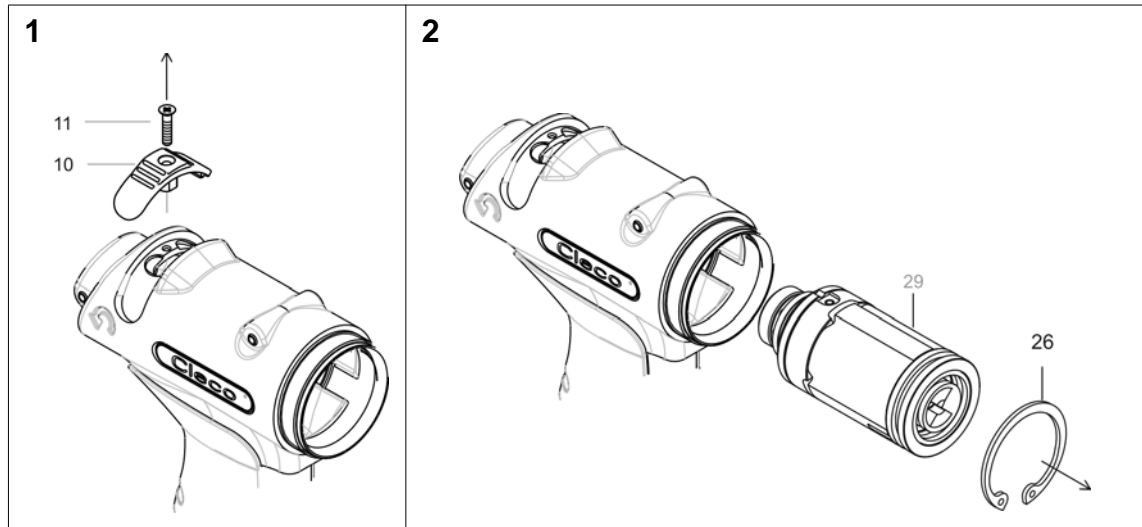


Changing blades

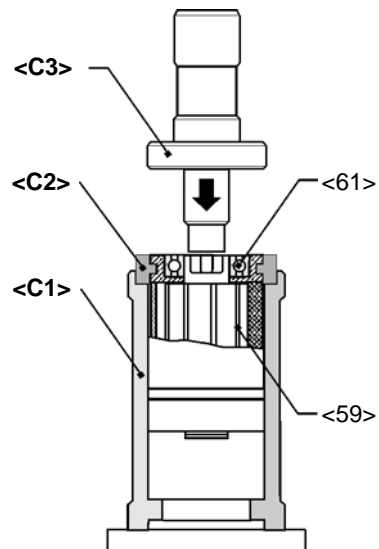

Changing bearings / rotor

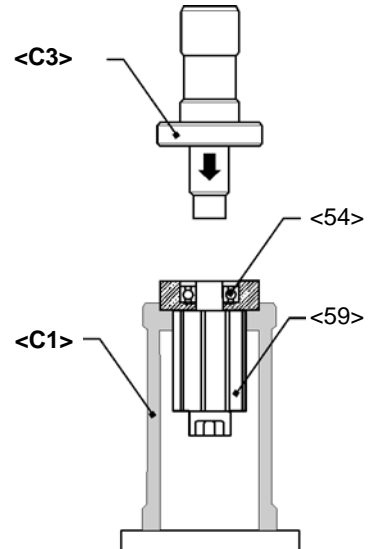

6.2 Remove throttle valve

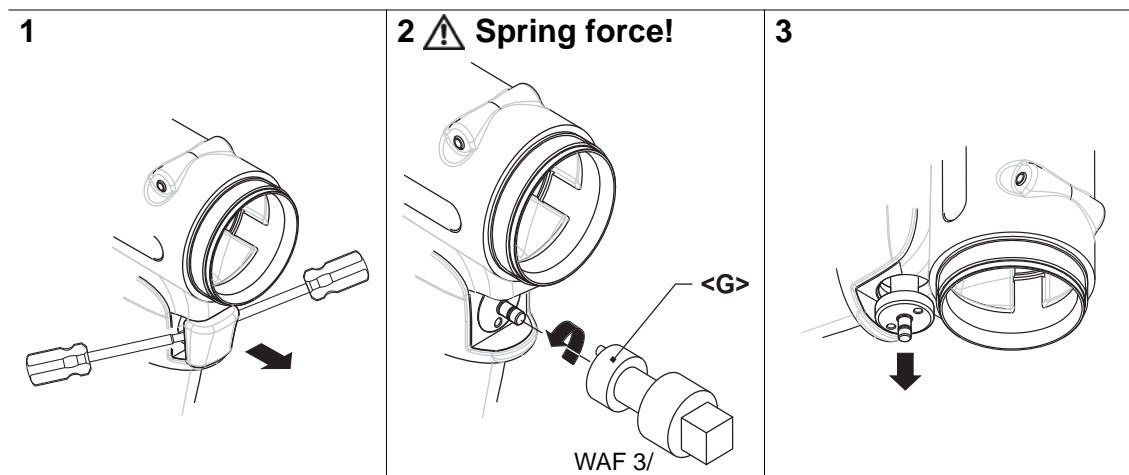

6.3 Remove pulse unit

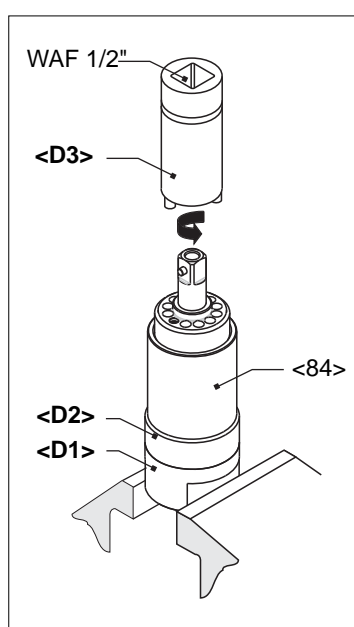


Abb. 6-1

CAUTION!



Skin irritation in case of direct contact with oil.
Wear protective gloves.

CAUTION!



Hydraulic blade is under spring pressure!
Wear protective goggles.

NOTE



Permitted only if filling is guaranteed with oil filling device, see 5.3 Complete oil filling, page 18. Pulse unit must have cooled down to room temperature.

7 Assembly instructions

<...> Please refer to 8 Spare parts, page 27 and 8.5 Equipment order list, page 36

7.1 Install motor unit

CAUTION!





- Only perform installation in accordance with exploded drawing, see 8.3 Motor unit, page 32. Incorrect installation can lead to uncontrolled reactions, e.g. unexpected start-up or parts being hurled out.
 - Tighten all screwed joints of the tool carefully, according to the specifications.
-

NOTE




To prevent damage, lubricate the gaskets and O-rings using grease (order no. 914392) before assembly.

7.1.1 Install rotor cover

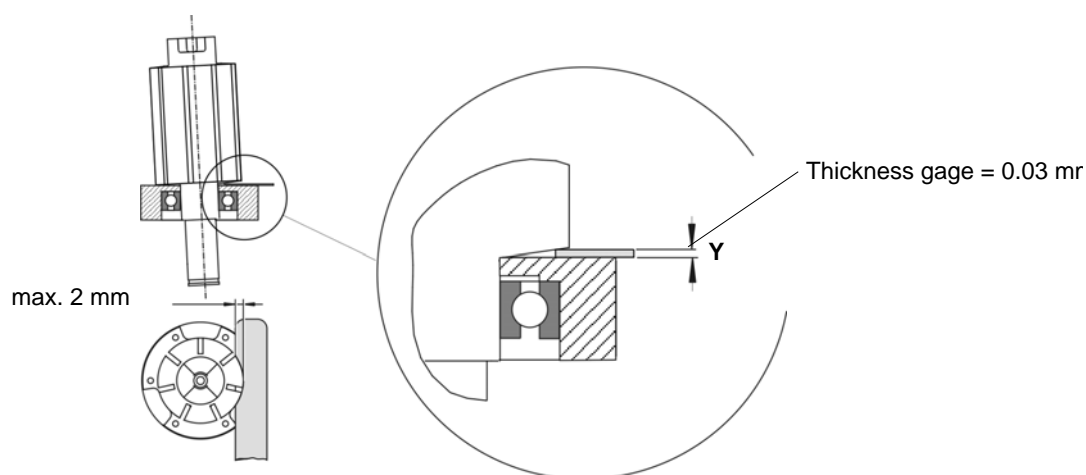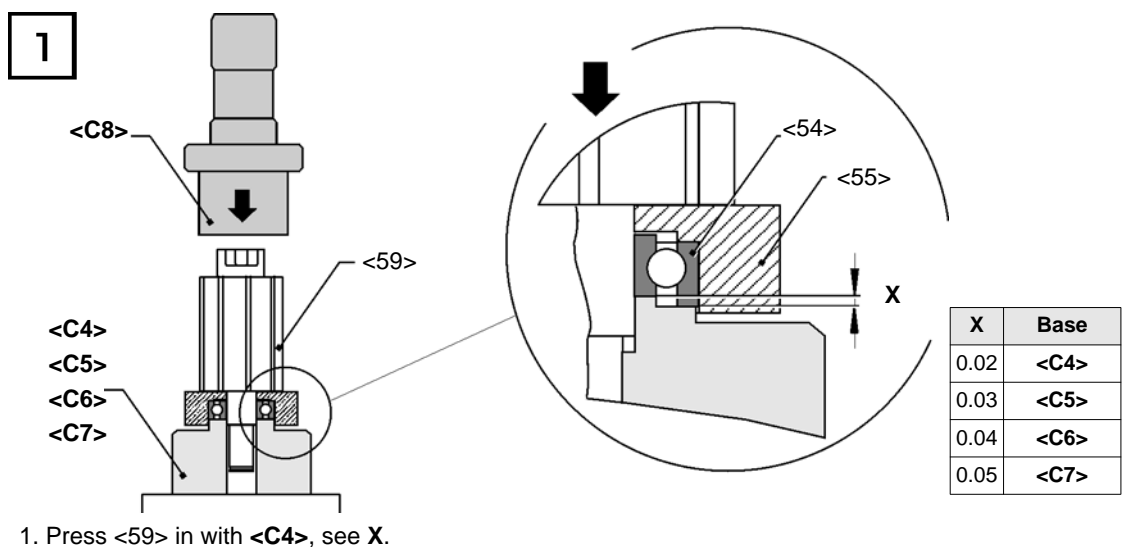

2. **Examine Y** with thickness gage. If dimension > Y, step 1 with support <C5>, <C6>, <C7> repeat.

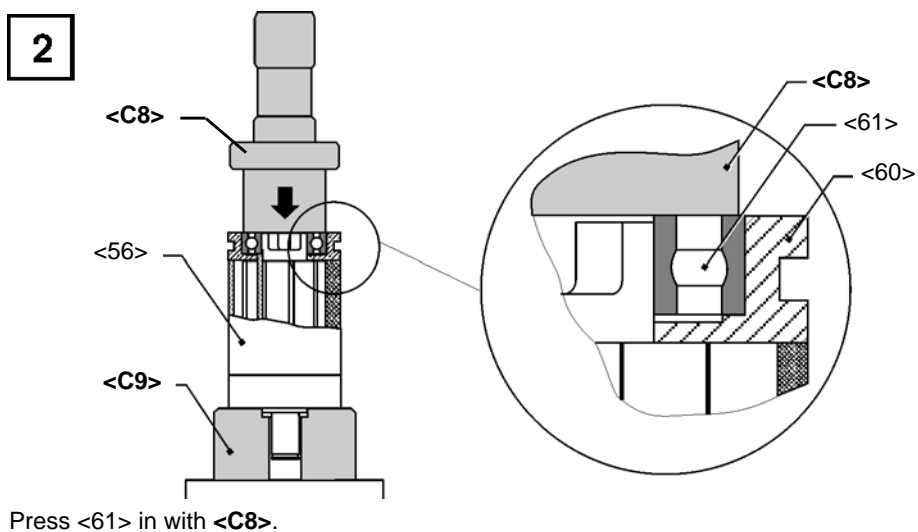


7.2 Install pulse unit

NOTE



To prevent damage, lubricate the gaskets and O-rings using grease (order no. 914392) before assembly.

7.2.1 Assembling the hydraulic blades

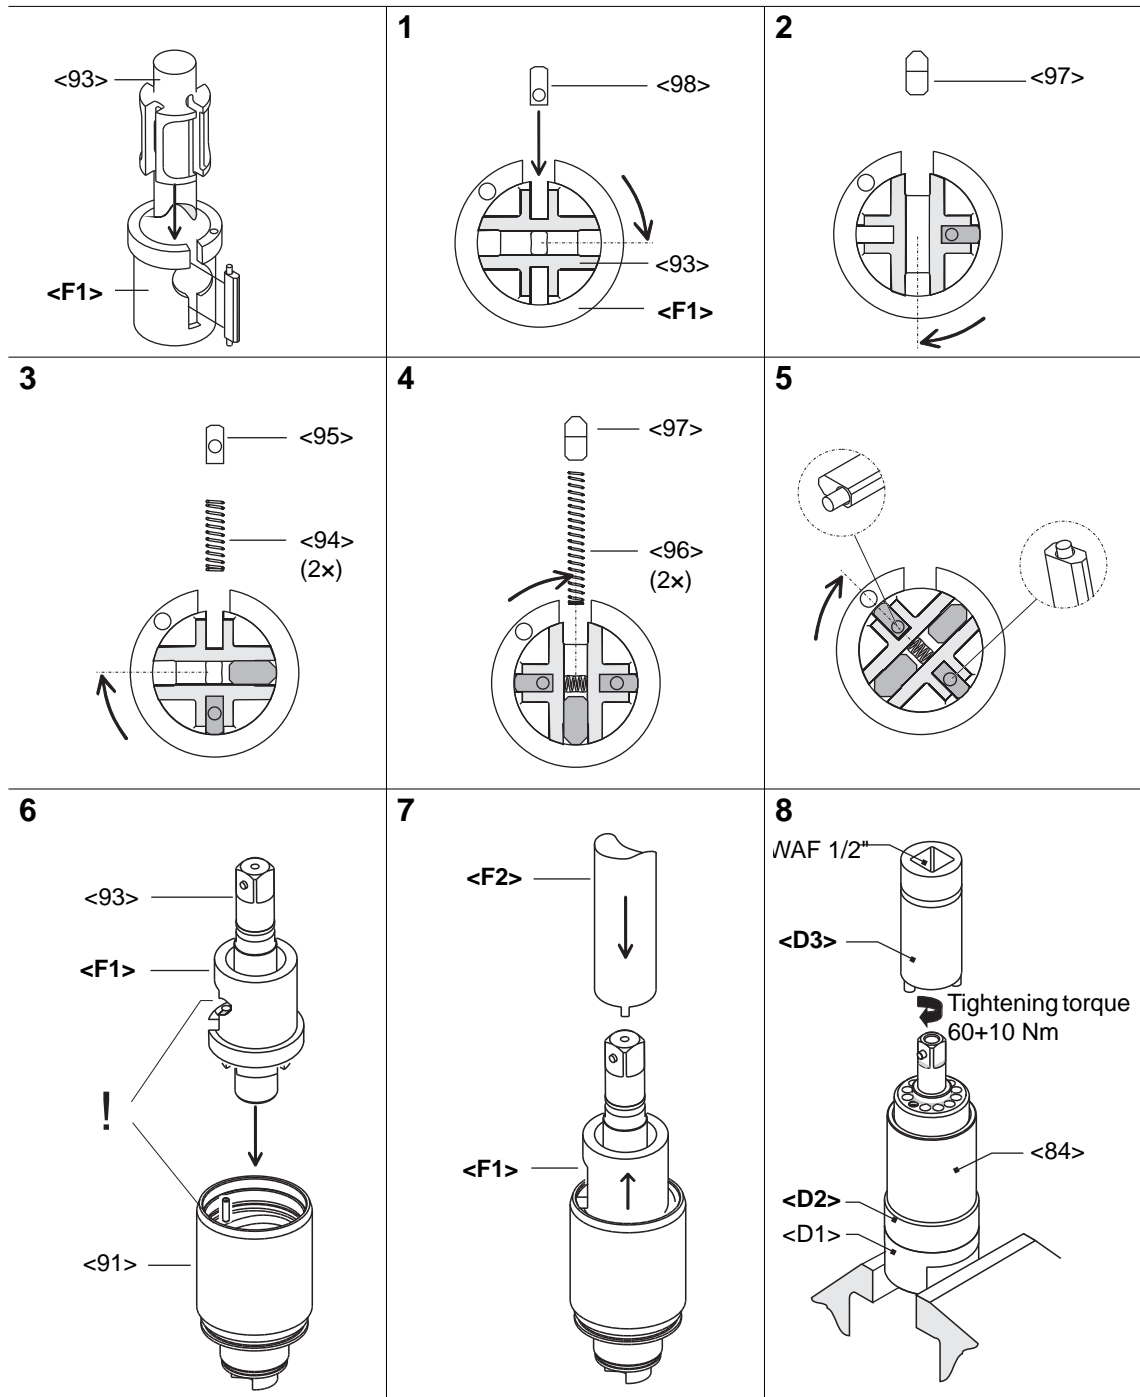

8 Spare parts

NOTE




Only Cleco original spare parts should ever be used. Using other parts could lead to inferior performance and increased maintenance requirements. If non-original spare parts are installed, the tool manufacturer is entitled to declare all warranty obligations for null and void.

We would be glad to prepare a special quote for you for spare and wear parts.
Please give the following data:

- Tool model
- Number of tools
- Number of rundowns per day or per shift
- Turn-off torque
- Fastening time per rundown

8.1 Pistol grip 35PHH...

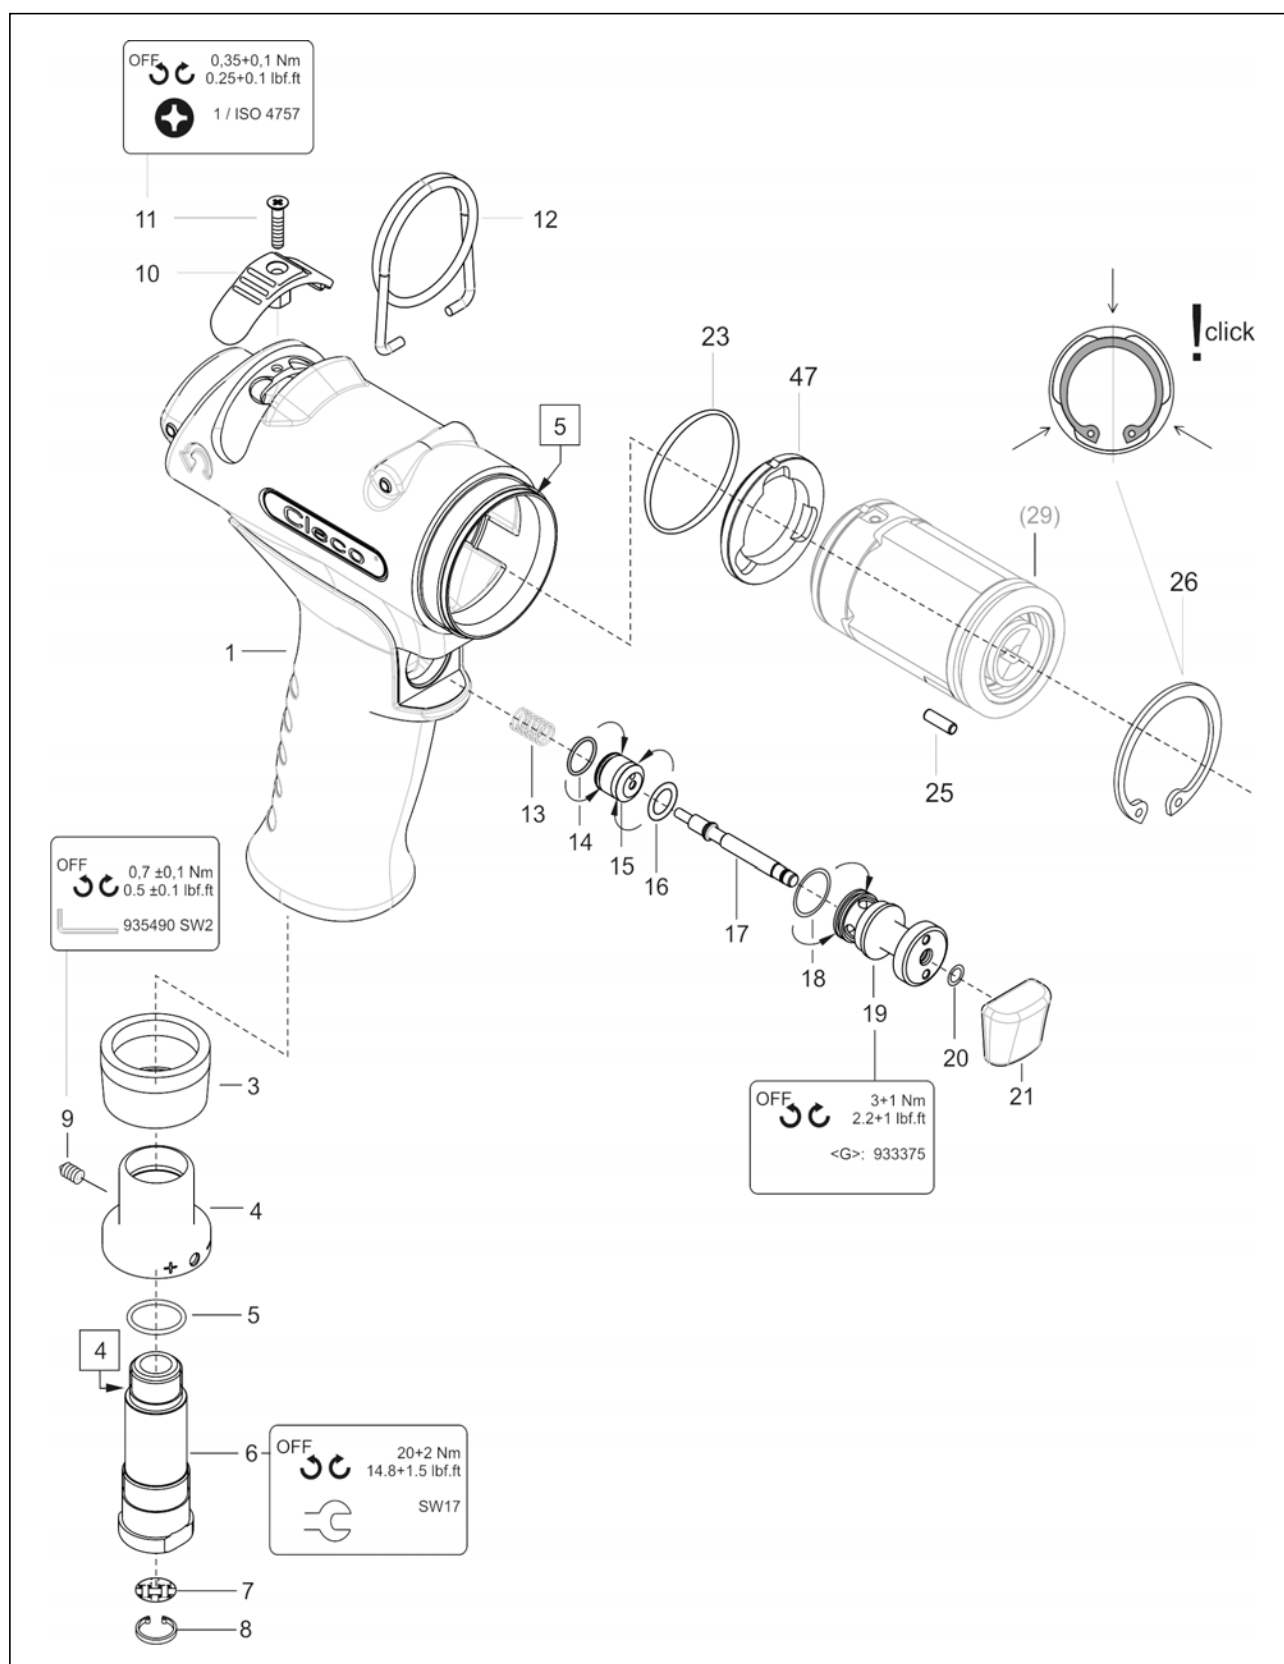

Index	1)	2)	3)	Description	4)
1	936161	1		pistol grip housing asm.	
3	935438	1	K1	muffler	
4	935434	1		exhaust air throttle	
5	922660	1	K1	o-ring	16,X1,5
6	935437	1		air inlet	
7	905031	1	K1	screen	
8	905599	1	K1	circlip	11,X1, IR
9	S905998	1	K1	set bolt	M 4X4
10	935422	1		reverse button	
11	931792	1		countersunk screw	M 3X 14
12	935442	1		suspension bail	
13	935482	1	K1	compression spring	0,5 X 6,X 23,8
14	539188	1	K1	o-ring	9,X1,
15	935441	1		piston	
16	504970	1	K1	o-ring	7,65X1,78
17	935440	1		control push rod	
18	912150	1	K1	o-ring	12,X1,
19	935439	1		plug	
20	905086	1	K1	o-ring	4,X1,
21	935446	1		push-button	
23	926567	1	K1	o-ring	35, X1,5
25	916772	1	K1	needle roller	3,X9,8
26	917808	1	K1	circlip	38,X1,5IR
47	936222	1		air distributor	


1)Order no.

2)Quantity

3)Part of motor service kit K1 order no. 936168

4)Dimensions

8.2 Pistol grip 35PHHA...

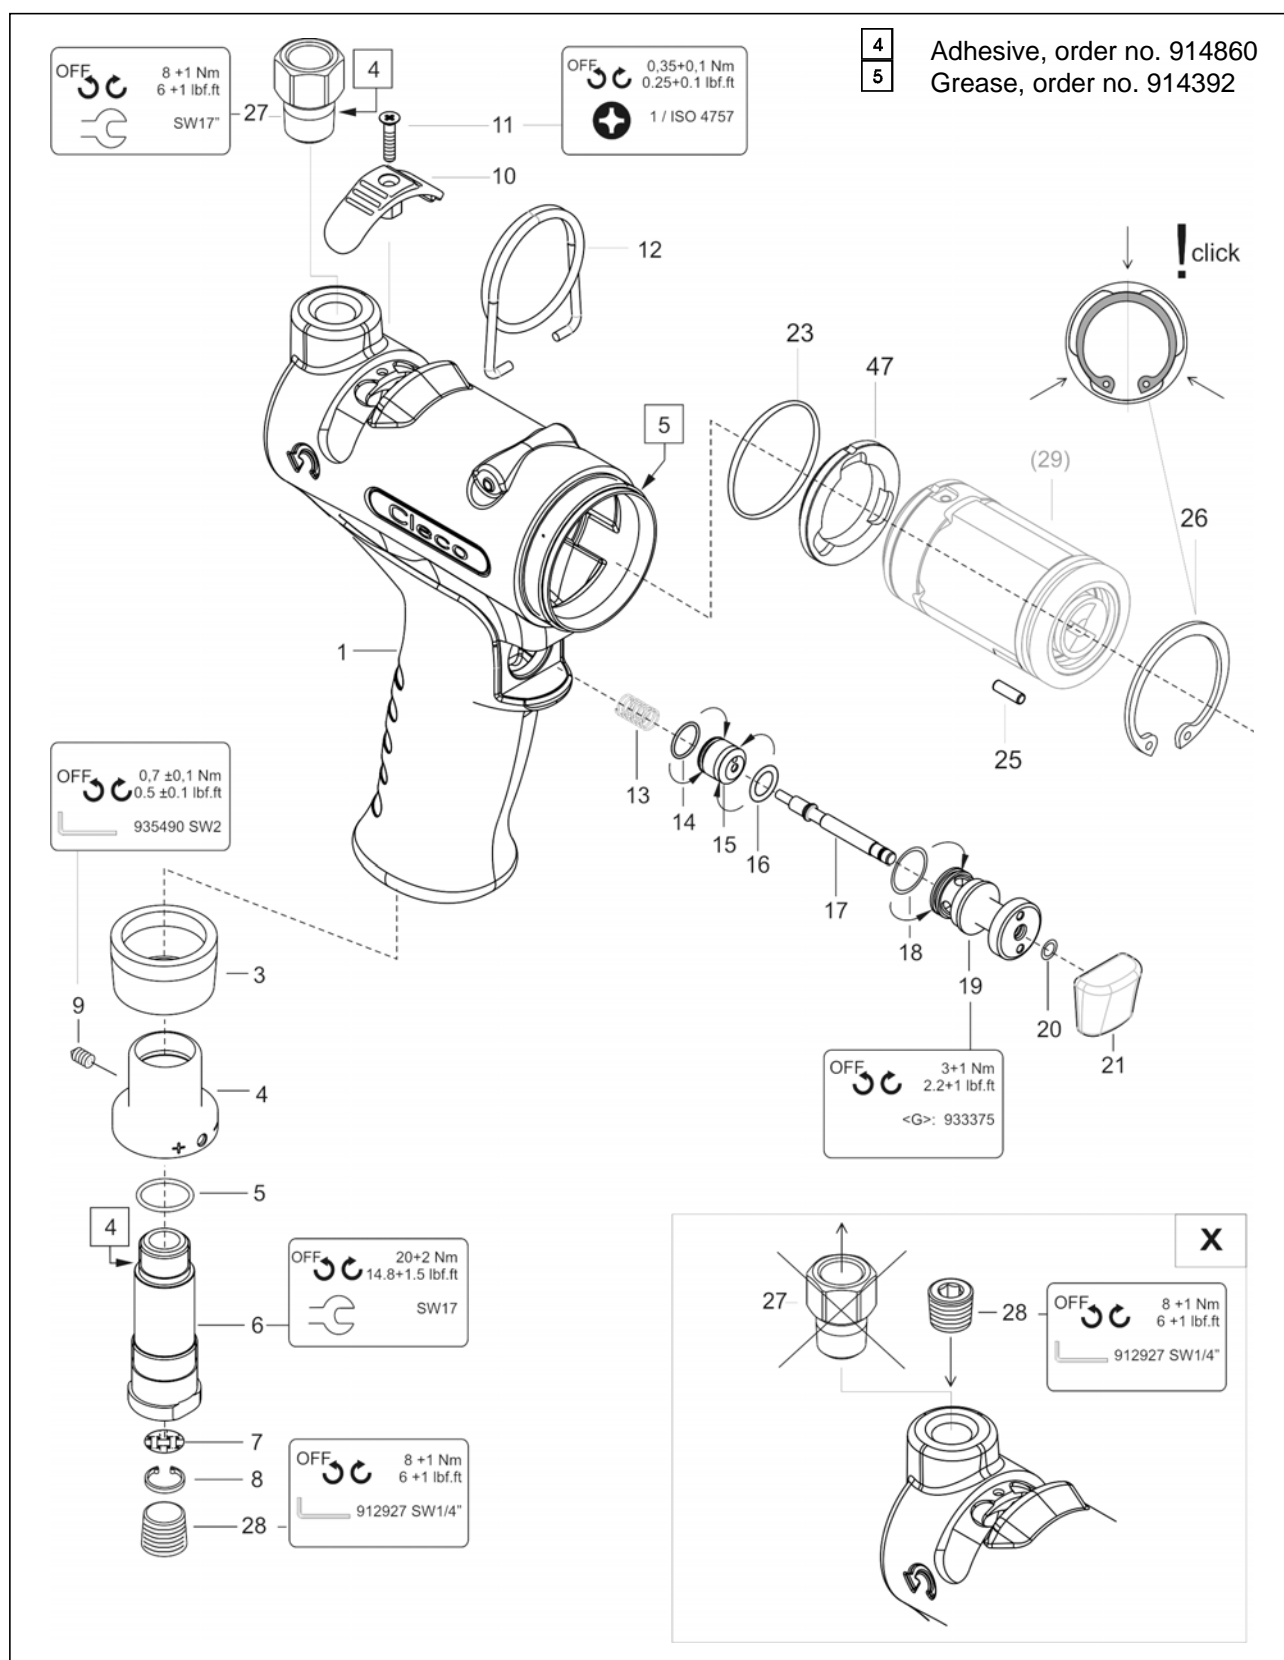

Index	1)	2)	3)	Description	4)
1	936165	1		pistol grip housing asm.	
3	935438	1	K1	muffler	
4	935434	1		exhaust air throttle	
5	922660	1	K1	o-ring	16,X1,5
6	935437	1		air inlet	
7	905031	1	K1	screen	
8	905599	1	K1	circlip	11,X1, IR
9	S905998	1	K1	set bolt	M 4X4
10	935422	1		reverse button	
11	931792	1		countersunk screw	M 3X 14
12	935442	1		suspension bail	
13	935482	1	K1	compression spring	0,5 X 6,X 23,8
14	539188	1	K1	o-ring	9,X1,
15	935441	1		piston	
16	504970	1	K1	o-ring	7,65X1,78
17	935440	1		control push rod	
18	912150	1	K1	o-ring	12,X1,
19	935439	1		plug	
20	905086	1	K1	o-ring	4,X1,
21	935446	1		push-button	
23	926567	1	K1	o-ring	35, X1,5
25	916772	1	K1	needle roller	3,X9,8
26	917808	1	K1	circlip	38, X1,5 IR
27	935727	1		air strainer	
28	931771	1		screwed plug	1/4 NPT
47	936222	1		air distributor	


1)Order no.

2)Quantity

3)Part of motor service kit K1 order no. 936168

4)Dimensions

8.3 Motor unit

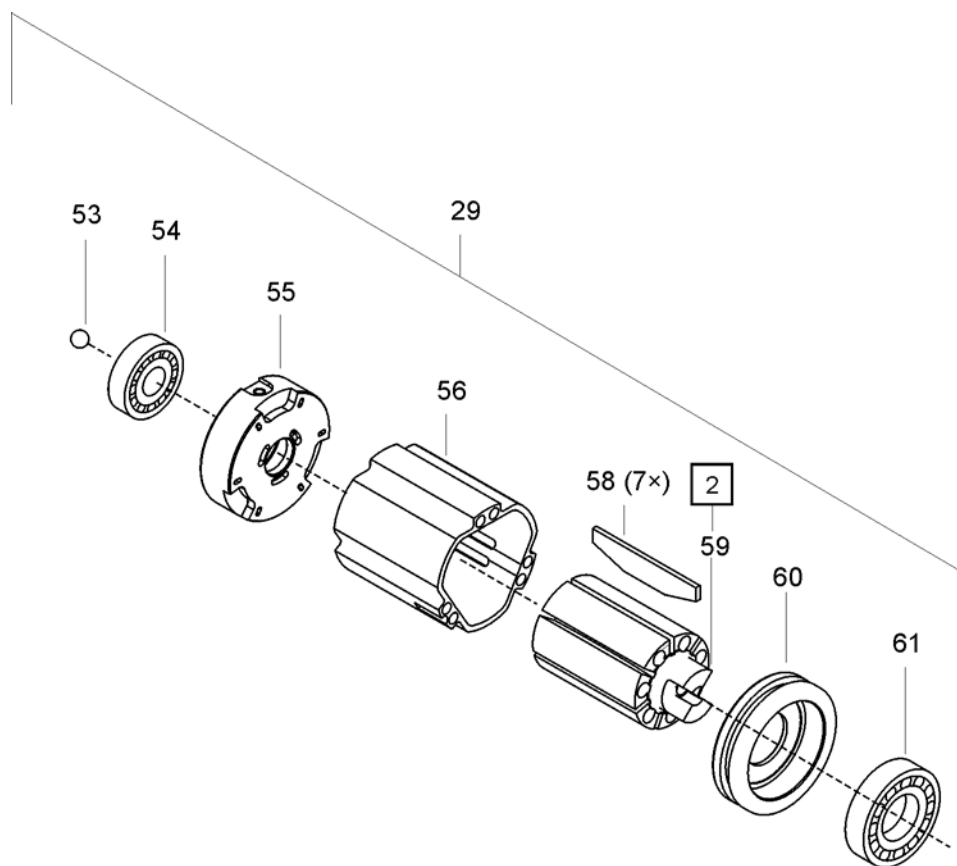

2 Axial clearance, see 7.1.1 Install rotor cover, page 24

Index	1)	2)	3)	Description	4)
29	936166	1		motor unit	
53	936265	1	K1	ball	6,35 POM
54	936243	1	K1	ball bearing	12, X 24, X 6,
55	936232	1		rotor cover	
56	935458	1		rotor cylinder	
58	935455	7	K1	blade	L28 D1,6 H 8,0
59	936225	1		rotor asm.	
60	935433	1		rotor cover	
61	S909814	1	K1	ball bearing	15,X 28,X 7,


1)Order no.

2)Quantity

3)Part of motor service kit K1 order no. 936168

4)Dimensions

8.4 Pulse unit

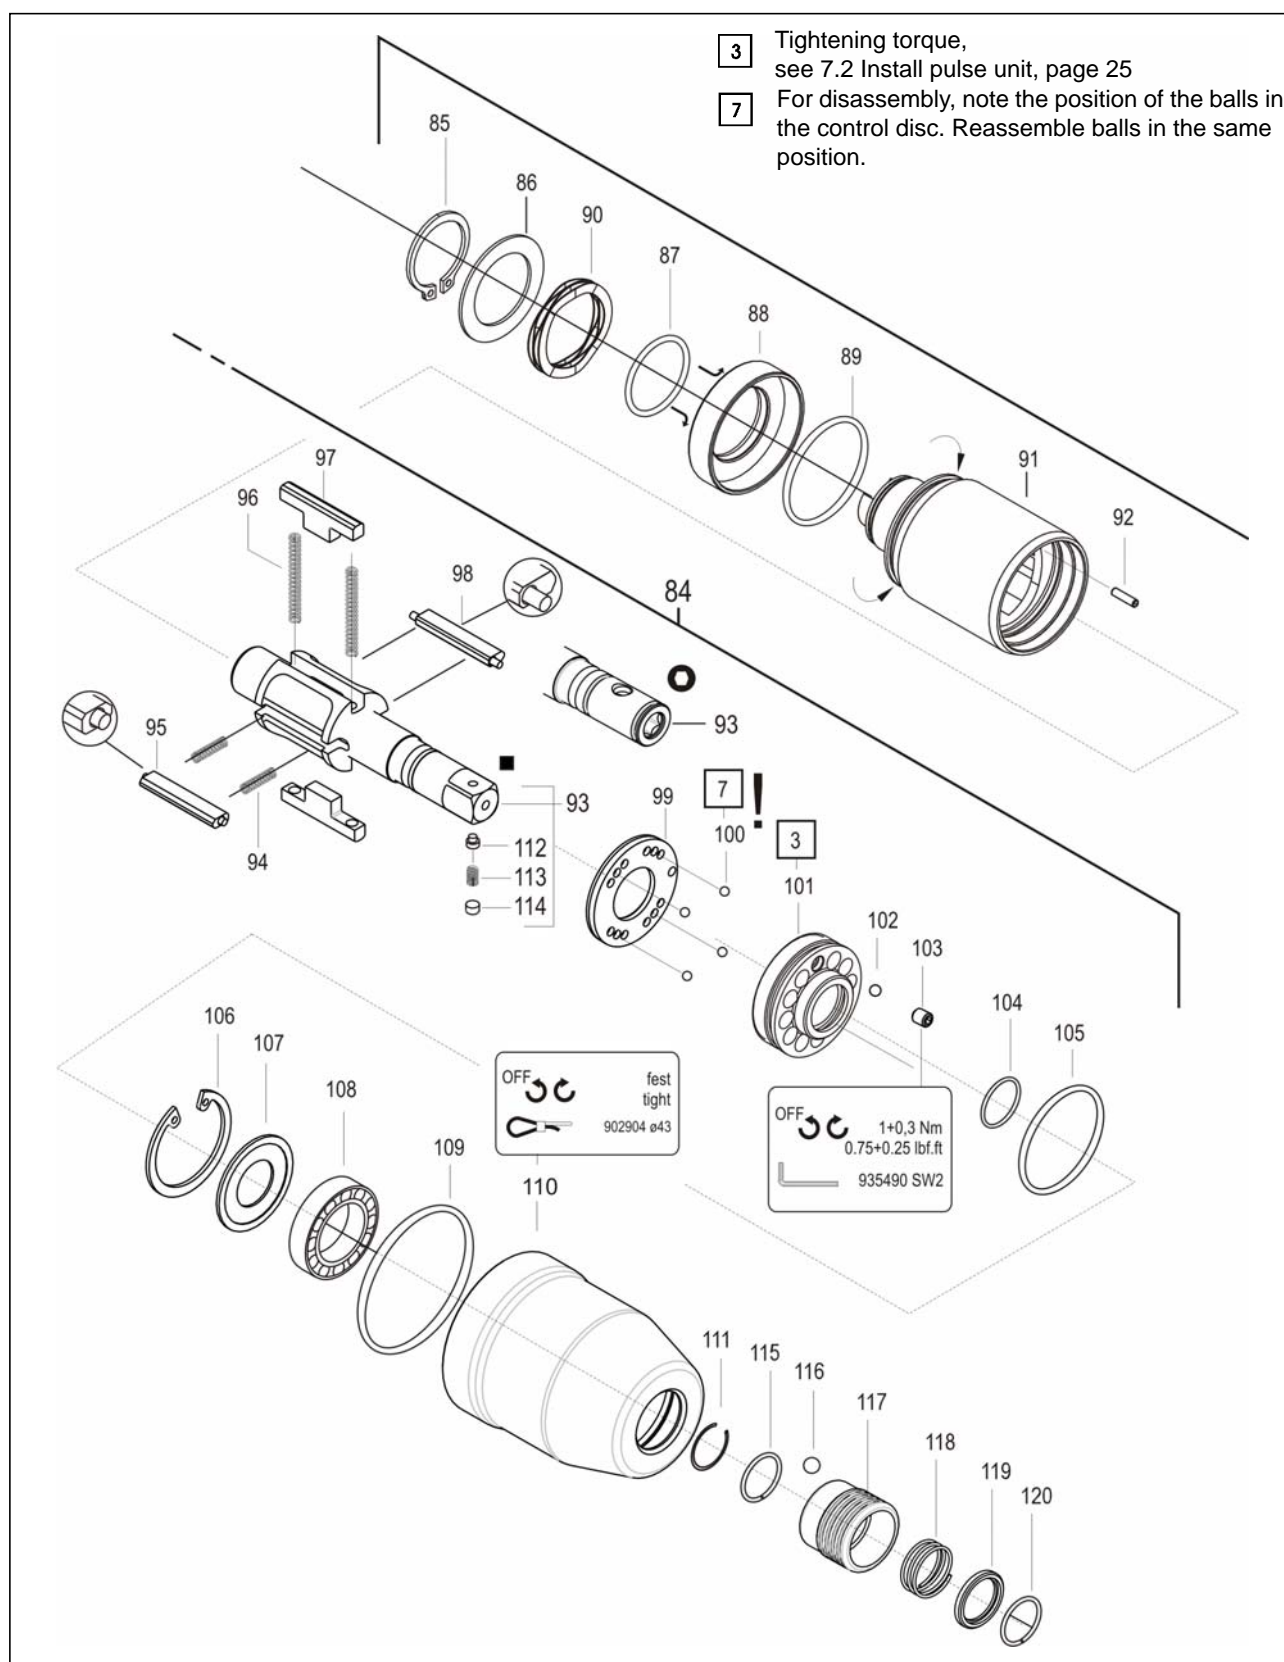

Index	1)	2)	3)	Description	4)
84	*	1		pulse unit	
85	S918512	1	K2	circlip	21, X1,2 AR
86	933867	1	K2	shim ring	22, X 32, X 0,5
87	249380PT	1	K2	o-ring	21,95X1,78
88	936190	1		equalizing piston	
89	505719	1	K2	o-ring	29,87X1,78
90	936195	1	K2	equalizing washer	29, X 21, X 0,30
91	936185	1		hydraulic cylinder	
92	930587	1		needle roller	2,5 X9,8
93	*	1		hydraulic rotor asm.	
94	932221	2	K2	compression spring	20,38X 2,5 X 13,86
95	935427	1		control blade asm.	
96	935461	2	K2	compression spring	0,40X 2,7 X 44,6
97	935426	2		hydraulic blade	
98	935429	1		control blade asm.	
99	935421	1		control disc	
100	917793	8	K2	ball	2,500MM
101	935417	1		bearing ring	
102	911315	1	K2	ball	3,000MM
103	919140	1	K2	set bolt	M4X5
104	929946	1	K2	o-ring	14,X2,
105	915076	1	K2	o-ring	30,X1,5
106	914147	1	K2	circlip	30,X1,2IR
107	935462	1		washer	
108	9D5834	1	K2	ball bearing	12,7 X 28,58X 6,35
109	935445	1	K1	o-ring	42,X1,5
110	937402PT	1		housing	
111	902180	1	K2	circlip	12,X1, AR
112	914517	1		pin	
113	9D6481	1		compression spring	0,3 X 3,2 X 9,2
114	26989PT	1		plug	
115	*	1	K2	retaining ring	11,4 X1,0 AR Q=RD
116	*	1	K2	ball	4,500MM
117	*	1		sleeve	
118	*	1	K2	compression spring	0,85X15,5 X 18,2
119	*	1		ring	
120	*	1	K2	retaining ring	11,4 X1,0 AR Q=RD

1)Order no.

2)Quantity

3) Part of hydraulic service kit K2, order no. 936211

4)Dimensions

*

Order no.	<84>	<93>	<115>	<116>	<117>	<118>	<119>	<120>
35PHH653 35PHHA653	936043	935410	—	—	—	—	—	—
35PHH65Q 35PHHA65Q	936044	935453	931789	917794	935477	935406	931793	931789

8.5 Equipment order list

Index	1)	Description
A		928476 Oil filling device
	A1	928483 Oil filling unit
	A2	931968 Joining piece cpl.
B		936695PT Reserve oil filling set
	B1	936690PT Oil syringe asm.
	B2	937412PT Spacer
C		938572PT Assembly/Disassembly motor unit
	C1	933484 Support
	C2	933481 Semi-monocoque pair
	C3	933480 Punch
	C4	938573PT Support 0,02 mm
	C5	938574PT Support 0,03 mm
	C6	938575PT Support 0,04 mm
	C7	938576PT Support 0,05 mm
	C8	933487 Punch
	C9	938577PT Support
D		933493 Assembly/Disassembly pulse unit
	D1	933494 Retainer
	D2	933495 Centering
	D3	933497 Socket wrench
E		933498 Installing the actuating ring
F		938535 Assembly hydraulic blade/control blade
	F1	938537 sleeve
	F2	938536 awl
G		933375 fixture for trigger valve

1)Order no.

9 Technical data

9.1 Dimensions 35PHH... in mm

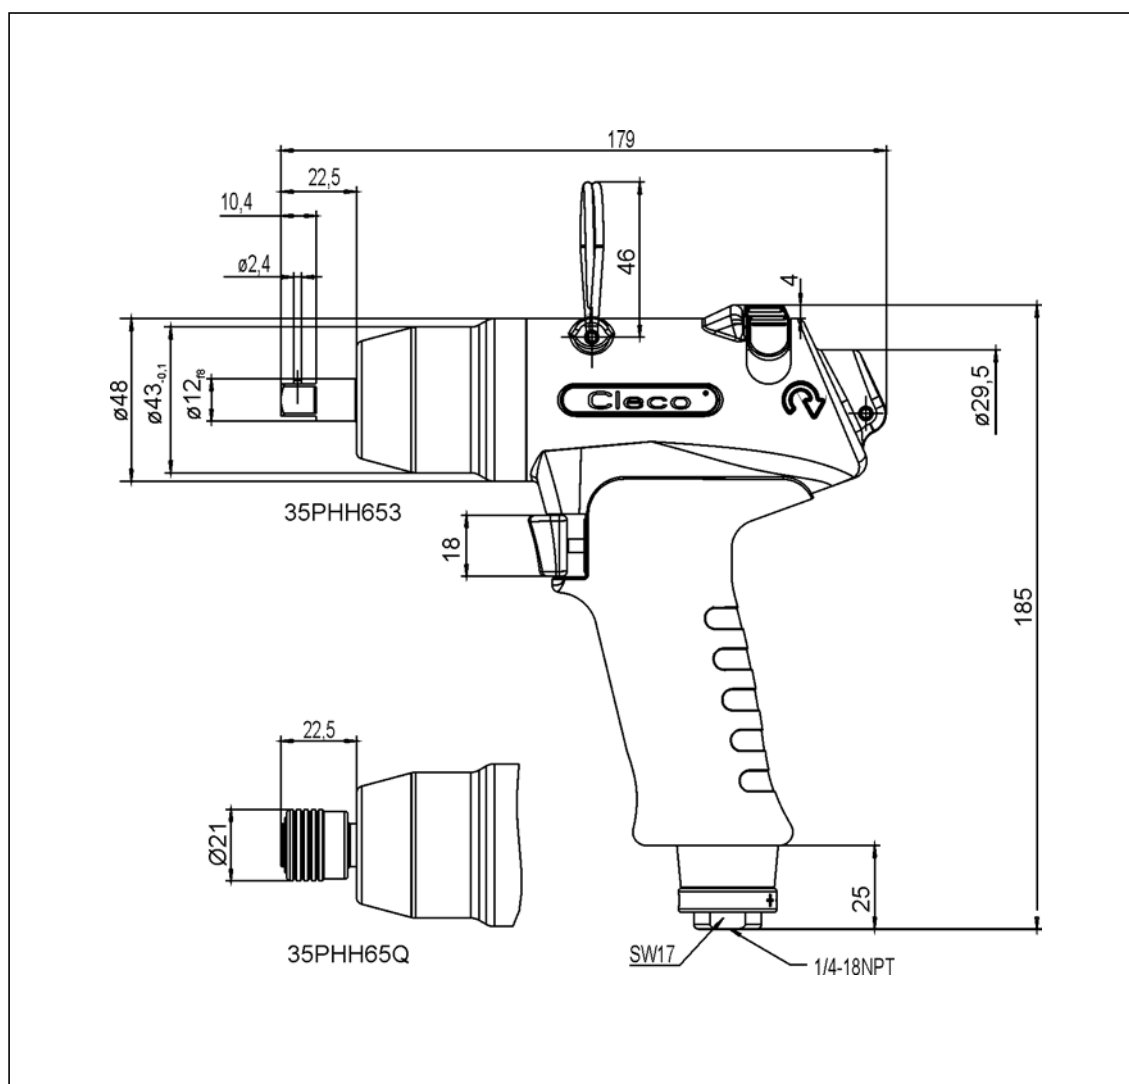


Abb. 9-1

9.2 Dimensions 35PHHA... in mm

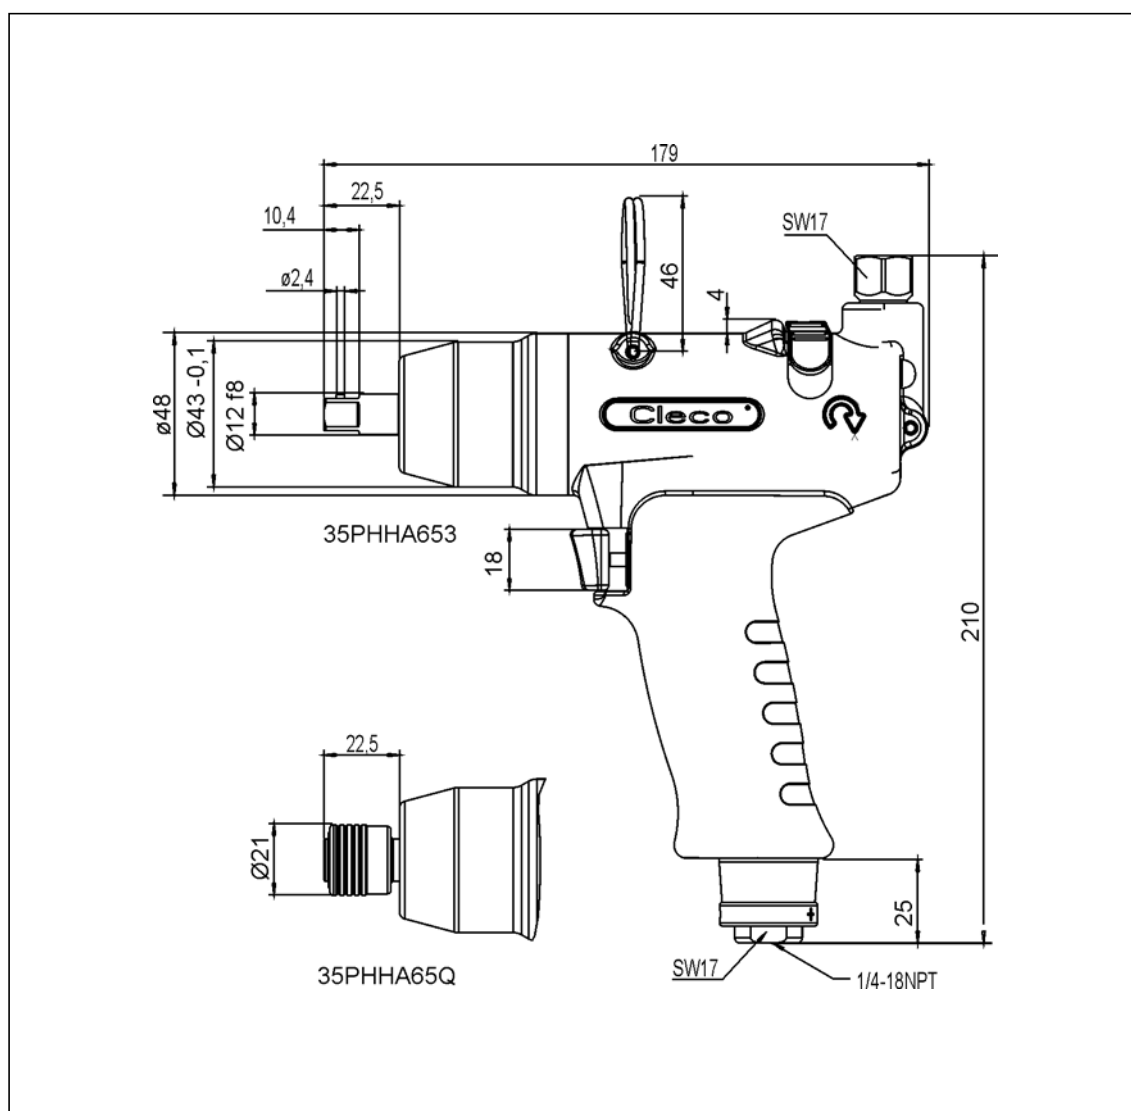





Abb. 9-2

9.3 Performance Data

Order no.		Recommended torque range		Idling speed			Air consumption	
		Nm					8.8	
		min.	max.		rpm	mm	kg	Idling
35PHH653 35PHHA653	■ 3/8"	20	35	6500	M8	1.02 1.07	< 0.55	< 0.45
35PHH65Q 35PHHA65Q	○ 1/4"					1.04 1.10		

9.4 Ambient conditions

Storage temperature	-25...+60 °C
Working temperature	+5...+40 °C
Permissible relative humidity	25...90%, non-condensing

10 Service

NOTE



In the event of repairs, send the complete 35PHH to Apex Tool Group. Repairs may only be carried out by authorized personnel. Opening the tool will invalidate the warranty.

11 Disposal

CAUTION!




Injuries and environmental damage from improper disposal.
The components and auxiliary materials of a machine incorporate risks to health and the environment.

- Catch auxiliary materials (oils, greases) when drained and dispose of them properly.
- Separate the machine parts by material and dispose of them properly.
- Separate the components of the packing and dispose of them by segregating them clearly.
- Wear suitable protective clothing at the time of disposal.
- Follow the general prevailing disposal guidelines.
- Follow the locally applicable regulations.

POWER TOOLS SALES & SERVICE CENTERS

Please note that all locations may not service all products.

Contact the nearest Apex Tool Group Sales & Service Center for the appropriate facility to handle your service requirements.

 Sales Center

 Service Center

NORTH AMERICA | SOUTH AMERICA

Detroit, Michigan

Apex Tool Group
2630 Superior Court
Auburn Hills, MI 48236
Phone: +1 (248) 393-5640
Fax: +1 (248) 391-6295

Lexington, South Carolina

Apex Tool Group
670 Industrial Drive
Lexington, SC 29072
Phone: +1 (800) 845-5629
Phone: +1 (919) 387-0099
Fax: +1 (803) 358-7681

Louisville, Kentucky

Apex Tool Group
1000 Glengarry Drive
Suite 150
Fairdale, KY 40118
Phone: +1 (502) 708-3400
apexpowertools.com/service

Canada

Apex Tool Canada, Ltd.
7631 Bath Road
Mississauga, Ontario L4T 3T1
Canada
Phone: (866) 691-6212
Fax: (905) 673-4400

Mexico

Apex Tool Group
Manufacturing México
S. de R.L. de C.V.
Vialidad El Pueblito #103
Parque Industrial Querétaro
Querétaro, QRO 76220
Mexico
Phone: +52 (442) 211 3800
Fax: +52 (800) 685 5560

Brazil

Apex Tool Group
Ind. Com. Ferram, Ltda.
Av. Liberdade, 4055
Zona Industrial Iporanga
Sorocaba, São Paulo
CEP# 18087-170
Brazil
Phone: +55 15 3238 3820
Fax: +55 15 3238 3938

EUROPE | MIDDLE EAST | AFRICA

England

Apex Tool Group GmbH
C/O Spline Gauges
Piccadilly, Tamworth
Staffordshire B78 2ER
United Kingdom
Phone: +44 1827 8727 71
Fax: +44 1827 8741 28

France

Apex Tool Group S.A.S.
25 rue Maurice Chevalier
B.P. 28
77831 Ozoir-La-Ferrière
Cedex, France
Phone: +33 1 64 43 22 00
Fax: +33 1 64 43 17 17

Germany

Apex Tool Group GmbH
Industriestraße 1
73463 Westhausen
Germany
Phone: +49 (0) 73 63 81 0
Fax: +49 (0) 73 63 81 222

Hungary

Apex Tool Group
Hungária Kft.
Platánfa u. 2
9027 Győr
Hungary
Phone: +36 96 66 1383
Fax: +36 96 66 1135

ASIA PACIFIC

Australia

Apex Tool Group
519 Nurigong Street, Albury
NSW 2640
Australia
Phone: +61 2 6058 0300

China

Apex Power Tool Trading
(Shanghai) Co., Ltd
2nd Floor, Area C
177 Bi Bo Road
Pu Dong New Area, Shanghai
China 201203 P.R.C.
Phone: +86 21 60880320
Fax: +86 21 60880298

India

Apex Power Tools India
Private Limited
Gala No. 1, Plot No. 5
S. No. 234, 235 & 245
Indialand Global
Industrial Park
Taluka-Mulsi, Phase I
Hinjawadi, Pune 411057
Maharashtra, India
Phone: +91 020 66761111

Japan

Apex Tool Group Japan
Korin-Kaikan 5F,
3-6-23 Shibakoen, Minato-Ku,
Tokyo 105-0011, JAPAN
Phone: +81-3-6450-1840
Fax: +81-3-6450-1841

Korea

Apex Tool Group Korea
#1503, Hibrand Living Bldg.,
215 Yangjae-dong,
Seocho-gu, Seoul 137-924,
Korea
Phone: +82-2-2155-0250
Fax: +82-2-2155-0252



Apex Tool Group, LLC

1000 Lufkin Road
Apex, NC 27539
Phone: +1 (919) 387-0099
Fax: +1 (919) 387-2614
www.apexpowertools.com